


Operating instructions

Supermarket cabinet

Read the operating instructions before switching on for the first time

Page 12

EN

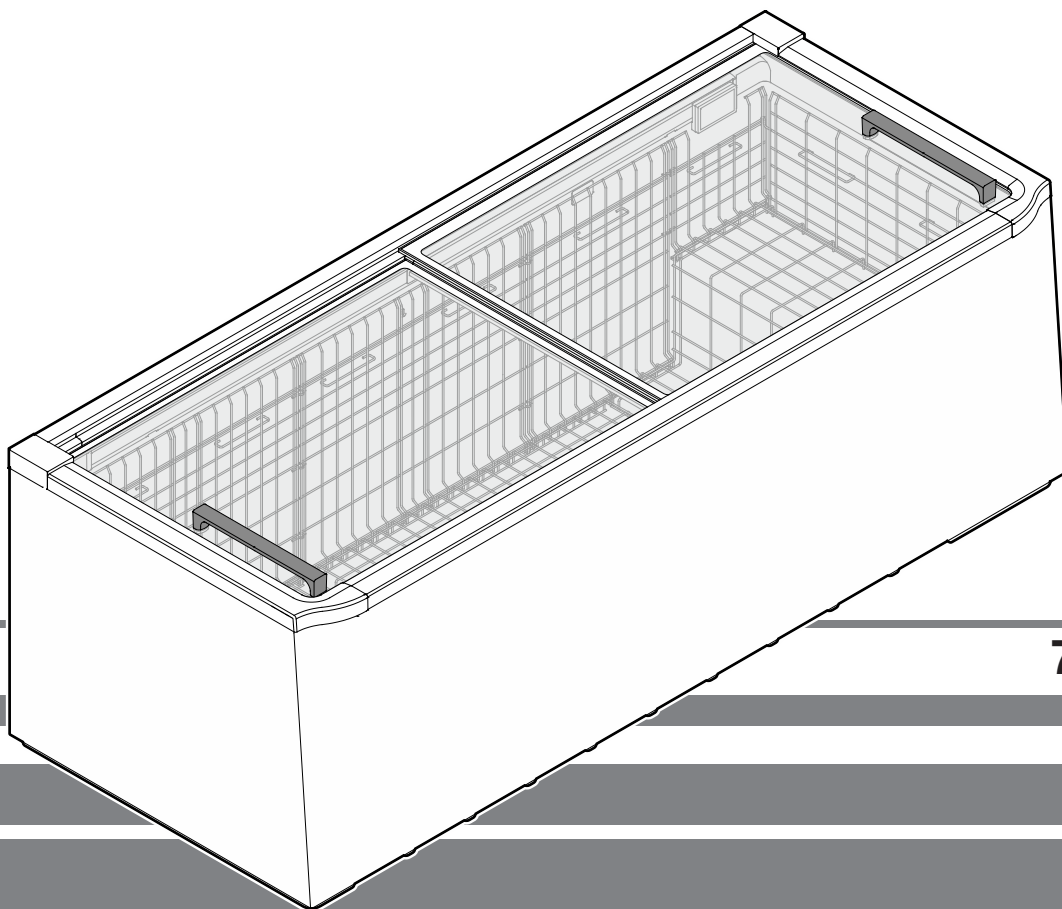

7083 120-01

LIEBHERR

Content

Range of appliance use.....	12
Appliance dimensions.....	12
EPREL database.....	12
Description of the appliance.....	12
Safety instructions and warnings.....	13
Disposal instructions for packaging material.....	13
Interior light.....	13
Climate rating.....	14
Noise emissions from the appliance.....	14
Display in indicating mode.....	14
Setup mode.....	14
Activating setup mode.....	14
Setting the real time clock.....	15
Changing the temperature setting.....	15
Activating the defrost function manually.....	15
Interior light.....	15
(depending on options).....	15
Malfunctions.....	16
Switching the appliance off.....	16
Switching the appliance on.....	16
Cleaning.....	16
Removing the lids.....	17
Fitting the lids.....	17
Removing the grids.....	17
Cleaning the interior.....	18
Inserting the grids.....	18
Customer service.....	20
Shutting down the appliance.....	20
Disposal notes.....	20
Additional information:.....	21

Range of appliance use

This appliance is only suitable for **storing food that has already been frozen**.

The appliance is not suitable for freezing fresh food.

Any misuse of the appliance may result in damage to or spoilage of stored goods.

Appliance dimensions


	Width [mm]	Height [mm]	Depth [mm]
SGTlow 1322	2500	902	1000


EPREL database

As from 1 March 2021, information about energy labelling and ecodesign requirements will be available in the European product database (EPREL). You can access the product database using the following link: <https://eprel.ec.europa.eu/>. You will be asked to enter the model identifier. You will find the model identifier on the type plate.

Description of the appliance

Stacking limit marking

The appliance may be filled up to the stacking limit marking .

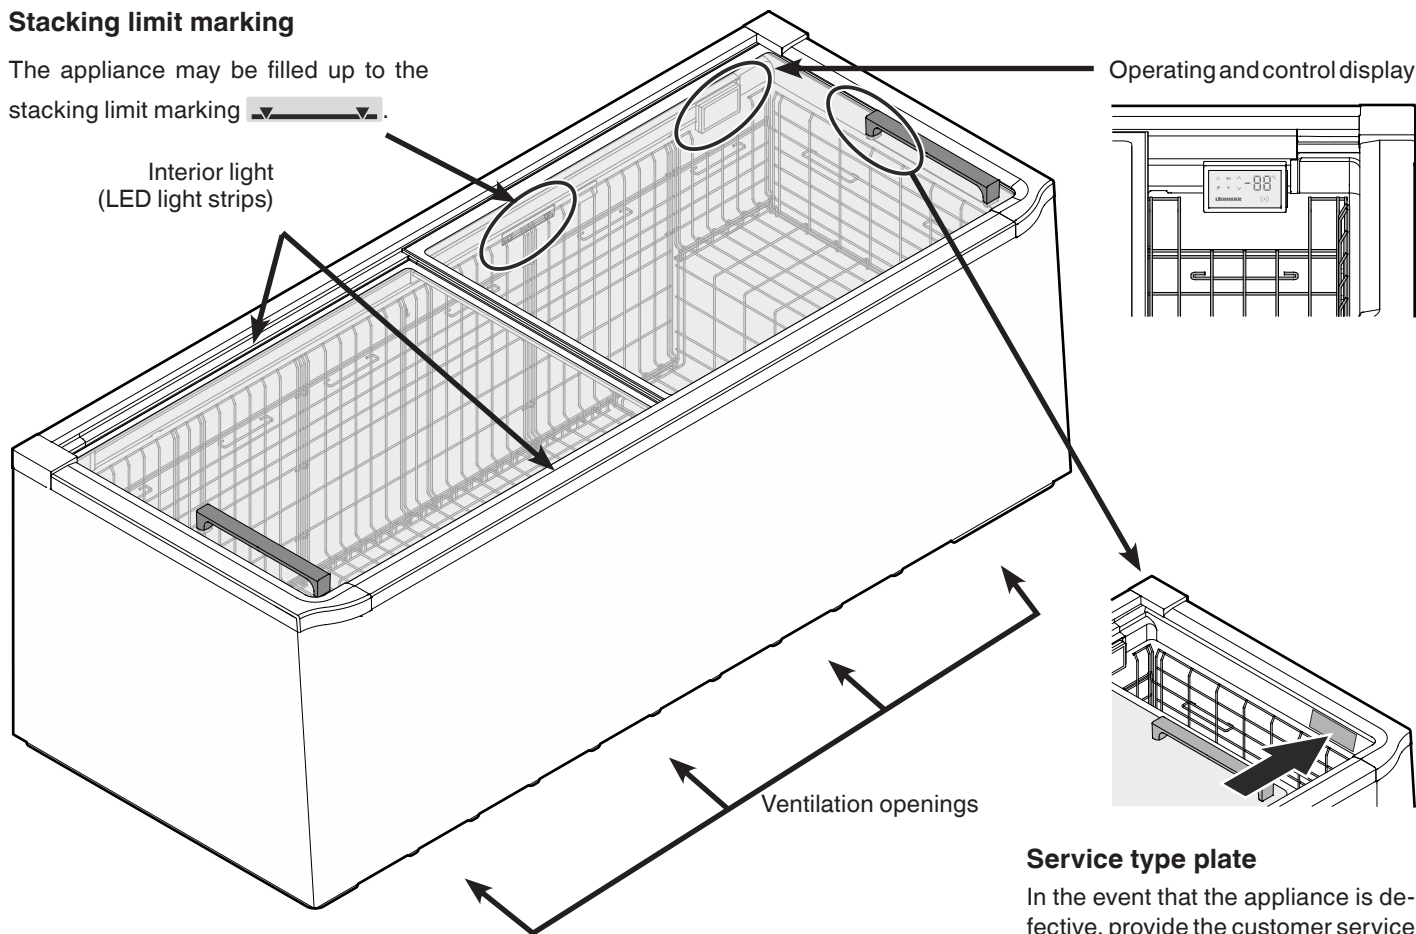

Important note

The ventilation openings on the front of the appliance must not be covered.


Service type plate

In the event that the appliance is defective, provide the customer service department with these details.

Modell: SGT 9999 Index 99/ E99
Service-Nr./No. Service: 9999999-00
Serien-Nr.: 99.999.999.9

Safety instructions and warnings

- **WARNING:** do not seal ventilation openings on the appliance housing or enclosure.
- **WARNING:** only use the mechanical devices or other aids recommended by the manufacturer to help speed up the defrosting process.
- **WARNING:** do not damage the refrigerant circuit.
- **WARNING:** the mains cable must not be damaged while installing the appliance.
- **WARNING:** multi-sockets or distributor strips and other electronic devices (such as halogen transformers) must not be positioned and operated at the rear of appliances.
- **WARNING:** danger of injury through electric shock. There are live parts under the cover. Only have the interior LED light replaced or repaired by customer service staff or trained personnel.
- **WARNING:** ensure that the refrigerant circuit pipes will not be damaged.
- **WARNING:** do not use any electrical devices inside the appliance.

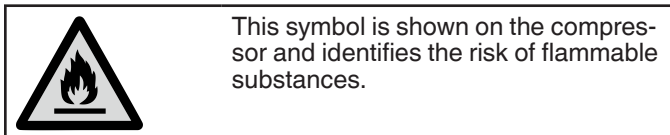

- If there is obvious transport damage on the appliance after it has been unpacked, contact the supplier. **Do not start the appliance.**
- Disconnect the appliance from the mains if any fault occurs. Trip the fuse upstream of the appliance. Transfer food to other appliances.
- Any repairs and work on the appliance should only be carried out by the customer service department, as unauthorised work could prove highly dangerous for the user. The same applies to changing the mains power cable.
- Do not allow naked flames or ignition sources to enter the appliance. When transporting and cleaning the appliance, ensure that the refrigerant circuit is not damaged. In the event of damage, make sure that there are no ignition sources nearby and keep the room well ventilated.
- Avoid prolonged skin contact with cold surfaces or chilled/frozen food. This could cause pain, numbness and frostbite. In the case of prolonged skin contact, protective measures should be taken, e.g. gloves should be worn.
- Do not store food whose use-by date has expired in the appliance. Eating such goods can cause food poisoning.

- Do not store explosive substances or spray cans with inflammable propellants in the appliance. Electrical components might cause leaking gas to ignite.
- The appliance is designed for use in enclosed areas. Do not operate the appliance outdoors or in areas where it is exposed to splash water or damp conditions.
- The LED light strips illuminate the interior of the appliance. They are not suitable for lighting a room.
- Do not place objects on the appliance and do not place heavy loads on the sliding glass lids. The lids could be damaged.

Disposal instructions for packaging material

WARNING

Danger of suffocation due to packing material and plastic film!

Do not allow children to play with packaging material.

Dispose of the packaging material in compliance with current regulations.

Interior light

The light intensity of the LED light corresponds to laser class 1/1M.

Important


The light cover may only be removed by customer service staff.

If the cover is removed, do not look directly at the light through optical lenses from close range. This can damage your eyes.

Climate class

The climate class [X] specifies the ambient conditions in which the appliance can be operated safely.

The climate class [Y] and temperature class [Z] define the maximum outline conditions in which the appliances will operate perfectly.

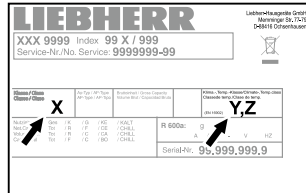

The climate rating is indicated on the type plate.

[X] Climate class	Max. room temperature	Max. relative humidity
3	25 °C	60 %
4	30 °C	55 %
5	40 °C	40 %
7	35 °C	75 %

The minimum room temperature at the place of installation is 10°C.

[Y] Climate class	Temperature [°C]	Relative humid- ity [%]
0	20	50
1	16	80
8	24	55
2	22	65
3	25	60
6	30	55
6	27	70
5	40	40
7	35	75

Recommended temperature setting:

[Z] Temperature class	Temperature setting [°C]
L1	-18
L2	-18
L3	-15
M0	+4
M*	6
M1	+5
M2	+7
H1	+10
H2	+10

Noise emissions from the appliance


 
The noise level while the appliance is operating is below 70 dB(A) (relative noise level 1 pW).

The appliance complies with the relevant safety regulations and EU Directives 2014/30/EU and 2006/42/EG.

Display in indicating mode

After being commissioned by the team of technicians, the display will be in indicating mode.

The display shows the current interior temperature.

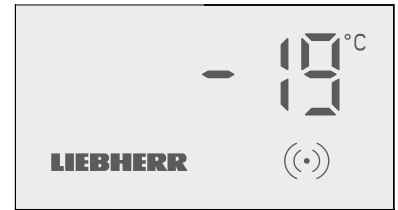


Important note

The goods must not be inserted until -18°C is shown in the display.


Setup mode

 The supplied release key is required to activate setup mode.




Activating setup mode

- Touch the activation point on the display with the release key.

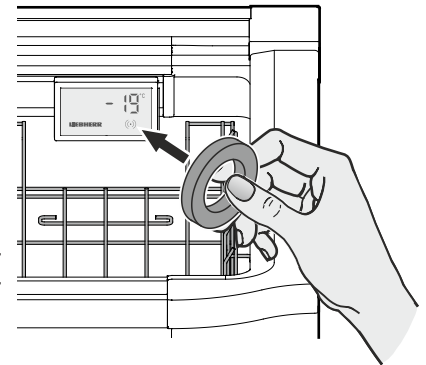

An audible warning signal will sound for 1 second.

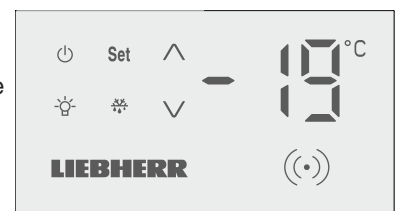
 

 
 







 



The operating symbols are displayed.

 

 

















Note

If no button is pressed for 2 minutes, the electronic control system will automatically switch back to indicating mode.

Setting the real time clock

- Activate setup mode using the release key 
- Press and hold the **Set** button for 5 seconds. Display = 
- Press . Display = 
- Press **Set**. Display =   ↔ 
- Set the hour by pressing the   buttons.
- Press **Set**. Display =   ↔ 
- Set the minute by pressing the   buttons.
- Press **Set**. The new setting will be saved.

The electronic control system will switch back to indicating mode.

- Press and hold the **Set** button for 5 seconds. Display = 
 - Press . Display = 
 - Press . Display = 
 - Press **Set**. Display =   ↔ 
 - Set the year by pressing the   buttons.
 - Press **Set**. Display =   ↔ 
 - Set the month by pressing the   buttons.
 - Press **Set**. Display =   ↔ 
 - Set the day by pressing the   buttons.
 - Press **Set**. The new setting will be saved.
- The electronic control system will switch back to indicating mode.

 

Changing the temperature setting

The desired temperature is set to -18°C.

It may be set to -23°C.

Depending on the customer's version, different control areas may be blocked or released.

Proceed as follows:

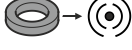- Activate setup mode using the release key 
- The current temperature inside the appliance is displayed.
- Press  → **-23** flashes.
 - Press **Set** → The new setting will be saved.

The electronic control system will switch back to indicating mode.

Note

Repeat these steps to reset the temperature to -18°C.

Press the  button instead of the  button.

 


Activating the defrost function manually


The appliance defrosts automatically.


Increased frost may form on the interior container in high ambient temperature and humidity.

In this case, activate the defrost function manually.

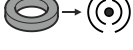Proceed as follows:

- Activate setup mode using the release key 
- Press  →  flashes.
- Press **Set** The defrosting process will be started.

The electronic control system will switch back to indicating mode. The LED  will be lit until the defrosting process is finished.

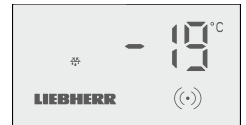




Interior light

(depending on options)

 Switch the interior light on or off as required.

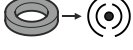Switching on the interior light

- Activate setup mode using the release key 
- Press  →  flashes.
- Press **Set** The interior light is switched on.


Note

Repeat these steps to switch off the interior light again.

Lighting	
Class ¹	Light source
SGTlow 1122: This product contains a light source that meets energy efficiency rating G	LED
SGTlow 1322: This product contains a light source that meets energy efficiency rating F	LED
¹ The appliance may contain light sources with different energy efficiency classes. The lowest energy efficiency class is indicated.	


Malfunctions

The release key symbol (dot) will flash in the event of a malfunction or if the appliance is defective.

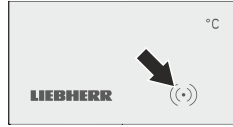

Proceed as follows::

 - Activate setup mode using the release key



Either a **flashing temperature display** or an **error code** will appear in the display.

Action to take if the temperature display is flashing

- First check whether the appliance lids are closed.

If the temperature falls after closing the lids, no further action is required.

If no drop in temperature is apparent after approx. 10 minutes:

- Transfer the goods immediately to other appliances.
- Notify the customer service department.

Action to take if an error code is displayed

Error code **F1, F2, F4 or F5**

The temperature sensor in the appliance is defective.

Action

- Notify the customer service department.

The goods can be left in the appliance since the temperature is maintained by the appliance being in emergency mode.

Error code **Ht**

The temperature inside the appliance is too high (warm).

Action

- Transfer the goods immediately to other appliances.
- Notify the customer service department.

Error code **nA**

 
A mains failure has occurred.

Action

- Press **Set** → The maximum (warmest) temperature during the mains failure is displayed.
- Decide whether the goods can be used depending on the level of the temperature rise.

Switching the appliance off

- Activate setup mode using the release key



- Press and hold the  button for 5 seconds.


The temperature display will go out.

The interior light will go out.

The release key symbol (dot) will still be lit to show that the appliance is connected to the electricity supply.



 
Important note

If the appliance has been switched off using the  button, the refrigeration system is switched off but the appliance has not been fully disconnected from the mains.

Before cleaning, always disconnect the appliance from the mains. Switch off the fuse.


Switching the appliance on

- Activate setup mode using the release key



Press the  button.

The display will show the current temperature inside the appliance.

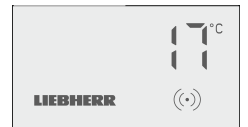

Cleaning

The appliance may only be cleaned by authorised, trained personnel.

Clean the appliance at least twice per year.

Do not use steam cleaning equipment to clean the appliance. This may cause damage or injuries.

Do not use acidic, highly alkaline or abrasive cleaning products.

Do not use chemical solvents.


Do not use abrasive cleaning cloths or sponges.

Use a damp cloth only around the electronic display. Ensure that no moisture gets into the electrical components.


Before cleaning, always disconnect the appliance from the mains. Switch off the fuse.

Removing the lids


- Slide the lid in by approx. 10 cm.

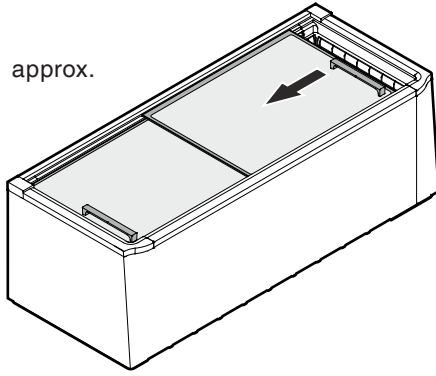

- Raise the lid at the rear and slide it backwards.

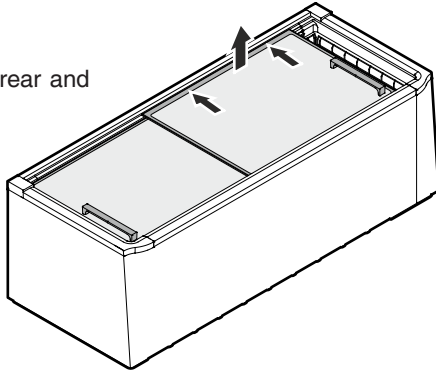


- Raise the lid at the front and remove it towards you.

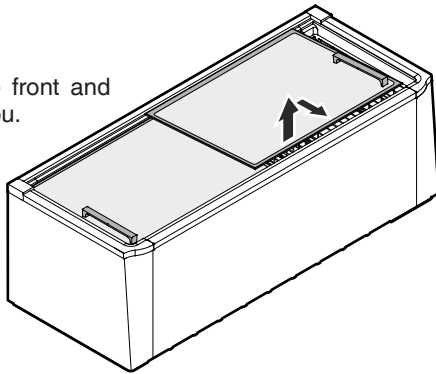

- Clean the glass surfaces with glass cleaner. Clean the handles and plastic strips with water and detergent. Then dry the lids.

Fitting the lids



- Insert the bottom lid at an angle into the bottom guide.

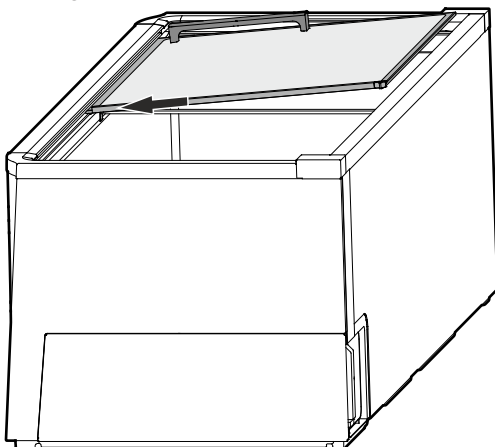



- Insert the top lid into the top guide using the same procedure.

Removing the grids

- Remove the grids in the sequence shown below.

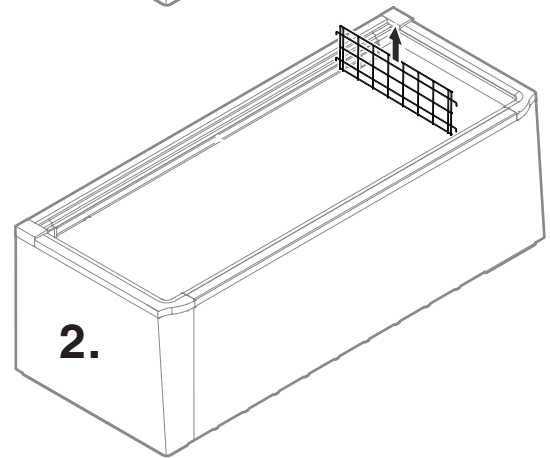
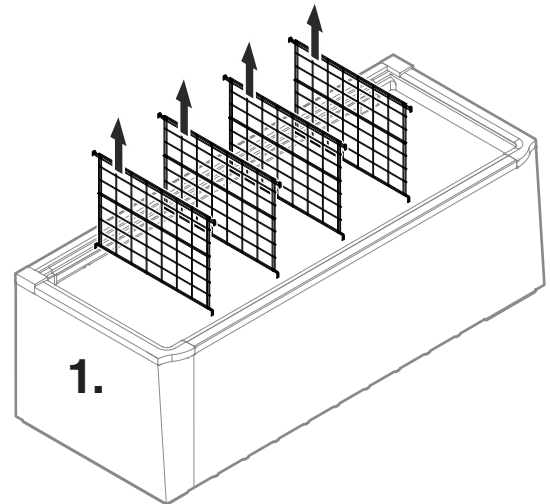


Optional

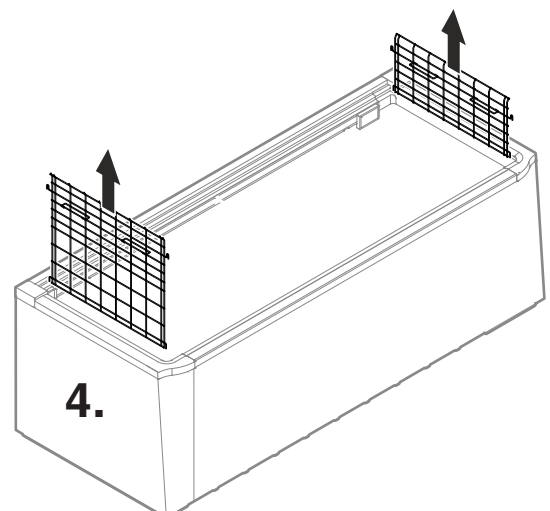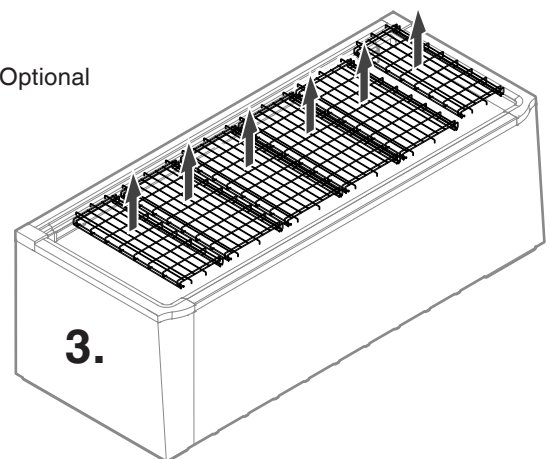

Inserting the grids


1. Depending on the appliance type, assemble the front and rear grids in the sequence shown below.

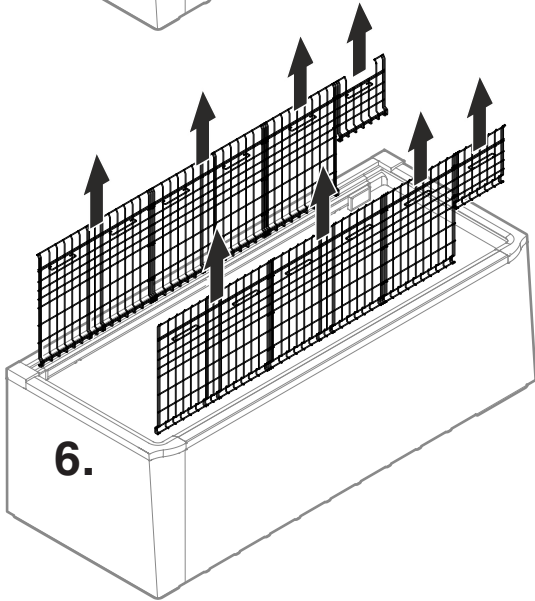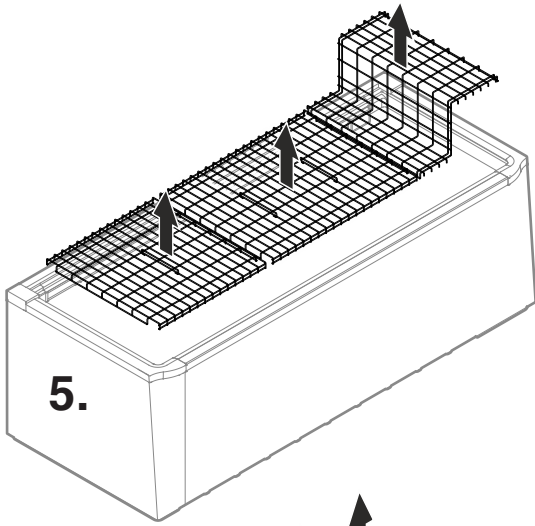

- Clean the grids with water and detergent, then dry them.


Cleaning the interior

- Remove the frost from the interior container walls using the supplied ice scraper.


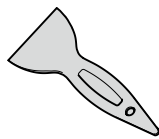


- Clean the interior container walls.


- Clean the defrost drain gully.

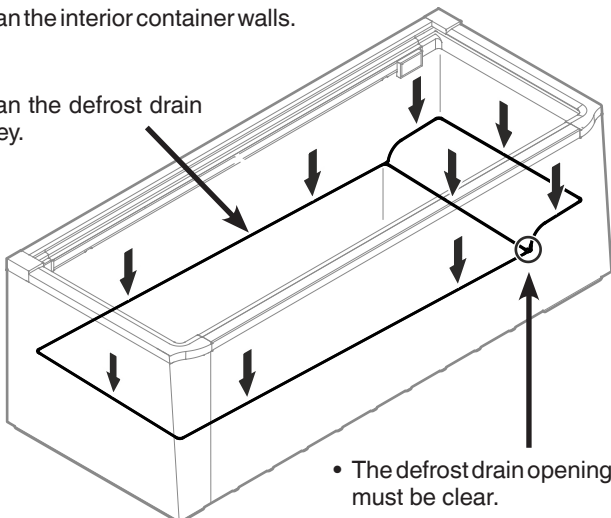


- Dry the interior of the appliance.

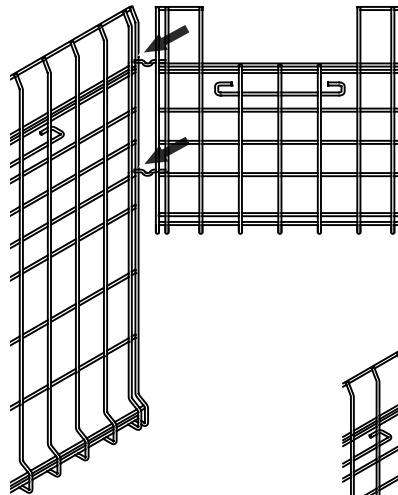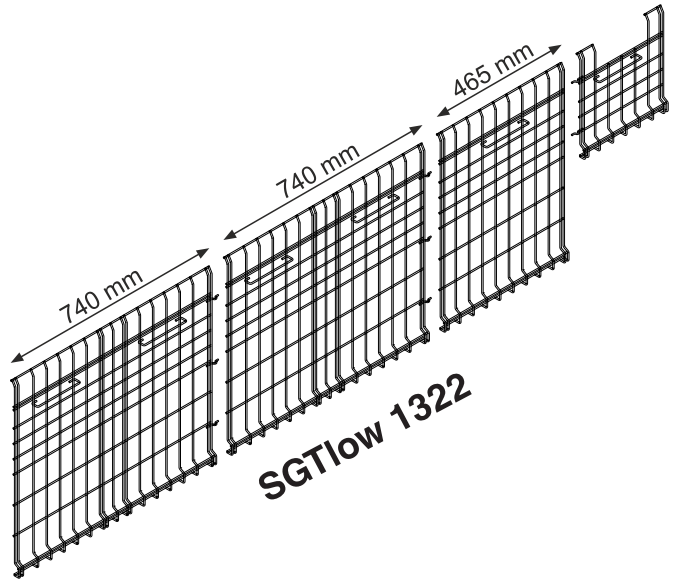

- Angle the grid and insert it with the hooks.

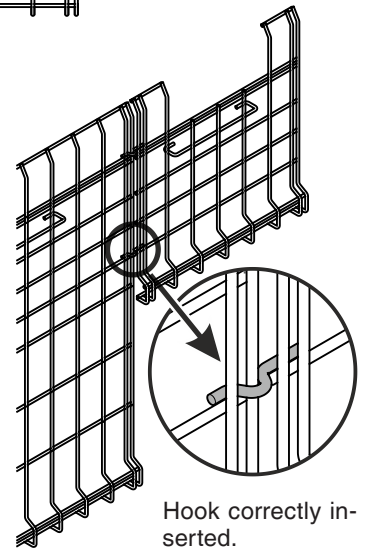


2. Fit the front and rear grids.


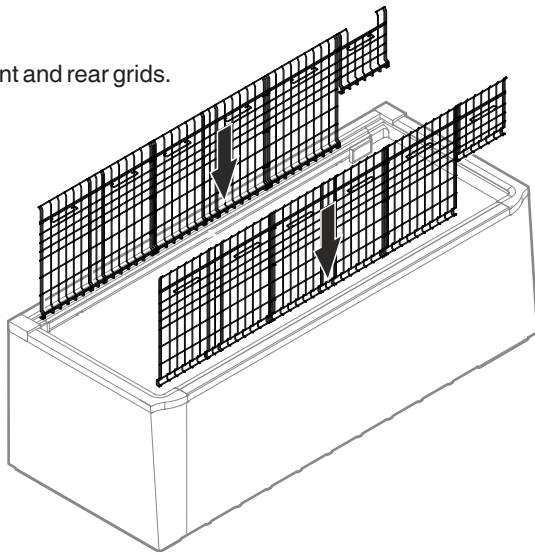


3. Fit the base grids.

Fit the shorter base grid on the left-hand side.

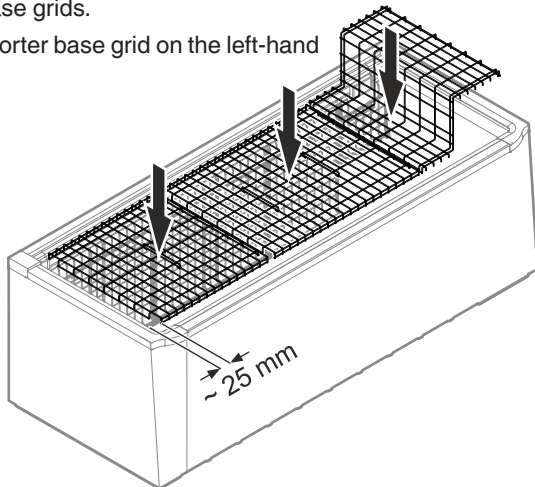

5. Optional: Fit the storage grids at the required height.

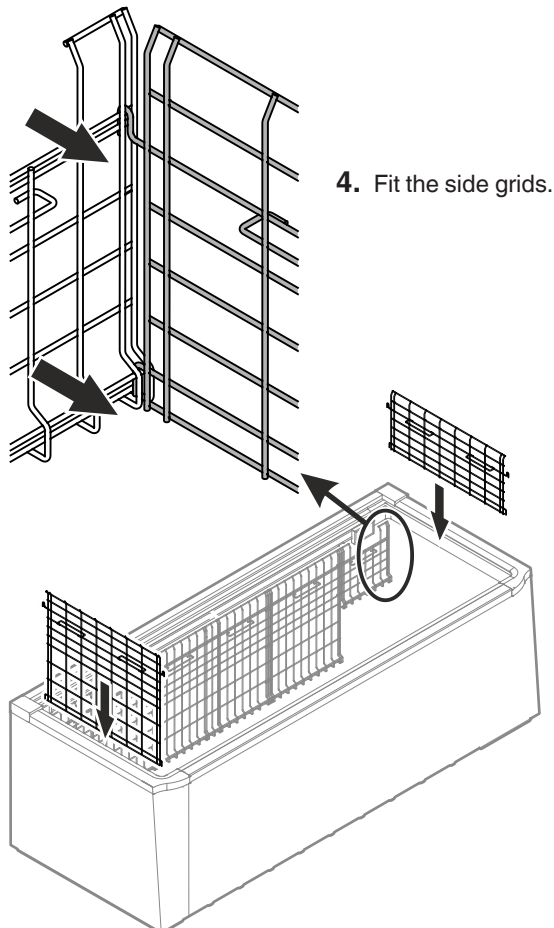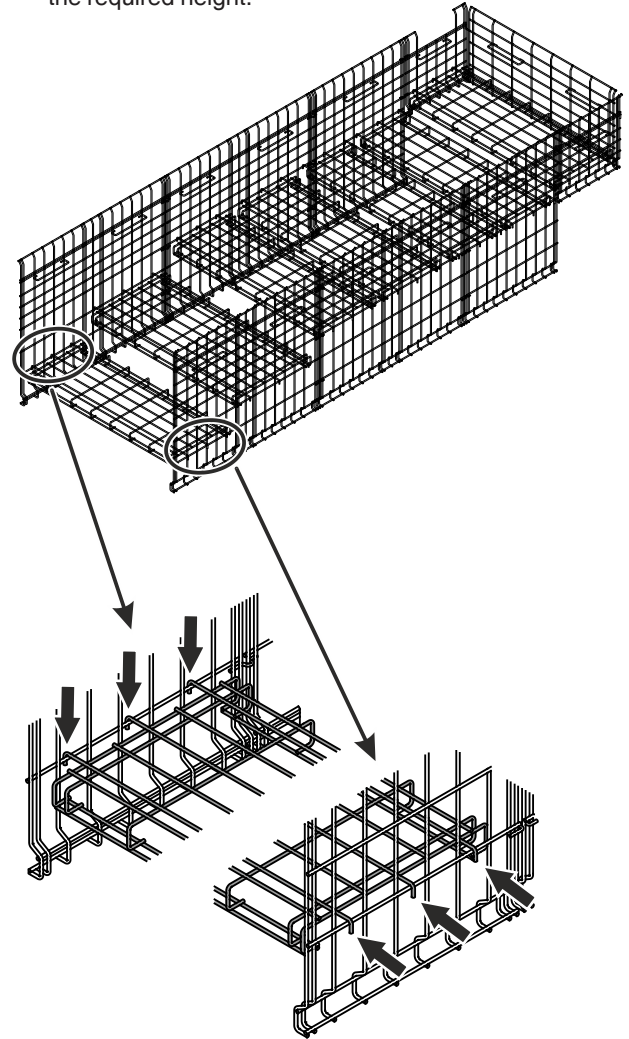


4. Fit the side grids.


6. Fit the storage grids in the specified sequence depending on the appliance type.

To fit the correct grid, the relevant width of the storage grids is shown in the illustration below.


Distance between the storage grids: approx. 35 mm.

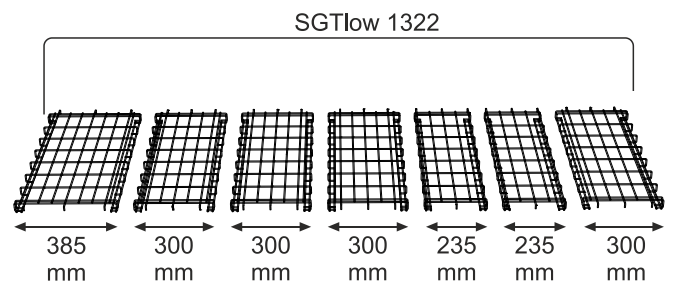

7. Fit the partitions between two storage grids.

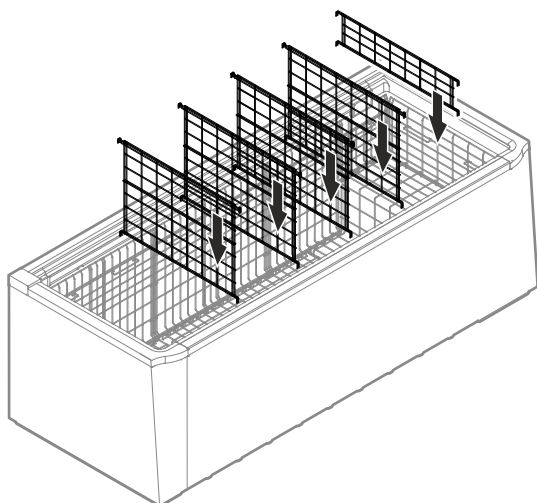

Detailed view of the correctly fitted partition

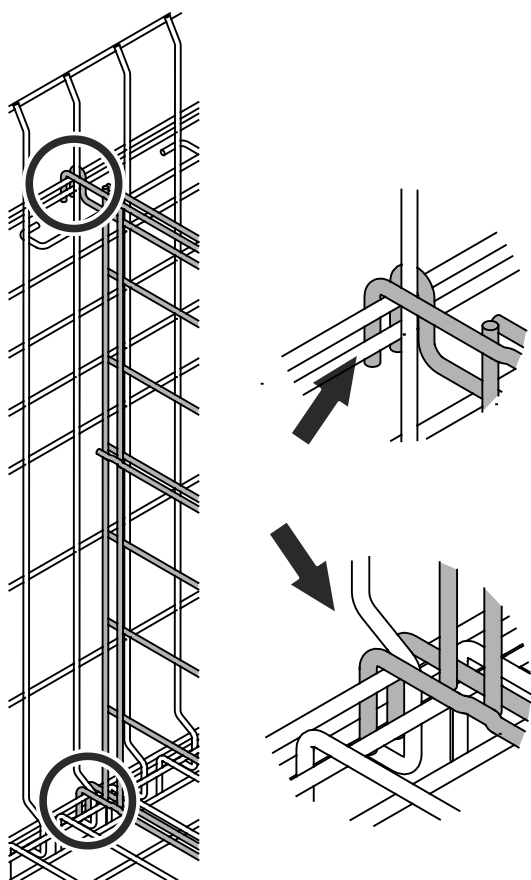

Customer service

If the appliance suffers a malfunction:

- Transfer the stored goods to other appliances.
- Switch off the appliance.
See section entitled **Switching the appliance off**.
- Disconnect the appliance from the mains > switch off the fuse.
- Notify the customer service department quoting the appliance details.

The appliance details are shown on the service type plate.

The position of the service type plate is shown in the section entitled **Description of the appliance**.

Shutting down the appliance

If the appliance is shut down for a lengthy period of time:

Switch off the fuse.

Clean the appliance and leave the lids open to prevent odour formation.

Disposal notes

The appliance contains reusable materials and should be disposed of properly - not simply with unsorted household refuse.



Appliances which are no longer needed must be disposed of in a professional and appropriate way, in accordance with the current local regulations and laws.

When disposing of the appliance, ensure that the refrigerant circuit is not damaged to prevent uncontrolled escape of the refrigerant it contains (data on type plate) and oil.

Additional information:

- Food will remain fresh for longer if stored at the correct temperature. This can prevent having to discard food needlessly.
- If the condenser coil is not cleaned every year, it will significantly reduce the appliance's efficiency.
- The period during which spare parts, necessary for the repair of the refrigerating appliance with a direct sales function, are available is 10 years.
- The minimum duration of the guarantee of the refrigerating appliance with a direct sales function offered by the manufacturer, importer or authorised representative is 2 years.



Liebherr Hausgeräte Lienz GmbH
Dr.-Hans-Liebherr-Strasse 1
A-9900 Lienz
Österreich
www.liebherr.com

