

# Operating and installation instructions



[home.liebherr.com/  
fridge-manuals](https://home.liebherr.com/fridge-manuals)

LIEBHERR

EN

ORIGINAL OPERATOR'S MANUAL

**LIEBHERR**

# Contents

|                                                                                     |                                                              |           |                                                                                     |                                                  |           |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------|-----------|-------------------------------------------------------------------------------------|--------------------------------------------------|-----------|
| <b>1</b>                                                                            | <b>Safety information and warnings.....</b>                  | <b>3</b>  |    | PartyMode .....                                  | 25        |
| 1.1                                                                                 | Intended use.....                                            | 3         |    | SabbathMode.....                                 | 26        |
| 1.2                                                                                 | Climate classes.....                                         | 3         |    | EnergySaver .....                                | 26        |
| 1.3                                                                                 | User group.....                                              | 3         |    | IceMaker / MaxIce .....                          | 27        |
| 1.4                                                                                 | Installation and commissioning.....                          | 3         |    | IceMaker water supply.....                       | 28        |
| 1.5                                                                                 | Safe handling of the appliance.....                          | 4         |    | TubeClean .....                                  | 28        |
| 1.6                                                                                 | Cleaning.....                                                | 4         |    | Input lock.....                                  | 28        |
| 1.7                                                                                 | Faults, damage and repairs.....                              | 4         |    | Reminder.....                                    | 29        |
| 1.8                                                                                 | Disposal.....                                                | 4         |    | Language.....                                    | 29        |
| 1.9                                                                                 | Conformity.....                                              | 4         |    | Temperature unit.....                            | 29        |
| 1.10                                                                                | SVHC substances in accordance with the REACH Regulation..... | 4         |    | Status light (status display)* .....             | 30        |
| 1.11                                                                                | EPREL database.....                                          | 4         |    | Display brightness.....                          | 30        |
| 1.12                                                                                | Open source licences.....                                    | 4         |   | WiFi.....                                        | 30        |
| 1.13                                                                                | Spare parts.....                                             | 4         |  | Device information.....                          | 31        |
| 1.14                                                                                | Symbols on the appliance.....                                | 5         |  | Software.....                                    | 32        |
| 1.15                                                                                | Warning levels.....                                          | 5         |  | Start defrosting cycle.....                      | 32        |
| <b>2</b>                                                                            | <b>Appliance at a glance.....</b>                            | <b>5</b>  |  | Door alarm.....                                  | 32        |
| 2.1                                                                                 | Scope of delivery.....                                       | 5         |  | Demo mode.....                                   | 32        |
| 2.2                                                                                 | Overview of appliances and equipment.....                    | 5         |  | Resetting to factory settings.....               | 33        |
| 2.3                                                                                 | SmartDevice.....                                             | 5         |  | Messages.....                                    | 34        |
| <b>3</b>                                                                            | <b>Setting up and connecting.....</b>                        | <b>6</b>  |  | Overview of warnings.....                        | 34        |
| 3.1                                                                                 | Installation requirements.....                               | 6         |  | Ending warnings.....                             | 34        |
| 3.2                                                                                 | Integration into a kitchen unit.....                         | 6         |  | Overview of reminders.....                       | 35        |
| 3.3                                                                                 | Appliance dimensions.....                                    | 6         |  | Ending reminders.....                            | 35        |
| 3.4                                                                                 | Ventilation requirements.....                                | 7         |  | Features.....                                    | 35        |
| 3.5                                                                                 | Connection dimensions for the power supply.....              | 7         | 9.1                                                                                 | Drawers.....                                     | 35        |
| 3.6                                                                                 | Water connection.....                                        | 7         | 9.2                                                                                 | Pull-out board with IceTower.....                | 37        |
| 3.7                                                                                 | Transporting the appliance.....                              | 8         | 9.3                                                                                 | Glass shelves.....                               | 38        |
| 3.8                                                                                 | Unpacking the appliance.....                                 | 8         | 9.4                                                                                 | IceMaker.....                                    | 39        |
| 3.9                                                                                 | Explanation of symbols used.....                             | 8         | 9.5                                                                                 | VarioSpace.....                                  | 39        |
| 3.10                                                                                | Door hinge change.....                                       | 9         | 9.6                                                                                 | Freezer pack.....                                | 39        |
| 3.11                                                                                | Connecting the appliance to the water supply.....            | 17        | <b>10</b>                                                                           | <b>Maintenance.....</b>                          | <b>39</b> |
| 3.12                                                                                | Mounting wall spacers*.....                                  | 18        | 10.1                                                                                | Disassembling / assembling pull-out systems..... | 39        |
| 3.13                                                                                | Setting up the appliance.....                                | 18        | 10.2                                                                                | Defrosting the appliance.....                    | 41        |
| 3.14                                                                                | Setting up the appliance so that it is level.....            | 18        | 10.3                                                                                | Cleaning the appliance.....                      | 41        |
| 3.15                                                                                | After setting up.....                                        | 18        | <b>11</b>                                                                           | <b>Customer help.....</b>                        | <b>42</b> |
| 3.16                                                                                | Installing multiple appliances.....                          | 18        | 11.1                                                                                | Technical specifications.....                    | 42        |
| 3.17                                                                                | Integrating the appliance into a kitchen unit.....           | 19        | 11.2                                                                                | Operating noises.....                            | 43        |
| 3.18                                                                                | Disposing of packaging.....                                  | 20        | 11.3                                                                                | Technical fault.....                             | 43        |
| 3.19                                                                                | Connecting the appliance to the power supply.....            | 20        | 11.4                                                                                | Customer Service.....                            | 44        |
| <b>4</b>                                                                            | <b>Functionality of the Touch &amp; Swipe display.....</b>   | <b>20</b> | 11.5                                                                                | Model plate.....                                 | 45        |
| 4.1                                                                                 | Navigation and symbol explanation.....                       | 20        | <b>12</b>                                                                           | <b>Shutting down.....</b>                        | <b>45</b> |
| 4.2                                                                                 | Menus.....                                                   | 21        |                                                                                     |                                                  |           |
| 4.3                                                                                 | Sleep mode.....                                              | 21        |                                                                                     |                                                  |           |
| <b>5</b>                                                                            | <b>Putting into operation.....</b>                           | <b>21</b> |                                                                                     |                                                  |           |
| 5.1                                                                                 | Switching on appliance (first use).....                      | 21        |                                                                                     |                                                  |           |
| 5.2                                                                                 | Starting the IceMaker for the first time.....                | 22        |                                                                                     |                                                  |           |
| <b>6</b>                                                                            | <b>Storage.....</b>                                          | <b>22</b> |                                                                                     |                                                  |           |
| 6.1                                                                                 | Information regarding storage.....                           | 22        |                                                                                     |                                                  |           |
| 6.2                                                                                 | Freezer compartment.....                                     | 22        |                                                                                     |                                                  |           |
| 6.3                                                                                 | Storage times.....                                           | 23        |                                                                                     |                                                  |           |
| <b>7</b>                                                                            | <b>Saving energy.....</b>                                    | <b>23</b> |                                                                                     |                                                  |           |
| <b>8</b>                                                                            | <b>Controls.....</b>                                         | <b>23</b> |                                                                                     |                                                  |           |
| 8.1                                                                                 | Controls and displays.....                                   | 23        |                                                                                     |                                                  |           |
| 8.1.1                                                                               | Status display.....                                          | 23        |                                                                                     |                                                  |           |
| 8.1.2                                                                               | Display symbols.....                                         | 23        |                                                                                     |                                                  |           |
| 8.2                                                                                 | Appliance functions.....                                     | 24        |                                                                                     |                                                  |           |
| 8.2.1                                                                               | Notes on the appliance functions.....                        | 24        |                                                                                     |                                                  |           |
|                                                                                     | Switching the appliance off and on.....                      | 24        |                                                                                     |                                                  |           |
|  |                                                              |           |                                                                                     |                                                  |           |
|  | Temperature.....                                             | 24        |                                                                                     |                                                  |           |
|  | SuperFrost.....                                              | 24        |                                                                                     |                                                  |           |

|           |                                                                       |           |
|-----------|-----------------------------------------------------------------------|-----------|
| <b>13</b> | <b>Disposal.....</b>                                                  | <b>45</b> |
| 13.1      | Preparing the appliance for disposal.....                             | 45        |
| 13.2      | Disposing of the appliance in an environmentally friendly manner..... | 45        |

The manufacturer is continually working on the further development of all types and models. Please be aware that we reserve the right to make changes to the shape, equipment and technology.

| Symbol | Explanation                                                                                                                                                                                                                                                                                                                                                                                                |
|--------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|        | <b>Read instructions</b><br>Please read the information in these instructions carefully to understand all of the benefits of your new appliance.                                                                                                                                                                                                                                                           |
|        | <b>Additional information on the Internet</b><br>The digital manual with additional information and in other languages can be found via the QR code on the front of the manual or by entering the service number at <a href="http://home.liebherr.com/fridge-manuals">home.liebherr.com/fridge-manuals</a> .<br>The service number can be found on the serial tag:<br><br><i>Fig. Example illustration</i> |
|        | <b>Check appliance</b><br>Check all parts for transport damage. If you have any complaints, please contact your agent or customer service.                                                                                                                                                                                                                                                                 |
|        | <b>Differences</b><br>These instructions apply to a range of models, so differences are possible. Sections that apply to certain models only are marked with an asterisk (*).                                                                                                                                                                                                                              |
|        | <b>Instructions and results</b><br>Instructions are marked with a ►.<br>Results are marked with a ▷.                                                                                                                                                                                                                                                                                                       |
|        | <b>Videos</b><br>Videos about the appliances are available on the YouTube channels of Liebherr-Hausgeräte.                                                                                                                                                                                                                                                                                                 |

## Open source licences:

The appliance contains software components that use open source licences. Information on the open source licences used can be found here: [home.liebherr.com/open-source-licences](http://home.liebherr.com/open-source-licences)

This user information applies to the following appliances:

|       |      |
|-------|------|
| SFN.. | 52.. |
|-------|------|

## Note

If your appliance has an N in its appliance designation, it is a NoFrost appliance.

# 1 Safety information and warnings

Keep this user information in a safe place so that you can refer to it at any time.

If you pass on the appliance, pass this user information on to subsequent owners.

To use the appliance properly and safely, read this user information carefully before installation and use. Always follow the instructions, safety instructions and warnings contained therein. They are important so that you can install and operate the appliance safely and properly.

## 1.1 Intended use

This appliance is intended for household use and similar applications such as:

- in staff kitchen areas in shops, offices and other work areas
- in agricultural environments and by guests in hotels, motels and other accommodation
- in bed and breakfasts
- in catering and similar wholesale operations

All other types of application are impermissible.

## 1.2 Climate classes

Depending on its climate class, the appliance is designed for operation within certain ambient temperature limits. The climate class for your appliance is printed on the type plate.

### Note

- In order to guarantee fault-free operation comply with the specified ambient temperatures.

| Climate class | for ambient temperatures from |
|---------------|-------------------------------|
| SN            | 10 °C to 32 °C                |
| N             | 16 °C to 32 °C                |
| ST            | 16 °C to 38 °C                |
| T             | 16 °C to 43 °C                |
| SN-ST         | 10 °C to 38 °C                |
| SN-T          | 10 °C to 43 °C                |

## 1.3 User group

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children must not play with the appliance.
- Children must not carry out cleaning and user maintenance without supervision.
- Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.

## 1.4 Installation and commissioning

- Only set up and connect the appliance in accordance with the instructions in the user information.
- Do not close the ventilation openings in the appliance housing or in the installation housing.
- Do not damage the mains cable. The appliance must not be operated with a defective mains cable.
- Do not place portable multiple sockets or power supply units at the rear of the appliance.
- It must be easy to access the socket so that the appliance can be quickly disconnected from the power supply in case of an emergency. It must not be behind the appliance.

# Safety information and warnings

Appliances with fixed water connection:

- Only connect the fixed water connection to the drinking water supply to avoid poisoning from contaminated water.
- Only connect the appliance to the drinking water supply using the new hose set supplied with the appliance. Do not reuse old hose sets, dispose of them instead.

## 1.5 Safe handling of the appliance

- Do not store any explosive substances, such as aerosol containers with flammable propellant gas, in the appliance. These types of aerosol can be identified by the list of contents printed on it, or by a flame symbol. Any leaking gas may ignite due to electrical parts.
- Keep burning candles, lamps and other objects with naked flames away from the appliance, so that these do not set fire to the appliance.
- Alcoholic beverages and other containers bearing alcohol must be sealed tight for storage. Any leaking alcohol may ignite due to electrical parts.
- Avoid prolonged skin contact with cold surfaces or with cold/frozen food. Use gloves for protection, for example.
- The refrigerant contained (information on the type plate) is environmentally friendly but flammable. Leaking refrigerant may ignite.
  - Do not damage the refrigeration circuit.
  - Do not use any ignition sources inside the appliance.
  - Do not use electrical appliances inside the appliance (e.g. steam cleaners, heaters).
  - If the refrigerant leaks: remove any naked flames or ignition sources from the vicinity of the leakage point. Properly air the room. Inform customer service.
- Only open the door for a short time. This prevents the temperature inside the appliance from rising.
- Do not reach between the door and the appliance when opening and closing. Fingers may become trapped.
- The temperature in the warmest part of the appliance may be higher than the set temperature.

## 1.6 Cleaning

- Regularly clean surfaces that come into contact with food.
- Do not use an electric heater or steam cleaner, naked flames or defrost spray to speed up the defrosting process.
- Do not remove the ice with sharp objects.

## 1.7 Faults, damage and repairs

- If the mains connection cable of the appliance is damaged, replace the mains connection cable.
- Repairs and interventions on the appliance may only be carried out by the customer service or by other qualified personnel trained for this purpose.
- In the event of malfunctions and appliance faults, pull out the mains plug or switch off the fuse. Always hold the plug when pulling out the mains plug. Never tug on the cable.

## 1.8 Disposal

- The appliance contains valuable materials and is marked with the appropriate symbol. (see 1.14 Symbols on the appliance)
  - Do not dispose of the appliance in the household waste.
  - Dispose of the appliance free of charge at your local recycling centre using the Class 1 collection containers.

- When purchasing a new appliance, return the old appliance to the retailer free of charge.
- Provide information about return options.
- Your appliance may contain personal data.
  - Delete personal data before disposal.
- The appliance contains refrigerant (information on the type plate) and oil. The refrigerant inside the appliance is environmentally friendly, but flammable. The oil it contains is also flammable. Escaping refrigerant and oil can ignite in high concentrations and in contact with an external heat source.
  - Do not damage the refrigeration circuit.
  - Only dispose of the appliance in accordance with the instructions in the user information.

## 1.9 Conformity

The coolant circuit has been tested for leak-tightness. The appliance complies with the relevant safety regulations and directives.

For the EU market: The appliance complies with Directive 2014/53/EU.

For GB market: The appliance complies with the Radio Equipment Regulations 2017 SI 2017 No. 1206.

The full text of the EU Declaration of Conformity is available at the following web address: [www.liebherr.com](http://www.liebherr.com)

## 1.10 SVHC substances in accordance with the REACH Regulation

You can use the following link to check whether your appliance contains SVHC substances in accordance with the REACH Regulation:

[home.liebherr.com/en/en/liebherr-experience/sustainability/environment/scip/scip.html](http://home.liebherr.com/en/en/liebherr-experience/sustainability/environment/scip/scip.html)

## 1.11 EPREL database

From 1 March 2021, the information on energy labelling and eco-design requirements will be available in the European product database (EPREL). The product database can be accessed via the following link <https://eprel.ec.europa.eu/>. Here, you are asked to enter the model identifier. You will find the model identifier on the type plate.

## 1.12 Open source licences

The appliance contains software components that use open source licences. Information on the open source licences used can be found here:

[home.liebherr.com/open-source-licences](http://home.liebherr.com/open-source-licences)

## 1.13 Spare parts

The spare parts availability for functional parts and stockable parts of the equipment is 15 years.

## 1.14 Symbols on the appliance

|  |                                                                                                                                                                                                                                                                                                                 |
|--|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | This symbol may be found on the compressor. It pertains to the oil in the compressor and indicates the following danger: Can be fatal if swallowed or with penetration of the respiratory tract. This information is only significant for recycling. No risk exists with normal use. Do not remove this symbol. |
|  | Warning: Fire hazard due to flammable substances. This symbol is located on the compressor and can also be found in other places on the appliance. This symbol warns of flammable substances. Do not remove this symbol.                                                                                        |
|  | This or a similar symbol may be on the rear of the appliance. It indicates that there are vacuum insulation panels (VIP) or perlite panels in the door and/or housing. This information is only significant for recycling. Do not remove this symbol.                                                           |
|  | This symbol is located on the type plate. It indicates that the appliance contains valuable materials and that you must not dispose of it with household waste. (see 1.8 Disposal)                                                                                                                              |

## 1.15 Warning levels

|                  |                |                                                                                                                            |
|------------------|----------------|----------------------------------------------------------------------------------------------------------------------------|
|                  | <b>DANGER</b>  | Identifies an immediately dangerous situation that will result in death or serious bodily injuries if it is not prevented. |
|                  | <b>WARNING</b> | Identifies a dangerous situation that could result in death or serious bodily injury if it is not prevented.               |
|                  | <b>CAUTION</b> | Identifies an immediately dangerous situation that could result in slight or moderate injuries if it is not prevented.     |
| <b>ATTENTION</b> |                | Identifies a hazardous situation that could result in property damage if it is not prevented.                              |
| <b>Note</b>      |                | Identifies useful information and tips.                                                                                    |

## 2 Appliance at a glance

### 2.1 Scope of delivery

Check all parts for transport damage. Contact your dealer or customer service in the event of complaints. (see 11.4 Customer Service)

Your new appliance comes with the following parts:

- Standalone appliance
- Features (depending on the model)
- Installation materials (depending on the model)
- "Quick Start Guide"
- Service Brochure

## 2.2 Overview of appliances and equipment

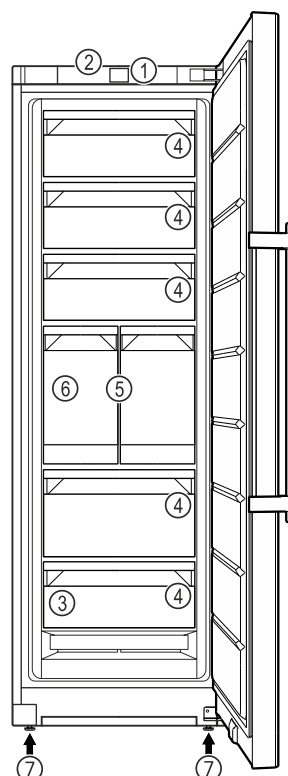


Fig. 1 Example illustration

- |                                    |                     |
|------------------------------------|---------------------|
| (1) Controls                       | (5) IceTower        |
| (2) Status light (status display)* | (6) IceMaker        |
| (3) Type plate                     | (7) Adjustable foot |
| (4) Drawer                         |                     |

## 2.3 SmartDevice

SmartDevice is the networking solution for your freezer.

If your appliance SmartDevice-enabled or compatible, you can quickly and easily connect your appliance to your WiFi. With the SmartDevice app, you can operate your appliance from a mobile device. Additional functions and setting options are available in the SmartDevice SmartDevice app.

SmartDevice-enabled appliance: Your appliance is capable of being a SmartDevice. To be able to connect your device to WiFi, you need to download the SmartDevice app.

More information about SmartDevice: [smartdevice.liebherr.com](https://smartdevice.liebherr.com)

Downloading the SmartDevice app:



After installing and configuring the SmartDevice app, you can connect your appliance to your Wi-Fi (see Wi-Fi) using the SmartDevice app and the appliance's Wi-Fi function.

# Setting up and connecting

## Note

The SmartDevice function is not available in the following countries: Russia, Belarus, Kazakhstan.

## 3 Setting up and connecting

### 3.1 Installation requirements

The installation conditions are crucial to ensure that you can operate your appliance safely, efficiently and without problems.

- Observe all safety instructions.
- Consider the location and position in the room.



#### WARNING

Danger of fire due to incorrect positioning!

If the mains cable or plug touches the back of the appliance, the vibration can damage the mains cable or the plug resulting in a short circuit.

- ▶ Make sure the mains cable is not trapped under the appliance when you position the appliance.
- ▶ Stand the appliance so that it is not touched by connectors or main cables.
- ▶ Do not connect any appliances to sockets in the area of the back of the appliance.
- ▶ Do **not** place and operate multi-sockets/power distributors and other electronic devices (such as halogen transformers) at the back of the appliances.



#### WARNING

Fire hazard due to dampness!

If live parts or the mains lead become damp this may cause short circuits.

- ▶ The appliance is designed for use in enclosed areas. Do not operate the appliance outdoors or in areas where it is exposed to splash water or damp conditions.



#### WARNING

Leaking coolant and oil!

Fire. The coolant contained in the appliance is eco-friendly, but also flammable. The oil contained in the appliance is flammable. Escaping coolant and oil can ignite if the concentration is high enough and in contact with an external heat source.

- ▶ Do not damage the pipelines of the coolant circuit and the compressor.

#### 3.1.1 Installation site

- Only set up and use the appliance in enclosed spaces.
- A dry and well-ventilated room is an optimum installation location.
- If the appliance is installed in a very damp environment, condensation may form on the appliance exterior. Always make sure there is good ventilation and aeration at the installation site.
- The more refrigerant there is in the appliance, the larger than room must be in which it is located. In rooms that are too small, a leak can produce a flammable gas/air mixture. For every 8 g of refrigerant, the installation room must be at least 1 m<sup>3</sup> in size. Information on the refrigerant contained is given on the type plate inside the appliance.
- The floor on which the appliance stands must be horizontal and level.

#### 3.1.2 Position in space

- Do not place the appliance in direct sunlight or near radiators or similar sources of heat.
- You can place the appliance directly next to an oven.
- If the appliance is placed directly next to an oven, the energy consumption may increase slightly. This is dependent on the service life and usage intensity of the oven.
- Always position the appliance with the rear directly against the wall, or with wall spacer brackets attached (see below) then with these directly against the wall.\*
- Always position the appliance with the rear directly on the wall.\*
- Use in hazardous areas is not permitted.

### 3.2 Integration into a kitchen unit

- You can convert the appliance with kitchen cabinets.

### 3.3 Appliance dimensions

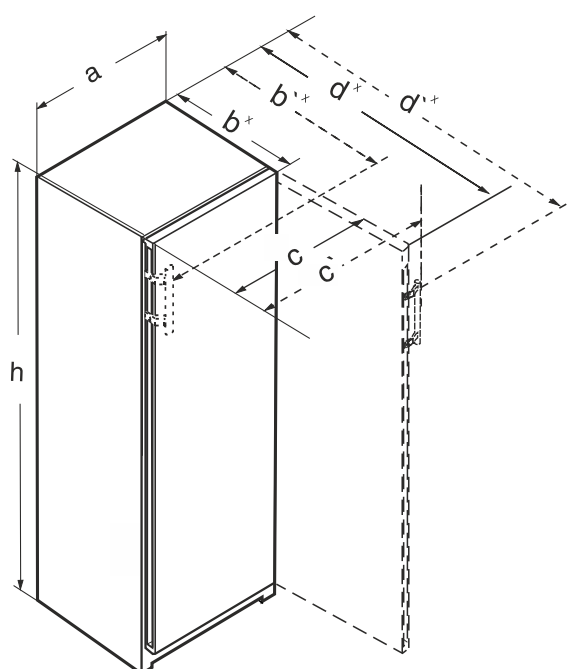


Fig. 2

- (a) Appliance width
- (b) Appliance depth
- (c) Appliance width with door open
- (d) Appliance depth with door open
- (e) Dimensions with lever handle

#### 3.3.1 Dimensions with lever handle

| RBa30 425i / FN.. 42.. |                   |
|------------------------|-------------------|
| a (mm)                 | 597               |
| b (mm)                 | 719 <sup>x</sup>  |
| c (mm)                 | 654               |
| d (mm)                 | 1222 <sup>x</sup> |
| h (mm)                 | 1255              |

With lever handle

|        | FN.. 46.. | FN.. 66.. |
|--------|-----------|-----------|
| a (mm) | 597       | 698       |

|               | FN.. 46..         | FN.. 66..         |
|---------------|-------------------|-------------------|
| <b>b (mm)</b> | 719 <sup>x</sup>  | 804 <sup>x</sup>  |
| <b>c (mm)</b> | 654               | 754               |
| <b>d (mm)</b> | 1222 <sup>x</sup> | 1408 <sup>x</sup> |
| <b>h (mm)</b> | 1455              | 1455              |

With lever handle

|               | FN.. 50.. /<br>LTGN-235 | FN.. 70..         |
|---------------|-------------------------|-------------------|
| <b>a (mm)</b> | 597                     | 698               |
| <b>b (mm)</b> | 719 <sup>x</sup>        | 804 <sup>x</sup>  |
| <b>c (mm)</b> | 654                     | 754               |
| <b>d (mm)</b> | 1222 <sup>x</sup>       | 1408 <sup>x</sup> |
| <b>h (mm)</b> | 1655                    | 1655              |

With lever handle

|               | (S)FN.. 52.. /<br>LTGN-270 | FN.. 72..         |
|---------------|----------------------------|-------------------|
| <b>a (mm)</b> | 597                        | 698               |
| <b>b (mm)</b> | 719 <sup>x</sup>           | 804 <sup>x</sup>  |
| <b>c (mm)</b> | 654                        | 754               |
| <b>d (mm)</b> | 1222 <sup>x</sup>          | 1408 <sup>x</sup> |
| <b>h (mm)</b> | 1855                       | 1855              |

With lever handle

## 3.4 Ventilation requirements

### NOTICE

Danger of overheating due to insufficient air ventilation!  
The compressor may be damaged if there is insufficient air ventilation.

- Take care to ensure adequate air ventilation.
- Observe the ventilation requirements.

If the appliance is integrated into a kitchen unit, the following ventilation requirements must be observed:

- As a general rule: the larger the ventilation cross section, the more energy the appliance will be able to save.

### Note

If the spacing between the rear of the appliance and the wall is less than 51 mm, energy consumption may increase.\*

## 3.5 Connection dimensions for the power supply

The connection to the power supply is on the rear of the appliance. To connect your appliance safely, ensure that the following requirements are met:

- Dimensions for the connection to the power supply are known and are adhered to. See table below.
- Connection to the power supply according to the instructions. (see 3.19 Connecting the appliance to the power supply)

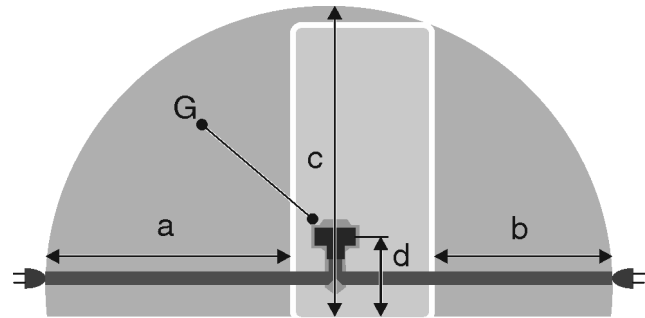


Fig. 3 Fridge/freezer combinations / freezers / full-capacity BioFresh appliances

- (a) Maximum available length of the mains connection cable
- (b) Maximum available length of the mains connection cable
- (c) Maximum available vertical length of the mains connection cable
- (d) Gap between appliance plug and floor
- (G) Appliance plug

For 600 mm wide appliances:

|          |           |
|----------|-----------|
| <b>a</b> | ~ 1800 mm |
| <b>b</b> | ~ 1400 mm |
| <b>c</b> | ~ 2100 mm |
| <b>d</b> | ~ 200 mm  |

## 3.6 Water connection

If your appliance has a fixed water connection, a hose is supplied with it.

### Note

You can purchase a hose of a different length as an accessory.

|                                                  |                                                         |
|--------------------------------------------------|---------------------------------------------------------|
| Overview of dimensions for the water connection: | (see 3.6.1 Dimensions for the water connection)         |
| Requirements for the water pressure:             | (see 3.6.2 Water pressure)                              |
| Make the water connection:                       | (see 3.11 Connecting the appliance to the water supply) |

### 3.6.1 Dimensions for the water connection

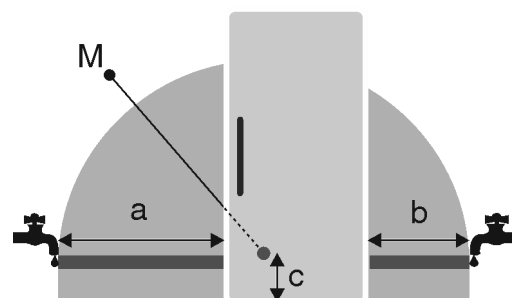


Fig. 4

- (a) Maximum available hose length
- (b) Maximum available hose length
- (c) Distance of solenoid valve to floor
- (M) Solenoid valve

# Setting up and connecting

| a         | b         | c        |
|-----------|-----------|----------|
| ~ 1800 mm | ~ 1450 mm | ~ 150 mm |

## 3.6.2 Water pressure

The water connection line and solenoid valve of the appliance are suitable for a water pressure of up to 1 MPa (10 bar).

To ensure that the appliance functions correctly (flow rate, ice cube size, noise level), maintain the following water pressure:

| Water pressure: |              |
|-----------------|--------------|
| bar             | MPa          |
| 1.5 to 6.2      | 0.15 to 0.62 |

If the pressure is higher than 6.2 bar:

- ▶ Fit a pressure reducer.
- ▶ Make the water connection. (see 3.11 Connecting the appliance to the water supply)

## 3.7 Transporting the appliance

### 3.7.1 Transporting the appliance for initial use

Ensure that the following requirements are met:

- ☐ The appliance is packaged.
- ☐ The appliance is upright.

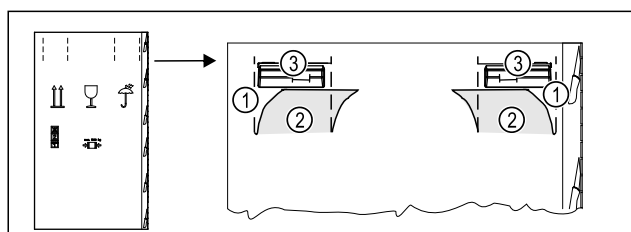


Fig. 5

- ▶ Press the packaging cardboard into the perforation Fig. 5 (1) at the top.
- ▶ Pull out any tabs Fig. 5 (2) that have been pushed in.
- ▶ Carrying handle Fig. 5 (3) visible on the right and left.
- ▶ Hold the appliance by the carrying handles Fig. 5 (3).
- ▶ Transport the appliance with the help of two people.
- ▶ Unpacking the appliance. (see 3.8 Unpacking the appliance)

### 3.7.2 Transporting the appliance after initial use

Observe the following instructions if you wish to transport or move the appliance again after initial use.

Ensure that the following requirements are met:

- ☐ The appliance is emptied.
- ☐ The appliance is upright.
- ☐ Appliance with door(s): Door is secured against accidental opening.
- ☐ Appliance with telescopic unit: The telescopic unit is secured against accidental opening.
- ☐ Appliance with adjustable feet: Adjustable feet are screwed in.
- ▶ Hold the appliance by the carrying handles.
- ▶ Transport the appliance with the help of two people.

After transport:

- ▶ Unscrew the adjustable feet on the appliance.
- ▶ Align the appliance. (see 3.14 Setting up the appliance so that it is level)


## 3.8 Unpacking the appliance

Before you connect the appliance, report any damage immediately to the delivery company.

- ▶ Check the appliance and the packaging for damage during transport. Contact the supplier immediately if you suspect any level of damage.
- ▶ Remove all materials from the back or the side walls of the appliance that may prevent proper installation or ventilation.
- ▶ Remove all protective films from the appliance. Do not use sharp or pointed objects for this.

## 3.9 Explanation of symbols used

|  |                                                                                                                        |
|--|------------------------------------------------------------------------------------------------------------------------|
|  | There is a danger of injury during this step! Observe the safety instructions!                                         |
|  | The instruction is valid for several models. Only perform this step if it applies to your appliance.                   |
|  | For installation, please refer to the detailed description in the text section of the instructions.                    |
|  | Section is valid for either a single-door appliance or a double-door appliance.                                        |
|  | Choose between the following options: Appliance with door hinge on the right or appliance with door hinge on the left. |
|  | Installation step required for IceMaker and/or InfinitySpring.                                                         |
|  | Only loosen or lightly tighten the screws.                                                                             |
|  | firmly tighten the screws.                                                                                             |
|  | Check whether the following step is necessary for your model.                                                          |
|  | Check that the components used are correctly installed/fitted.                                                         |
|  | Measure the specified dimension and correct if necessary.                                                              |

|                                                                                                                                                                    |                                                                                                                              |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|
|                                                                                    | Tool for installation: Metre stick                                                                                           |
|   | Tool for installation: Cordless screwdriver and use<br>A lengthwise bit insert is recommended for good access to the screws. |
|                                                                                    |                                                                                                                              |
|                                                                                    | Tool for installation: Spirit level                                                                                          |
| <br>SW7<br>SW10                                                                    | Tool for installation: Open-end wrench with AF 7 and AF 10                                                                   |
|                                                                                    | Two people are required for this step.                                                                                       |
|                                                                                   | The step takes place at the marked location on the appliance.                                                                |
|                                                                                  | Aid for installation: String                                                                                                 |
|                                                                                  | Aid for installation: Protractor                                                                                             |
|                                                                                  | Aid for installation: Screwdriver                                                                                            |
|                                                                                  | Aid for installation: Scissors                                                                                               |
|                                                                                  | Aid for installation: Marking pen, wipeable                                                                                  |
|                                                                                  | Included: Remove components                                                                                                  |
|                                                                                  | Dispose of components that are no longer required in accordance with local regulations.                                      |

## 3.10 Door hinge change

### Tools

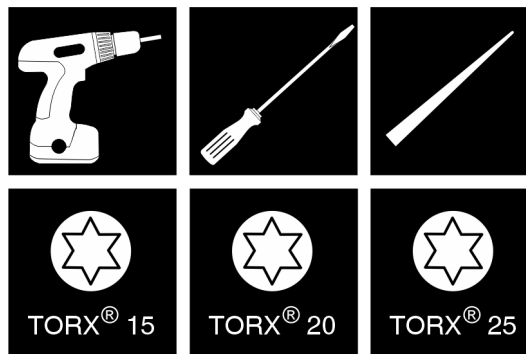


Fig. 6

### NOTICE

Risk of damage due to door collision!

Damage to the appliances with Side-by-Side positioning. If you set up two appliances next to each other in a specific Side-by-Side arrangement, the door hinge of both appliances is preset at the factory.

► Side-by-Side positioning: Do not change the door hinge.

These sections apply for appliances **with a soft stop mechanism**.\*

- ☐ For appliances **with** a soft stop mechanism
- ☐ For all appliances

These sections apply for appliances **without a soft stop mechanism**.\*

- ☐ For appliances **without** a soft stop mechanism
- ☐ For all appliances

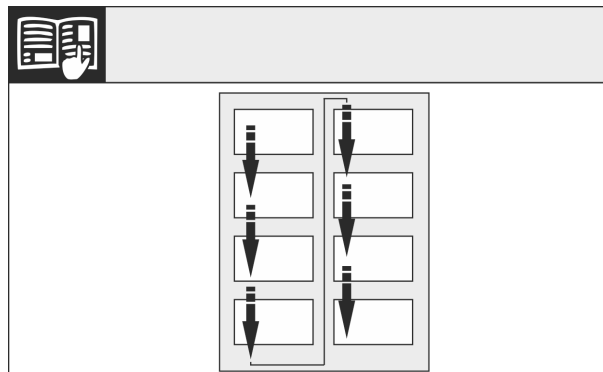


Fig. 7

Remember the reading direction.

### 3.10.1 Removing the soft stop mechanism\*

For appliances with a soft stop mechanism:\*

# Setting up and connecting

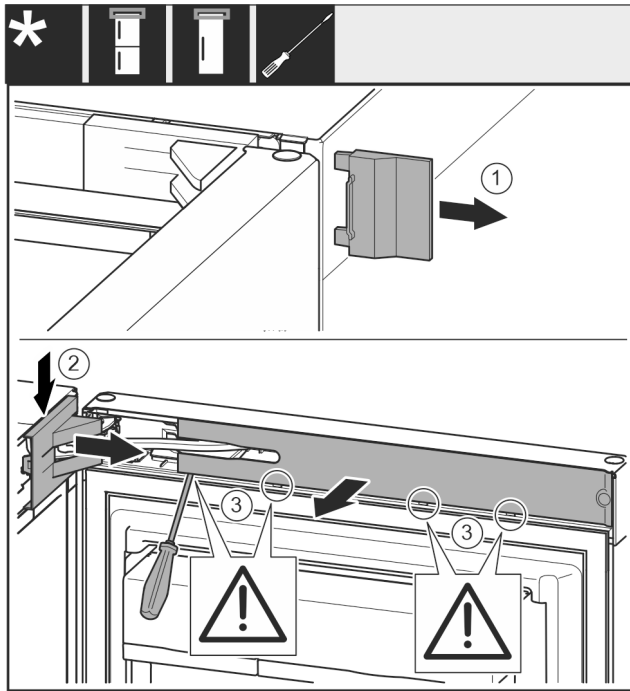


Fig. 8

- Open the door.

## NOTICE

Risk of damage from screwdrivers!

If you damage the door seal, the door will not close properly resulting in inadequate cooling.

- Use a screwdriver carefully as an aid.
- Do not damage the door seal with the screwdriver.

- Remove cover Fig. 8 (1).
- Disengage and loosen the swap bearing block cover Fig. 8 (2).
- Remove the swap bearing block cover Fig. 8 (2).
- Use a slotted screwdriver to unlatch the trim Fig. 8 (3) and swing it to the side.

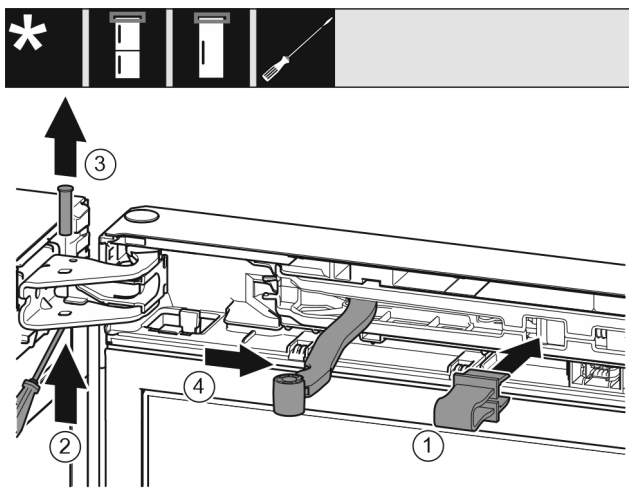


Fig. 9



## CAUTION

Crushing hazard by joint folding up!

- Engage safety device.

- Latch safeguard Fig. 9 (1) into opening.
- Slide out the bolt Fig. 9 (2).
- Remove the bolt Fig. 9 (3) upwards.
- Turn the joint Fig. 9 (4) towards the door.

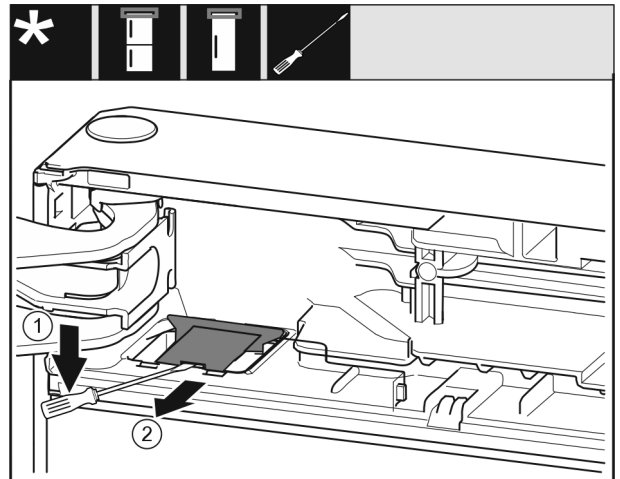


Fig. 10

- Use a flat-blade screwdriver to disengage the cover Fig. 10 (1).
- Remove the cover Fig. 10 (2).

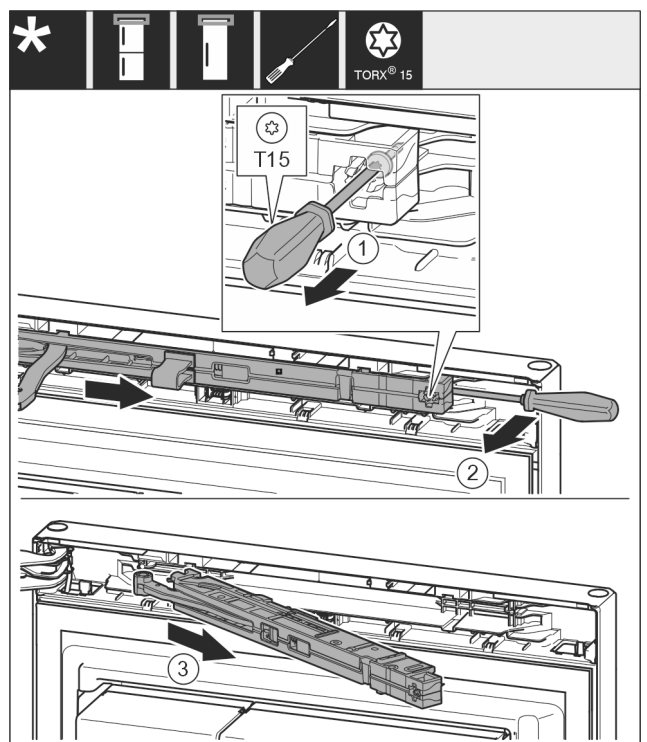


Fig. 11

- Use screwdriver to loosen the screw Fig. 11 (1) on the closing damper unit by 14 mm.
- Lever the closing damper unit Fig. 11 (2) forwards on the handle side using a screwdriver.
- Pull out the closing damper unit Fig. 11 (3).

## 3.10.2 Appliances without closing damper: Removing covers\*

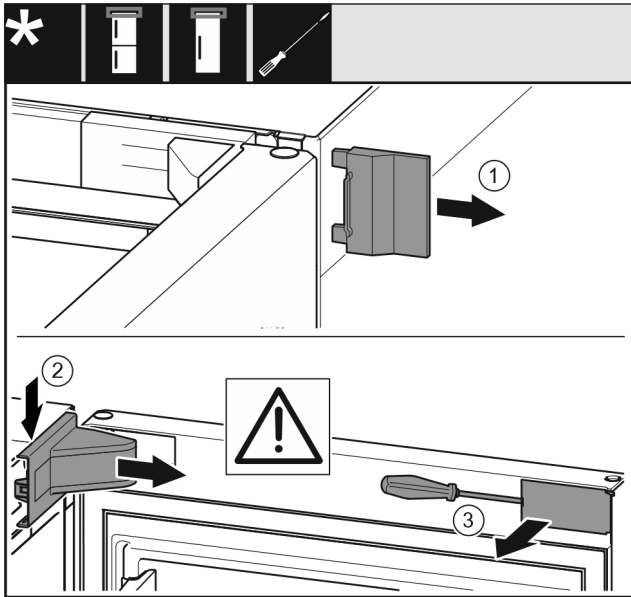


Fig. 12

- Open the door.
- Remove the outer cover (1).
- Disengage and remove the swap bearing block cover (2).

### NOTICE

Risk of damage from screwdrivers!

If you damage the door seal, the door will not close properly resulting in inadequate cooling.

- Use a screwdriver carefully as an aid.
- Do not damage the door seal with the screwdriver.
- Use a screwdriver to disengage the cover (3) on the outside of the door and swivel it to the side.

## 3.10.3 Detaching the door

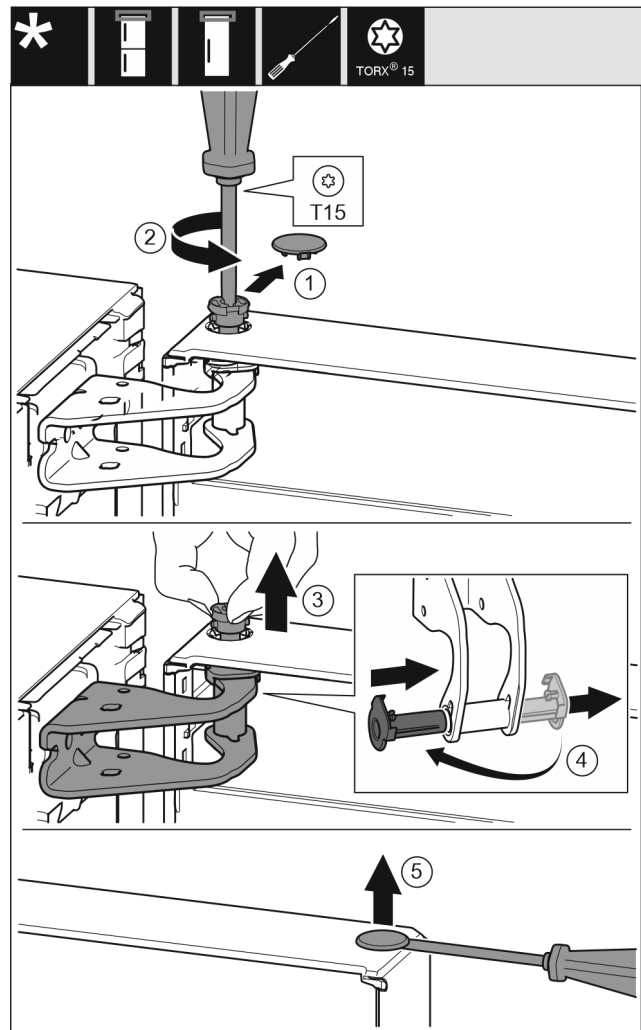


Fig. 13

- Carefully remove the cover (1).
- Use screwdriver to loosen the bolts (2) a little.



### CAUTION

Danger of injury due to door tipping out!

If you remove the bolt on the door completely, the door may tilt out and you may injure yourself.

- Hold the door firmly before removing the bolt.
- Hold door in place.
- Pull out the bolt (3) with your fingers.
- Pull the bearing bush (4) out of the guide.
- Insert the bearing bush (4) on the other side and engage.
- Lift the door and put it to one side.
- Carefully lift and remove the cover (5) with a screwdriver.

## Setting up and connecting

### 3.10.4 Relocating the upper bearing components

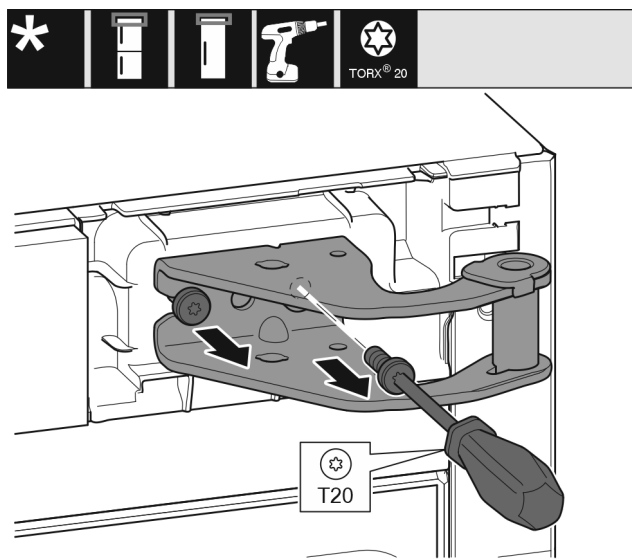


Fig. 14

- Unscrew the screws.
- Lift and remove the swap bearing block.



#### WARNING

Danger of injury due to door falling out!

If the bearing parts are not screwed on tightly enough, the door may fall out. This can result in serious injuries. In addition, the door may not close with the result that the appliance does not cool properly.

- Screw on the bearing brackets/bearing pins tightly with 4 Nm.
- Check all screws and retighten them if necessary.

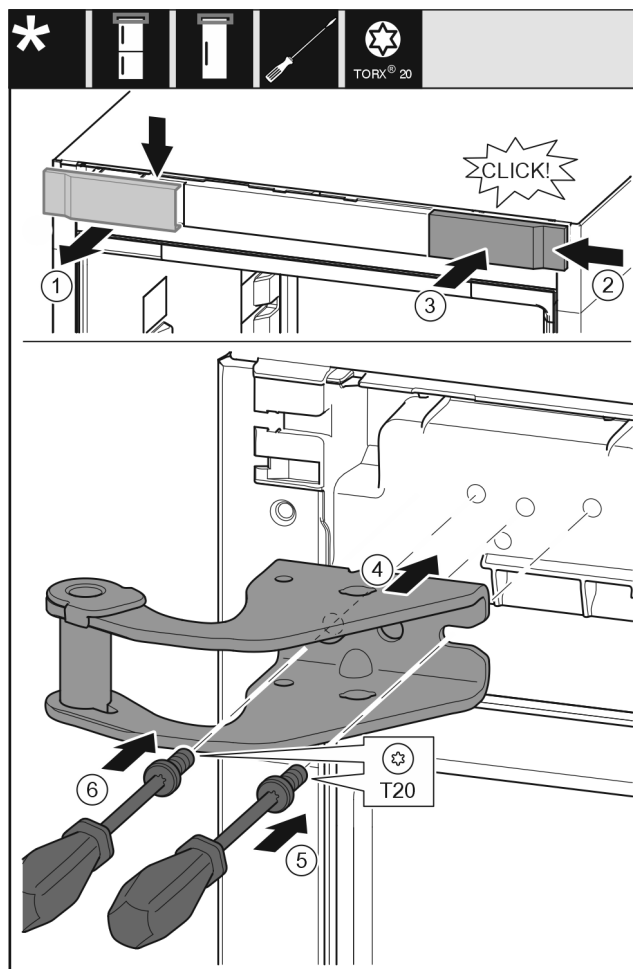


Fig. 15

- Remove the cover (1) from above towards the front.
- Turn the cover (2) by 180° and attach to the other side from the right.
- Engage the cover (3).
- Place the top swap bearing block (4).
- Screw the screw (5) tight.
- Screw the screw (6) tight.

### 3.10.5 Moving the lower bearing parts to the other side

For all appliances:



#### WARNING

Danger of injury due to door falling out!

If the bearing parts are not screwed on tightly enough, the door may fall out. This can result in serious injuries. In addition, the door may not close with the result that the appliance does not cool properly.

- Screw on the bearing brackets/bearing pins tightly with 4 Nm.
- Check all screws and retighten them if necessary.

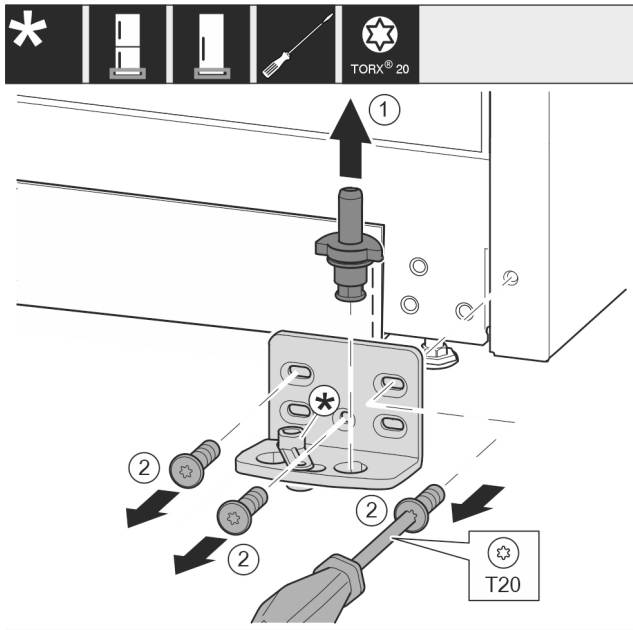


Fig. 16 \*

- Pull the bearing bolt Fig. 16 (1) out upwards completely.\*
- Use screwdriver to unscrew the screws Fig. 16 (2) and remove the swap bearing block.\*

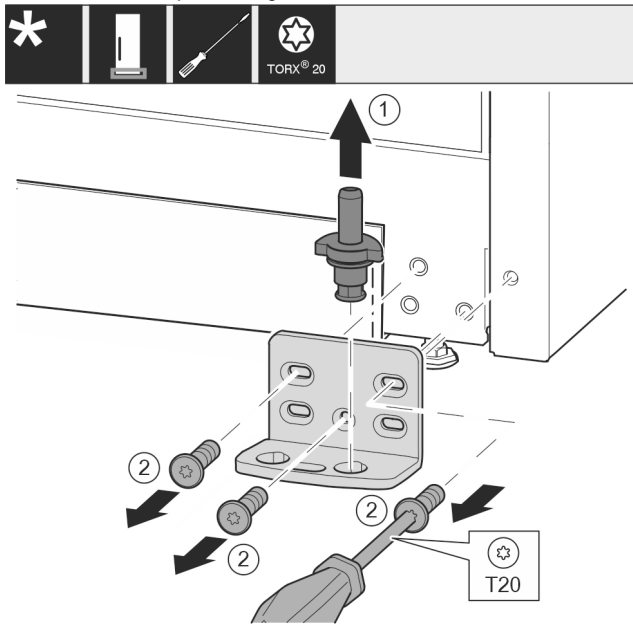


Fig. 17 \*

- Pull the bearing bolt Fig. 17 (1) out upwards completely.\*
- Use screwdriver to unscrew the screws Fig. 17 (2) and remove the swap bearing block.\*

**For appliances without a soft stop:\***

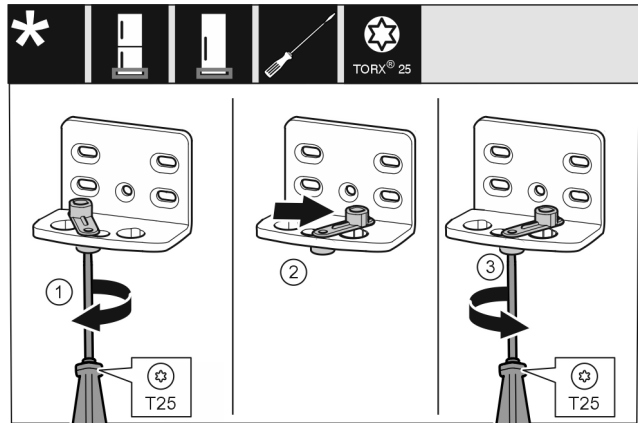


Fig. 18 \*

- Use screwdriver to loosen the screw Fig. 18 (1).\*
- Lift the door closing aid Fig. 18 (2) and turn 90° clockwise in the hole.\*
- Tighten screw Fig. 18 (3) with screwdriver.\*

**For all appliances:**

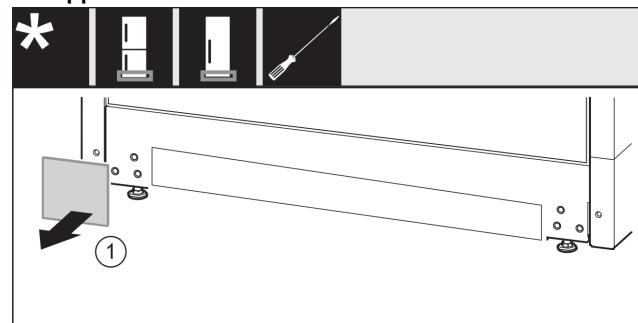


Fig. 19

- Remove cover Fig. 19 (1).

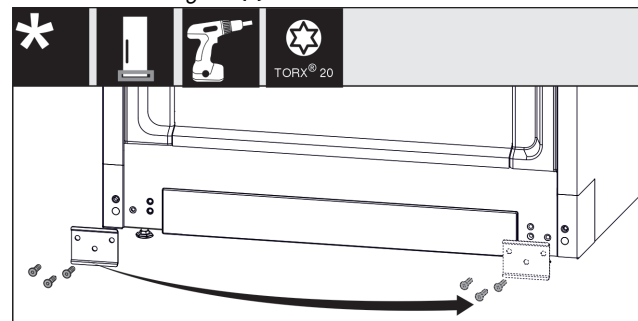


Fig. 20

- Unscrew the plate Fig. 20 (1), move it to the other side and screw it back on.

## Setting up and connecting

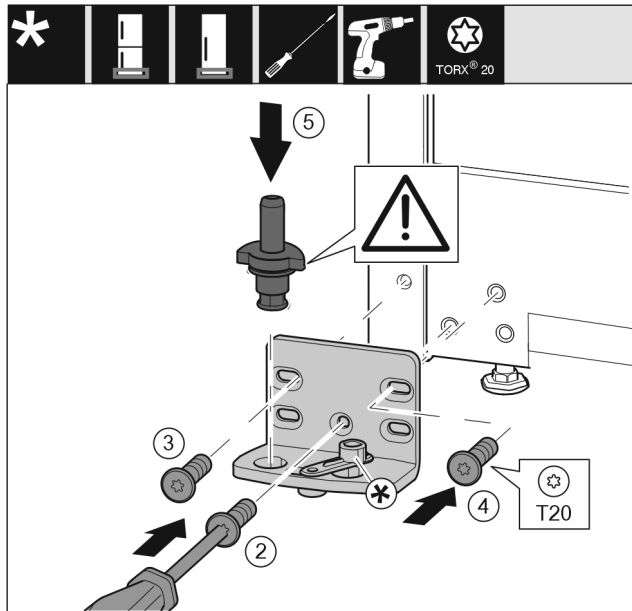


Fig. 21 \*

- Place the swap bearing block on the other side and use a screwdriver to screw it on. Start with the screw Fig. 21 (2) at the bottom in the middle.\*
- Tighten screw Fig. 21 (3) and screw Fig. 21 (4).\*
- Insert the bearing bolt Fig. 21 (5) completely. Ensure that the latching cam is pointing towards the rear.\*
- Place the swap bearing block on the other side and use a screwdriver to screw it on. Start with the screw (2) at the bottom in the middle.\*
- Tighten screw (3) and screw (4).\*
- Insert the bearing bolt (5) completely. Ensure that the latching cam is pointing towards the rear.\*

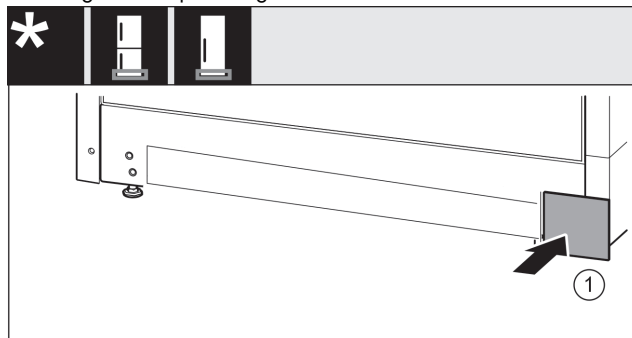


Fig. 22

- Re-attach the cover Fig. 22 (1) to the other side.

### 3.10.6 Moving the door bearing parts to the other side

For appliances without a soft stop:



#### WARNING

Danger of injury due to door falling out!\*

If the bearing parts are not screwed on tightly enough, the door may fall out. This can result in serious injuries. In addition, the door may not close with the result that the appliance does not cool properly.

- Screw on the bearing brackets/bearing pins tightly with 4 Nm.
- Check all screws and retighten them if necessary.

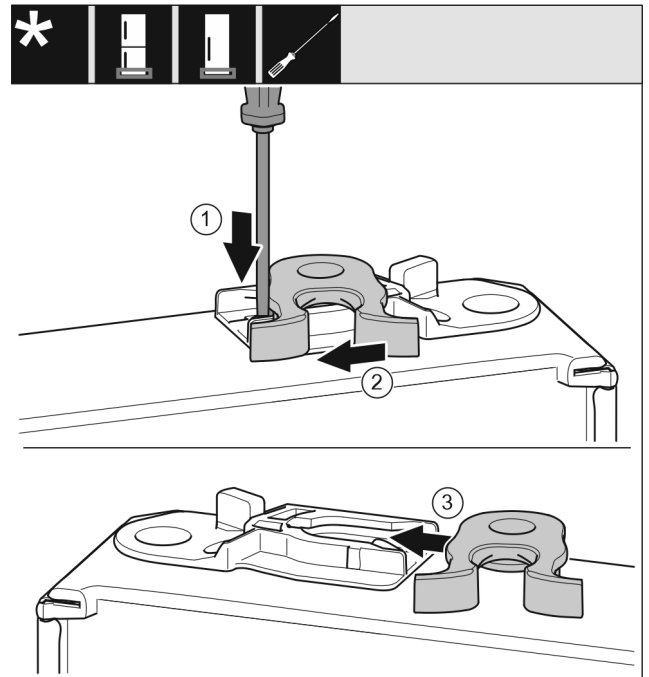


Fig. 23 \*

- The bottom side of door faces upwards: Turn the door.\*
- Use a slotted screwdriver to push the tab Fig. 23 (1) downwards.\*
- Pull the closing hook Fig. 23 (2) out of the guide.\*
- Insert the closing hook Fig. 23 (3) into the guide on the other side.\*
- The upper side of door faces upwards: Turn the door.\*

### 3.10.7 Moving the handles to the other side

For all appliances:

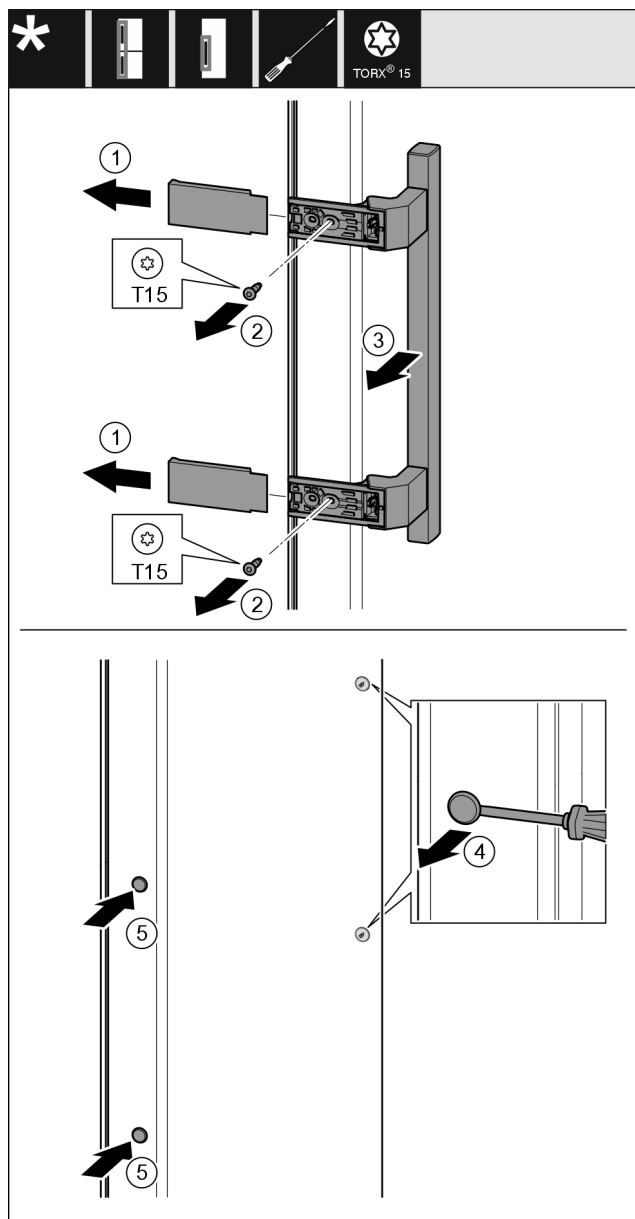


Fig. 24

- Remove the cover Fig. 24 (1).
- Unscrew screws Fig. 24 (2) with screwdriver.
- Remove the handle Fig. 24 (3).
- Use a slotted screwdriver to lift the side plug Fig. 24 (4) carefully and pull it out.
- Re-insert the plug Fig. 24 (5) on the other side.

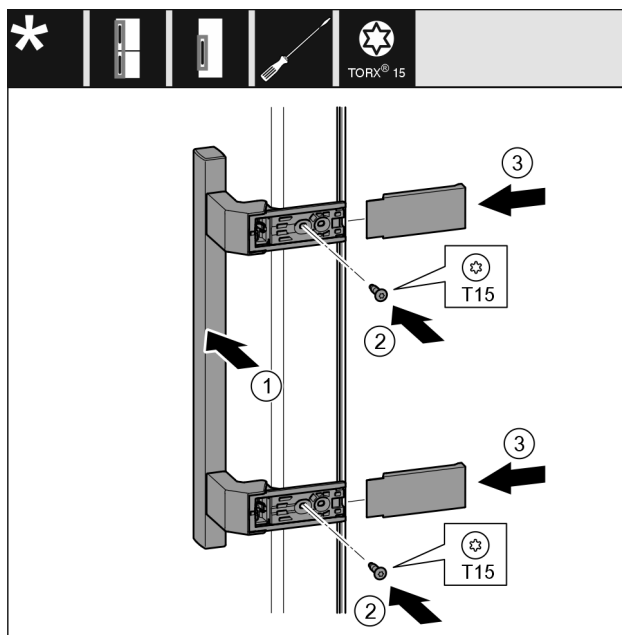


Fig. 25

- Place the handle Fig. 25 (1) on the opposite side.
- The screw holes must be exactly above each other.
- Tighten screws Fig. 25 (2) with screwdriver.
- Place the covers Fig. 25 (3) on the side and push them on.
- Ensure that they latch into place.

## 3.10.8 Fitting the door

- Place the door on the lower bearing pins.

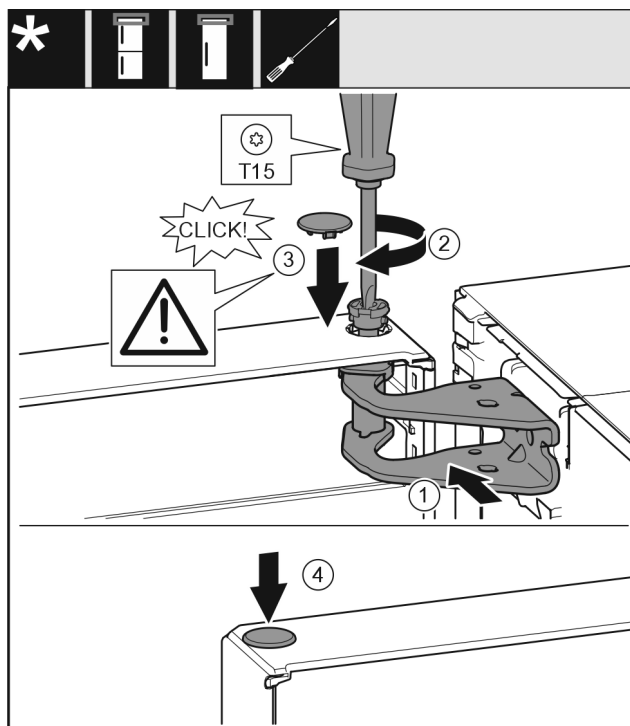


Fig. 26

- Align the top door with the opening in the swap bearing block Fig. 26 (1).
- Insert the bolt Fig. 26 (2) and use screwdriver to tighten it.
- Insert the cover Fig. 26 (3).
- Check that the cover Fig. 26 (3) is resting on the door.
- Insert the cover Fig. 26 (4).

# Setting up and connecting

## 3.10.9 Aligning the door

For all appliances:



### WARNING

Danger of injury due to door falling out!

If the bearing parts are not screwed on tightly enough, the door may fall out. This can result in serious injuries. In addition, the door may not close with the result that the appliance does not cool properly.

- ▶ Screw the bearing brackets on firmly with 4 Nm.
- ▶ Check all screws and retighten them if necessary.

- ▶ Align the doors flush with the appliance housing using the two slots in the bearing bracket if needed. To do this undo the middle screw in the bottom bearing bracket with the T20 tool supplied. Undo the remaining screws a little with the T20 tool or with a T20 screwdriver and align using the slotted holes.
- ▶ Prop up the door: Take off the adjustable foot on the bearing bracket using the open-ended wrench SW10 until it comes into contact with the floor, then turn an additional 90°.

## 3.10.10 Fitting the covers\*

For appliances without a soft stop:

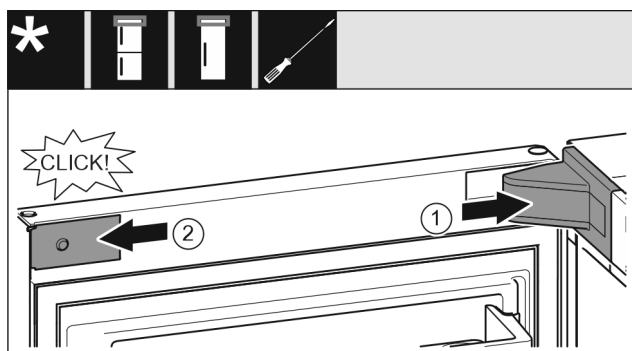


Fig. 27

The door is open 90°.

- ▶ Put the swap bearing block cover Fig. 27 (1) on and engage, push apart carefully if required.
- ▶ Place the trim Fig. 27 (2) on the side and engage.

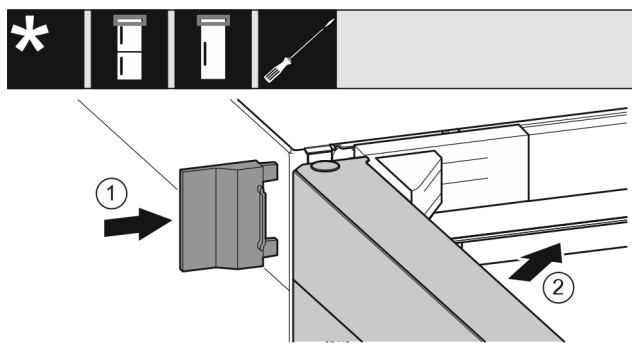


Fig. 28

- ▶ Push the outer cover Fig. 28 (1) on.
- ▶ Close the upper door Fig. 28 (2).

## 3.10.11 Appliances with closing damper: Fitting the closing damper\*

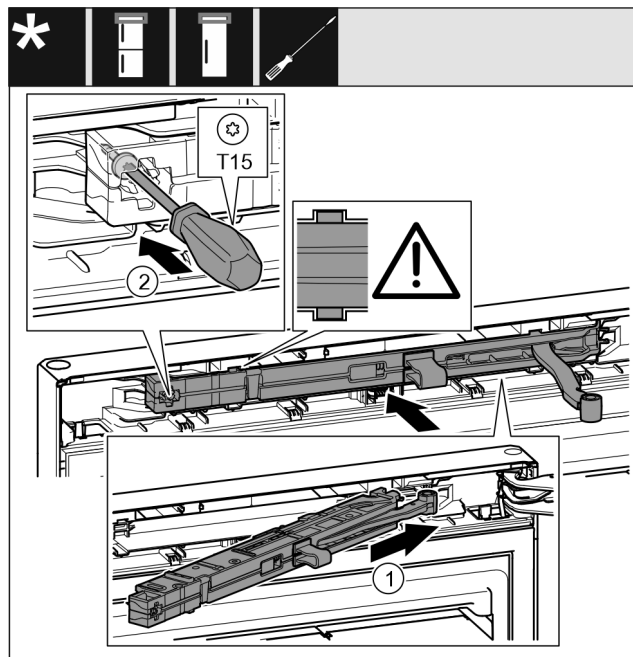


Fig. 29

- ▶ On the swap bearing block side, slide the closing damper unit Fig. 29 (1) into the recess at an angle up to the stop.
- ▶ Push the closing damper unit completely in.
- ▶ The closing damper unit is positioned correctly if the closing damper unit's rib is in the guide in the housing.
- ▶ Use a screwdriver to tighten the screw Fig. 29 (2).

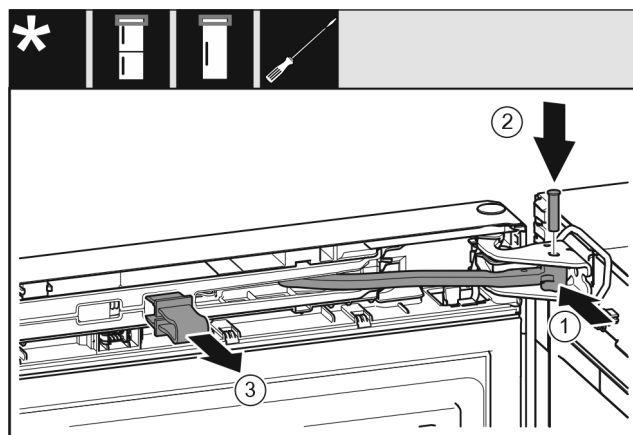


Fig. 30

The door is open 90°.

- ▶ Turn the joint Fig. 30 (1) in the bearing block.
- ▶ Insert thebolt Fig. 30 (2) into the bearing bracket and joint. Ensure that the latching cam is in the groove properly.
- ▶ Remove the safeguard Fig. 30 (3).

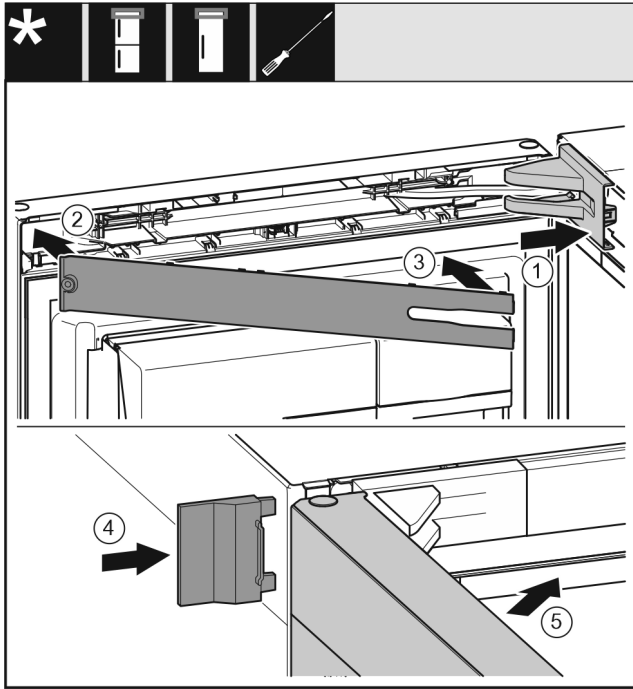


Fig. 31

- ▶ Put the swap bearing block cover Fig. 31 (1) on and engage, push apart carefully if required.
- ▶ Fit the trim Fig. 31 (2).
- ▶ Swivel in the cover Fig. 31 (3) and engage.
- ▶ Push the outer cover Fig. 31 (4) on.
- ▶ Close the upper door Fig. 31 (5).

## 3.11 Connecting the appliance to the water supply

Make sure that the following requirements are fulfilled:

- ❑ The dimensions for the water supply connection are known and complied with.
- ❑ The correct water pressure is maintained.
- ❑ Water is supplied to the appliance via a cold water pipe which can withstand the operating pressure and is connected to the drinking water supply.
- ❑ All equipment and devices used to supply water must comply with the regulations in force in the respective country.
- ❑ The rear of appliance is accessible so that you can connect the appliance to the drinking water supply.
- ❑ The supplied hose is used. Old hoses have been disposed of.
- ❑ The hose connector contains a filter with a seal.
- ❑ There is a tap between the hose line and the domestic water connection so that you can turn off the water supply if necessary.
- ❑ The tap is not directly behind the appliance and is easily accessible. This way, you can push the appliance as close as possible to the wall and can quickly turn off the tap if necessary.



### WARNING

Risk of electric shock from water!

- ▶ Before connecting to the water pipe: Disconnect the appliance from the mains.
- ▶ Before connecting to water supply lines: Shut off the water supply.
- ▶ Make sure that only qualified personnel connect the device to the drinking water supply.



### WARNING

Risk of poisoning due to contaminated water!

- ▶ Only connect to the drinking water supply.

### 3.11.1 Connecting the hose

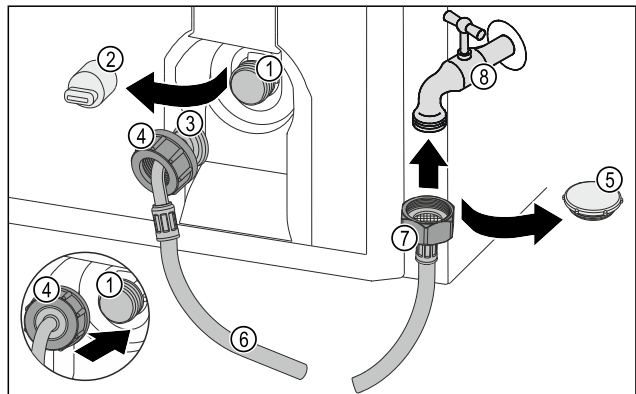


Fig. 32

- |                                                                                                                          |                       |
|--------------------------------------------------------------------------------------------------------------------------|-----------------------|
| (1) Solenoid valve: The solenoid valve is located at the bottom rear of the appliance. It has an R3/4 connection thread. | (5) Closure cap       |
| (2) Cover                                                                                                                | (6) Hose              |
| (3) Angled hose end                                                                                                      | (7) Straight hose end |
| (4) Nut                                                                                                                  | (8) Tap               |

### NOTICE

Risk of damage from incorrect installation!

- ▶ Do not damage or kink the hose.
- ▶ Do not damage or kink the hose when setting up the appliance.

#### Connecting the hose to the appliance:

- ▶ Pull off the cover (2).
- ▶ Push and hold the nut (4) all the way over the angled hose end (3).

### NOTICE

The solenoid valve will not be tight if the thread is damaged! If the solenoid valve is not tight, water may leak out.

- ▶ Observe the following instructions for fitting the nut on the solenoid valve.

- ▶ Carefully position and hold the nut (4) on the solenoid valve (1).
- ▶ Screw the nut (4) by hand straight onto the thread until it is securely and firmly seated.
- ▶ The hose is connected to the appliance.

#### Connecting the hose to the tap:

- ▶ Remove the closure cap Fig. 32 (5).
- ▶ Place the straight end of the hose Fig. 32 (7) on the tap Fig. 32 (8).
- ▶ Tighten the nut at the straight end of the hose Fig. 32 (7) in a clockwise direction.
- ▶ The hose is connected to the tap.

### 3.11.2 Checking the water system

Before you completely install the appliance, Liebherr recommends checking the water system for leaks.

- ▶ Slowly turn on the tap.
- ▶ Check the hose, water feed and connections for leaks.
- ▶ The water system has now been checked for leaks.
- ▶ The water system is not leaking: You can install up the appliance completely.


# Setting up and connecting

## Note

**IceMaker:** Before the first use, you must clean the IceMaker. (see Quick Start Guide or operating instructions)

## 3.12 Mounting wall spacers\*

With wall spacers, your device achieves the declared energy consumption and no condensation forms in high ambient humidity. The device is fully functional without the spacer brackets, but its energy consumption will be slightly higher. If you insert the wall spacers, then the device depth increases by approx. 15 mm.\*

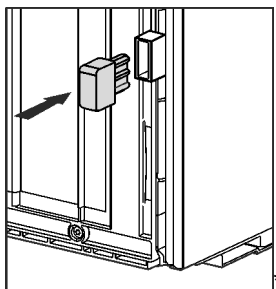

- ▶ Appliance with enclosed wall spacers: Insert the wall spacers on the rear of the appliance at the bottom left and right.

## 3.13 Setting up the appliance



### CAUTION

Risk of injury due to heavy appliance!

- ▶ Have two people transport the appliance to its installation site.



### WARNING

Risk of fire due to short circuit!

- ▶ When you set the appliance up: do not kink, jam or damage the mains cable.
- ▶ The appliance must not be operated with a defective mains cable.



### WARNING

Fire hazard and danger of damage!

- ▶ Do not place appliances emitting heat e.g. microwaves, toasters etc. on the appliance!

Ensure that the following conditions are met:

- ☐ Only move the device when it is not loaded.
- ☐ Only install the appliance with help.
- ▶ Remove the mains cable from the package.
- ▶ Plug the mains cable's IEC socket completely into the appliance plug on the back of the appliance. Ensure that the IEC socket is tight.
- ▶ Use a cord to lay the mains plug to a freely accessible socket if required.

## 3.14 Setting up the appliance so that it is level

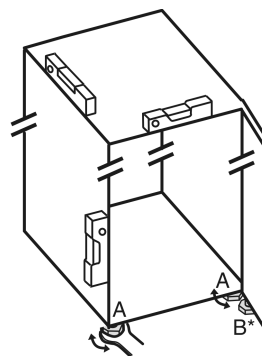


Fig. 33

- ▶ Unscrew the adjustable feet Fig. 33 (A) using the enclosed open-end spanner and a spirit level until the appliance is firmly aligned and level.



### CAUTION

Risk of injury and damage due to the appliance tipping over! If the additional adjustable foot on the lower swap bearing block does not rest properly on the floor, the appliance may tip over. This can lead to property damage and injuries.

- ▶ Unscrew the additional adjustable foot on the swap bearing block as instructed.
- ▶ Unscrew the adjustable foot Fig. 33 (B) on the swap bearing block with the enclosed open-end spanner until it rests on the floor.
- ▶ Turn the adjustable foot Fig. 33 (B) 90° further.
- ▶ The appliance is aligned.

## 3.15 After setting up

- ▶ Remove all transport safety components.
- ▶ Take off the protective film from the exterior of the appliance.
- ▶ Clean the appliance. (see operating instructions)
- ▶ Note the type (model, number), appliance designation, appliance/serial number, purchase date and dealer's address.

## 3.16 Installing multiple appliances

The appliances have been developed for different installation methods. If you wish to install several appliances next to each other or on top of each other, ensure that the following requirements are met:


- ☐ Only install appliances next to or on top of each other if they have been developed for this.
- ☐ Observe notices and the following table.

### NOTICE

Risk of damage due to condensate!

- ▶ Do not place the appliance directly next to another cooling/refrigeration unit.

| Model      | Installation method |
|------------|---------------------|
| All models | Standalone          |
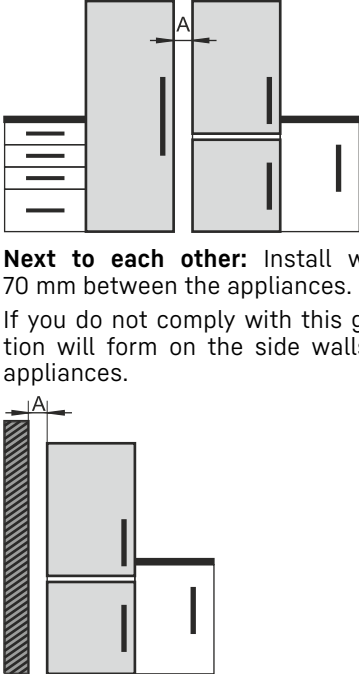
| Model                                                   | Installation method                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Models with model designation starting with <b>S...</b> | Side-by-Side (SBS)                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Models without side wall heating                        |  <p><b>Next to each other:</b> Install with gap <b>A</b> of 70 mm between the appliances.<br/>If you do not comply with this gap, condensation will form on the side walls between the appliances.</p> <p><b>On an exterior wall:</b> Install with gap <b>A</b> as with installation next to each other.<br/>If you do not comply with this gap, condensation may form on the appliance's side wall.</p> |

## Models and their installation method

Assemble the appliances according to the separate installation instructions.

## 3.17 Integrating the appliance into a kitchen unit

The appliance can be integrated into a kitchen unit. Please observe the following installation conditions:

- If you fit a stacking cabinet above the appliance, you must allow for a ventilation cross-section with the appropriate depth at the rear of the stacking cabinet.
- If you place the appliance with the hinges next to a wall, you must take the distance to the side of the appliance into account.
- To ensure that the door can be opened fully, the appliance must protrude beyond the front thickness. Depending on the niche depth, the appliance may protrude further.

### Note

A set for limiting the door opening angle to 90° can be obtained from customer service for appliances with soft closing.\*



### WARNING

Risk of fire due to short circuit!

- When you set the appliance up: do not kink, jam or damage the mains cable.
- The appliance must not be operated with a defective mains cable.

Ensure that the following requirements are met:

- ❑ The socket is easily accessible and is not behind the appliance.
- ❑ Ventilation requirements are met. (see 3.4 Ventilation requirements).
- ❑ Connection dimensions are taken into account. (see 3.19 Connecting the appliance to the power supply)
- ❑ Wall spacers are fitted.\*

### 3.17.1 Niche dimensions for appliances with lever handle

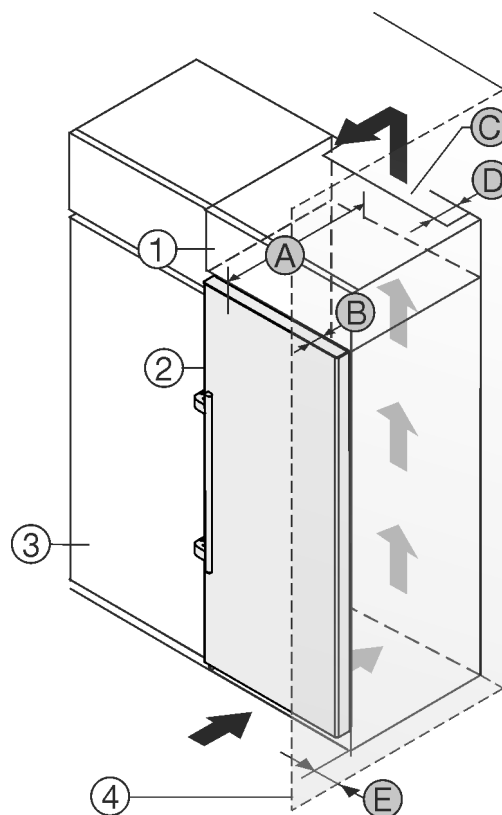


Fig. 34

- (1) Top Unit
- (2) Appliance
- (3) Kitchen cupboard
- (4) Wall
- (A) Appliance depth

- (B) Door depth
- (C) Ventilation cross-section
- (D) Distance from rear of the appliance
- (E) Distance to the side of the appliance

| Dimensions with lever handle: |                          |
|-------------------------------|--------------------------|
| A                             | 675 mm <sup>x</sup>      |
| B                             | 75 mm                    |
| C                             | min. 300 cm <sup>2</sup> |
| D                             | min. 50 mm               |
| E                             | min. 57 mm               |

<sup>x</sup> On devices with wall spacer brackets, this dimension increases by 15 mm.\*

# Functionality of the Touch & Swipe display

## 3.18 Disposing of packaging



### WARNING

Danger of suffocation due to packing material and plastic film!

- ▶ Do not allow children to play with packing material.

The packaging is made of recyclable materials:

- corrugated board/cardboard
  - expanded polystyrene parts
  - polythene bags and sheets
  - polypropylene straps
  - nailed wooden frame with polyethylene panel\*
- ▶ Take the packaging material to an official collecting point.

## 3.19 Connecting the appliance to the power supply



### WARNING

Danger of electric shock and injury due to damaged appliance or damaged mains cable!  
Danger of cuts and fatal injuries. If the appliance or the mains cable is damaged during transport, you may be electrocuted. You could also cut yourself on damaged parts of the appliance housing.

- ▶ Check the appliance and the mains cable for damage after transport.
- ▶ Never put the appliance into operation if the appliance or the mains cable are damaged.
- ▶ Contact Customer Service.

You can connect your appliance to the mains using the power cable supplied separately. The mains power cable has an appliance coupler at one end and a mains plug at the other end.

Make sure that the following requirements are fulfilled:

- The appliance and power cable are undamaged.
- The appliance is set up in accordance with the regulations. (see 3.12 Mounting wall spacers\*)
- Requirements for the electrical connection are met.
- Dimensions for connection in accordance with regulations are known and observed. (see 3.5 Connection dimensions for the power supply)
- Mains voltage and frequency correspond to the specifications on the type plate.
- The socket is earthed according to the regulations and fused.
- The fuse tripping current is between 10 A and 16 A.
- The socket is easily accessible and is not behind the appliance. (see 3.5 Connection dimensions for the power supply)

### NOTICE

Danger of damage to incorrect operation!  
Damage to the electrical components of the appliance.

- ▶ Only use the supplied mains cable.




### WARNING

Danger of fire due to incorrect connection!  
Burns.

Damage to the appliance.

- ▶ Do not use an extension cable.
- ▶ Do not use distributor blocks.

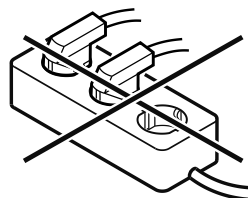

### NOTICE

Danger of damage to incorrect connection!

Damage to the appliance.

- ▶ Do not connect the appliance to a stand-alone inverter, e.g. solar power systems and petrol generators.

- ▶ Connect the mains cable plug to the power supply. Ensure that the plug is tightly in the socket.
- ▶ The Liebherr logo appears in the display.
- ▶ The display switches to the standby symbol.
- ▶ If no action occurs within 60 seconds: The standby symbol fades or disappears.
- ▶ The appliance is connected. For information regarding first use, see the following section or the operating instructions.

## 4 Functionality of the Touch & Swipe display

You operate your appliance using the Touch & Swipe display. You select appliance functions in the Touch & Swipe display (hereafter referred to as display) by tapping them. If you do not perform any action on the display for 10 seconds, the display either jumps back to the higher-level menu or directly to the status display.

### 4.1 Navigation and symbol explanation

In the illustrations, different symbols are used to navigate the display. The following table describes these symbols.


| Symbol | Description                                                                                                   |
|--------|---------------------------------------------------------------------------------------------------------------|
|        | <b>Briefly touch the display:</b><br>Activates/deactivates function.<br>Confirms selection.<br>Opens submenu. |
|        | <b>Touch the display for a specified time (e.g. 3 seconds):</b><br>Activates/deactivates function or value.   |
|        | <b>Swipe left or right:</b><br>Navigate in the menu.                                                          |
|        | <b>Briefly touch the Back symbol:</b><br>Jumps back one menu level.                                           |
|        | <b>Press and hold the Back symbol for 3 seconds:</b><br>Jumps back to the status display.                     |

| Symbol                                                                           | Description                                                                                                                                                                                                         |
|----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>Arrow with clock:</b><br>It takes more than 10 seconds for the following message to appear in the display.                                                                                                       |
|  | <b>Arrow with a time indication:</b><br>It takes the specified amount of time until the following message appears in the display.                                                                                   |
|  | <b>“Open Settings menu” symbol:</b><br>Navigates to the Settings menu and opens the settings menu.<br>If necessary: Navigate to the desired function in the Settings menu.<br>(see 4.2.1 Opening the Settings menu) |
|  | <b>“Open Advanced menu” symbol:</b><br>Navigates to the Advanced menu and opens the advanced menu.<br>If necessary: Navigate to the desired function in the Advanced menu.<br>(see 4.2.2 Opening the expanded menu) |
| No action for 10 seconds                                                         | If you do not perform any action on the display for 10 seconds, the display either jumps back to the higher-level menu or directly to the status display.                                                           |
| Open door and close it again.                                                    | If you open the door and immediately close it again, the display jumps directly back to the status display.                                                                                                         |

Note: Illustrations of the display are shown in the English version.

## 4.2 Menus

The appliance functions are distributed over various menus:

| Menu                                                                                                | Description                                                                                                                                                                                       |
|-----------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Main menu                                                                                           | When you switch the appliance on, you are automatically in the main menu.<br>From here you can navigate to the most important appliance functions, to the Settings menu and to the Advanced menu. |
| <br>Settings menu | The Settings menu contains additional appliance functions for setting up your appliance.                                                                                                          |
| Advanced menu                                                                                       | The advanced menu contains special appliance functions for setting up your appliance. Access to the Advanced menu is protected by the numerical code <b>1 5 1</b> .                               |

### 4.2.1 Opening the Settings menu

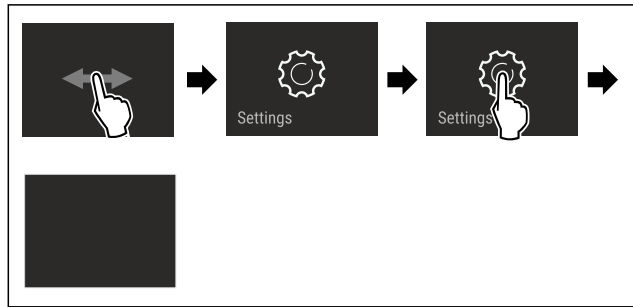


Fig. 35 Example illustration

- ▶ Carry out action steps according to the illustration.
- ▶ Settings menu is open.
- ▶ If necessary: Navigate to the desired function.

### 4.2.2 Opening the expanded menu




Fig. 36

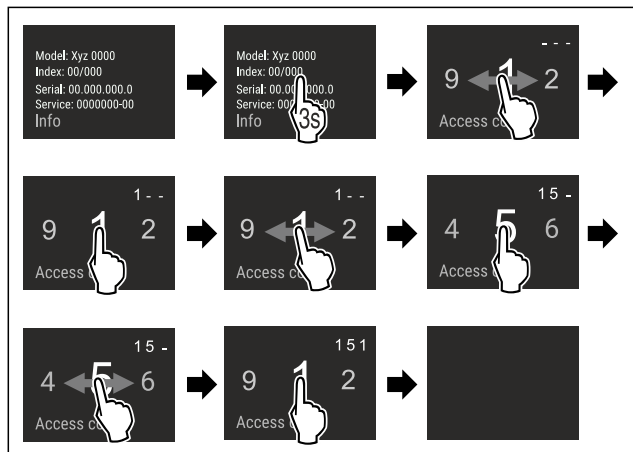


Fig. 37 Example illustration, access with numerical code **151**

- ▶ Carry out action steps according to the illustration.
- ▶ The expanded menu is open.
- ▶ If necessary: Navigate to the desired function.

## 4.3 Sleep mode

If you do not touch the display for 1 minute, the display switches to sleep mode. In sleep mode, the display brightness is dimmed.

### 4.3.1 Ending sleep mode

- ▶ Touch the display briefly with your finger.
- ▶ Sleep mode is ended.

## 5 Putting into operation

### 5.1 Switching on appliance (first use)

Make sure that the following requirements are fulfilled:

- ❑ The appliance has been installed and connected in accordance with the installation instructions.
- ❑ All adhesive strips, adhesive and protective films and transport locks are removed from inside and on the appliance.

- ❑ All marketing leaflets are removed from the drawers.
- ❑ You are familiar with the functionality of the Touch & Swipe display. (see 4 Functionality of the Touch & Swipe display)

## Switch on the appliance using the Touch & Swipe display:

- ▶ If the display is in sleep mode: Briefly touch the display.
- ▶ Carry out action steps according to the illustration.

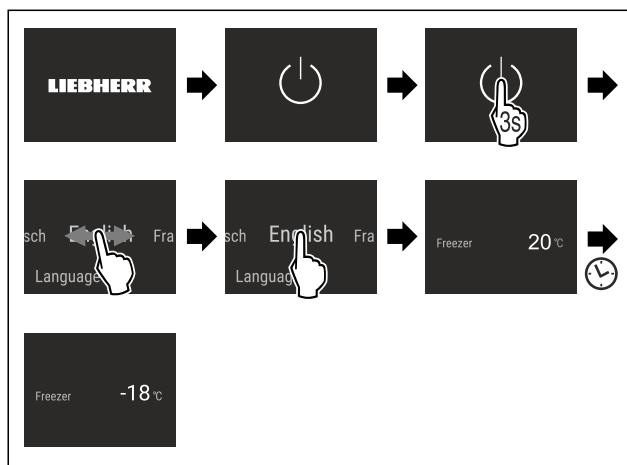


Fig. 38 Example illustration

- ▶ Status display appears.
- ▶ The appliance cools to the temperature set at the factory.
- ▶ The appliance starts in demo mode (status display with DEMO appears): If the appliance starts in demo mode, you can deactivate demo mode within the next 5 minutes. (see Demo mode)

## More information:

- When you start up the appliance, the **status light** (status display) is deactivated by default. Activate the status light. (see Status light (status display)\*) \*
- Start the IceMaker for the first time. (see 5.2 Starting the IceMaker for the first time)
- Start the SmartDevice for the first time. (see 2.3 SmartDevice) and (see WiFi)

## Note

The manufacturer recommends:

- ▶ **Store frozen foods** at -18 °C or colder.
- ▶ Observe the notes on storing food. (see 6.1 Information regarding storage)

## Note

Accessories can be purchased from the Liebherr-Hausgeräte store at [home.liebherr.com/shop/de/deu/zubehor.html](http://home.liebherr.com/shop/de/deu/zubehor.html).

## 5.2 Starting the IceMaker for the first time

If your appliance is equipped with IceMaker, you must clean the IceMaker **before using it for the first time**.

Make sure that the following requirements are fulfilled:

- ❑ The water supply has been connected. See Installation Guide or mounting instructions.
- ❑ The appliance is properly connected.
- ▶ Clean the IceMaker. (see 10.3.5 Cleaning the IceMaker)

## 6 Storage

### 6.1 Information regarding storage



## WARNING

Fire hazard from electrical appliances!

If you use electrical appliances in the food area of your appliance, they can cause a fire.

- ▶ Do not use electrical appliances in the food area of the appliance unless recommended by the manufacturer.

## Note

The energy consumption increases and the cooling power goes down if ventilation is not sufficient.

- ▶ Always keep air slots clear.

Observe the following specifications for storage:

- Package food properly.
- Package raw meat or fish in clean, closed containers. This will prevent meat or fish from touching or dripping onto other food.
- Leave space between goods to ensure good air circulation.
- Store food according to the instructions on the packaging.
- Always observe the best-before date indicated on the packaging.

## Note

Failure to follow these guidelines can lead to foodstuffs spoiling.

### 6.2 Freezer compartment

Here, a dry, frosty storage climate is created at -18 °C. The frosty storage climate is suitable for storing frozen food for several months, for making ice cubes or freezing fresh food.

#### 6.2.1 Freezing food

##### Freezing quantity

The maximum amount of fresh food that you can freeze within 24 hours is specified on the type plate (see 11.5 Model plate) under "Freezing capacity ... kg/24h".

To ensure that food quickly freezes through, adhere to the following quantities per package:

- Fruit and vegetables up to 1 kg
- Meat up to 2.5 kg

##### Freezing food using SuperFrost

Depending on the quantity to be frozen, you can activate SuperFrost before freezing in order to achieve lower freezing temperatures. (see SuperFrost)

- ▶ Activate SuperFrost if the amount of food you have to freeze is more than approx. 2 kg.

The time at which you activate SuperFrost depends on the amount of food you have to freeze:

| Freezing quantity              | Time at which you should activate SuperFrost                                                                                                     |
|--------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|
| Small amount of food to freeze | Activate SuperFrost about 6 hours before freezing.<br>As soon as the appliance automatically deactivates SuperFrost, you can rearrange the food. |

| Freezing quantity                | Time at which you should activate SuperFrost                                                                                                                 |
|----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Maximum amount of food to freeze | <p>Activate SuperFrost about 24 hours before freezing.</p> <p>As soon as the appliance automatically deactivates SuperFrost, you can rearrange the food.</p> |

## Arranging your food properly



### CAUTION

Risk of injury from broken glass!

Bottles and cans with beverages can burst during freezing. This applies in particular to carbonated beverages.

- Only freeze bottles and cans with beverages if you have activated the BottleTimer function in the SmartDevice app.

| Freezing quantity                | Arranging your food properly                                                                                                                                                                    |
|----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Small amount of food to freeze   | Place packaged food in the top drawer. If possible, place groceries at the back of the drawer near the rear wall.                                                                               |
| Maximum amount of food to freeze | <p>Distribute packaged groceries throughout all drawers, but only place frozen food in the bottom drawer.</p> <p>If possible, place groceries at the back of the drawer near the rear wall.</p> |

## 6.2.2 Defrosting food



### WARNING

Risk of food poisoning!

- Do not re-freeze thawed food.
- Use defrosted foodstuff as soon as possible.

You can defrost food in several ways:

- In a fridge
- In the microwave
- In the oven/fan-assisted oven
- At room temperature
- Take out only as much food as necessary.

## 6.2.3 Freezer tray

You can freeze berries, herbs, vegetables and other small frozen food in the freezer tray without it all freezing together. The frozen food is less likely to get squashed and subsequent portioning is easier.

In addition, you can store the cold storage accumulators in the freezer tray to save space.

- Distribute food on the freezer tray without packaging and well spaced out.

## 6.3 Storage times

Refer to the specified storage times as a guide.

In the case of foods with a minimum shelf life, the date indicated on the packaging still applies.

| Recommended storage period for various types of food |           |               |
|------------------------------------------------------|-----------|---------------|
| Ice cream                                            | at -18 °C | 2 to 6 months |
| Sausages, ham                                        | at -18 °C | 2 to 3 months |

| Recommended storage period for various types of food |           |                |
|------------------------------------------------------|-----------|----------------|
| Bread, baked goods                                   | at -18 °C | 2 to 6 months  |
| Game, pork                                           | at -18 °C | 6 to 9 months  |
| Fatty fish                                           | at -18 °C | 2 to 6 months  |
| Lean fish                                            | at -18 °C | 6 to 8 months  |
| Cheese                                               | at -18 °C | 2 to 6 months  |
| Poultry, beef                                        | at -18 °C | 6 to 12 months |
| Vegetables, fruit                                    | at -18 °C | 6 to 12 months |

## 7 Saving energy

- Pay attention to good ventilation. Do not cover ventilation holes or grids.
- Always keep the fan air slits clear.
- Do not place the appliance in direct sunlight or near radiators or similar sources of heat.
- If the appliance is placed directly next to an oven, the energy consumption may increase slightly. This is dependent on the service life and usage intensity of the oven.
- Energy consumption depends on the installation conditions, e.g. the ambient temperature. A warmer ambient temperature can increase the energy consumption.
- Open the appliance for as short a time as possible.
- The lower the temperature is set the higher the energy consumption.
- Keep all food properly packed and covered. This prevents frost from forming.
- Inserting warm food: allow to cool down to room temperature first.

## 8 Controls

### 8.1 Controls and displays

#### 8.1.1 Status display

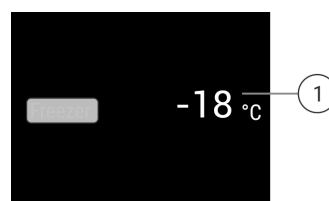


Fig. 39 The status display shows the actual temperature.

#### (1) Temperature display

The status display shows the actual temperature and is the initial display. Navigation to the functions takes place from there.

#### 8.1.2 Display symbols

Display symbols provide information on the current appliance status:

| Symbol | Appliance status                                                                |
|--------|---------------------------------------------------------------------------------|
|        | <p><b>Standby</b></p> <p>The appliance or temperature zone is switched off.</p> |



This ensures that the nutrition, appearance and taste of frozen food is maintained.

- Increase the cold reserve in stored frozen food before defrosting the appliance.

If the function is active, the appliance operates at higher power. As a result, the appliance's operating noise may be temporarily louder and energy consumption will increase.

If the door is open for too long, e.g. because you are putting food in, the appliance automatically checks whether the actual temperature in the appliance matches the set temperature. If the difference exceeds a certain value, the appliance automatically cools more vigorously. As a result, the temperature shown on the display may be higher than the actual temperature in the appliance. This is normal and your appliance is working correctly.\*

## Activating SuperFrost

Make sure that the following requirements are fulfilled:

- ☐ Freezing quantity and time for activation of SuperFrost are taken into account. (see Freezing food using SuperFrost)

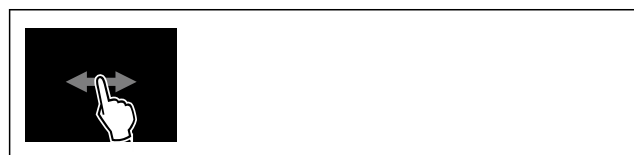


Fig. 44

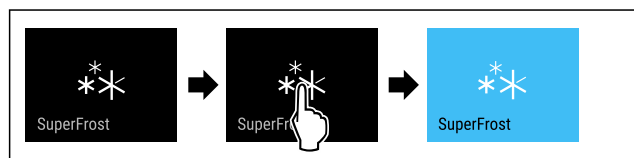


Fig. 45

- ▶ Carry out action steps according to the illustration.
- or-
- ▶ Activate with the SmartDevice app.
- ▶ SuperFrost is activated.
- ▶ The temperature display turns blue.

## Deactivating SuperFrost

SuperFrost is automatically deactivated after 56 to 72 hours depending on the quantity of the food inserted. However, you can also deactivate SuperFrost manually at any time:

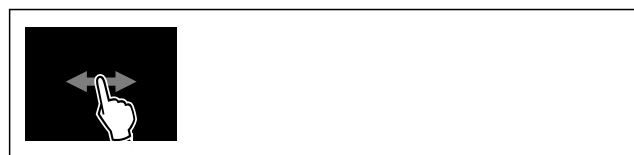


Fig. 46

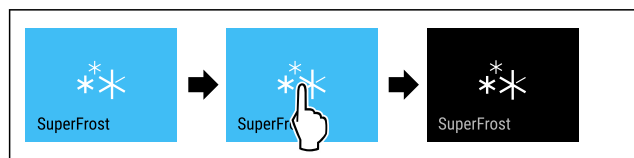


Fig. 47

- ▶ Carry out action steps according to the illustration.
- or-
- ▶ Deactivate with the SmartDevice app.
- ▶ SuperFrost is deactivated.
- ▶ The appliance continues to run in normal mode.
- ▶ The appliance cools to the temperature set previously.



## PartyMode

You can use this function to activate or deactivate PartyMode. PartyMode activates various functions that are useful for a party.

PartyMode activates the following functions:

- SuperFrost (see SuperFrost)
- IceMaker with MaxIce (see IceMaker / MaxIce )

You can adjust all listed functions individually and flexibly. When you deactivate PartyMode, all changes are discarded.

If the function is active, the device operates at higher power. As a result, the device's operating noise may be temporarily louder and energy consumption will increase.

## Activating PartyMode

Make sure that the following requirements are fulfilled:

- ☐ The IceMaker has been started. (see 5.2 Starting the IceMaker for the first time)



Fig. 48



Fig. 49

- ▶ Carry out action steps according to the illustration.
- ▶ PartyMode and the associated functions are activated.
- ▶ The temperature display turns blue.
- ▶ The current temperature flashes until the target temperature is reached.

## Deactivating PartyMode

The PartyMode is automatically deactivated after 24 seconds. However, you can also deactivate PartyMode manually at any time:



Fig. 50



Fig. 51

- ▶ Carry out action steps according to the illustration.
- ▶ PartyMode is deactivated.
- ▶ The appliance cools to the temperature set previously: The current temperature flashes until the target temperature is reached.



## SabbathMode

You can use this function to activate or deactivate SabbathMode. If you activate this function, some electronic functions are switched off. As a result, your device meets the religious requirements for Jewish holidays such as Sabbath and complies with STAR-K Kosher certification.

| Device status when SabbathMode is active                                                                  |
|-----------------------------------------------------------------------------------------------------------|
| The status display shows SabbathMode permanently.                                                         |
| All functions on the display are locked except for the <b>Deactivate SabbathMode function</b> .           |
| Active functions remain active.                                                                           |
| The display remains bright when you close the door.                                                       |
| The interior lighting is deactivated.                                                                     |
| Reminders are not implemented. The set time interval stops.                                               |
| Reminders and warnings are not displayed.                                                                 |
| There is no door alarm.                                                                                   |
| There is no temperature alarm.                                                                            |
| The IceMaker is switched off.                                                                             |
| The defrosting cycle operates only for the specified time, without considering the appliance consumption. |
| After a power failure, the appliance returns to SabbathMode.                                              |

*Device status*

### Note

This appliance has certification from the "Institute for Science and Halacha". ([www.machonhalacha.co.il](http://www.machonhalacha.co.il))

You can find a list of STAR-K-certified appliances at [www.star-k.org/appliances](http://www.star-k.org/appliances).

### Activating SabbathMode



### WARNING

Danger of food poisoning from spoiled food!  
If you have SabbathMode activated and a power failure occurs, no message appears in the status display about the power failure. Once the power is restored, the appliance continues to operate in SabbathMode. The power failure may mean that food spoils and the consumption of this food could lead to food poisoning.

After a power failure:

- Do not consume food that was frozen and has thawed out.



Fig. 52

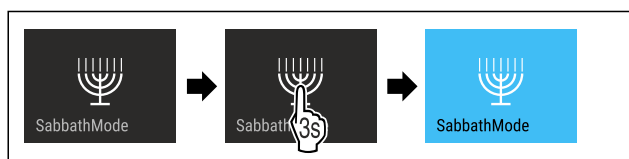


Fig. 53

- Carry out action steps according to the illustration.
- SabbathMode is activated.
- The status display shows SabbathMode permanently.

### Deactivating SabbathMode

The SabbathMode is automatically deactivated after 80 hours. However, you can also deactivate SabbathMode manually at any time:

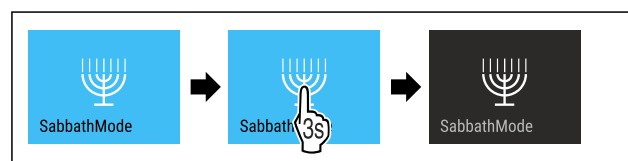


Fig. 54

- Carry out action steps according to the illustration.
- SabbathMode is deactivated.



## EnergySaver

You can use this function to activate or deactivate Energy saving mode. If energy saving mode is activated, the energy consumption decreases and the temperature in the device increases. The food remains fresh, but the shelf life is shortened.

| Temperature zone | Recommended setting (see Setting the temperature) | Temperature with active EnergySaver |
|------------------|---------------------------------------------------|-------------------------------------|
| -18 °C           | -18 °C                                            | -16 °C                              |

*Temperatures*

### Activating EnergySaver



Fig. 55

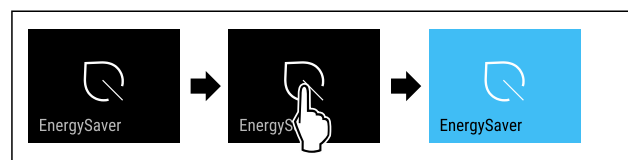


Fig. 56

- Carry out action steps according to the illustration.
- Energy saving mode is activated.

### Deactivating EnergySaver



Fig. 57

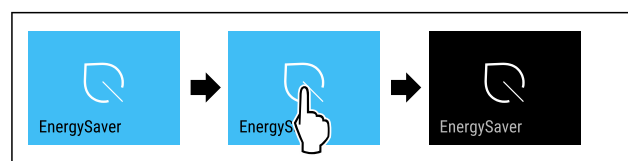


Fig. 58

- Carry out action steps according to the illustration.
- Energy saving mode is deactivated.



## IceMaker / MaxIce

Use the IceMaker function to activate or deactivate the production of ice cubes. Use the MaxIce function to increase the amount of ice cubes produced by the IceMaker. MaxIce is automatically deactivated after 48 hours. However, you can also deactivate MaxIce manually at any time: (see Deactivating MaxIce)

|                                                         |                                     |
|---------------------------------------------------------|-------------------------------------|
| More information on the number of ice cubes:            | (see 11.1 Technical specifications) |
| Further information on the IceMaker water supply:       | (see IceMaker water supply)         |
| More information on cleaning the lines of the IceMaker: | (see TubeClean)                     |

If the function is active, the device operates at higher power. As a result, the device's operating noise may be temporarily louder and energy consumption will increase.

### Activating IceMaker

Make sure that the following requirements are fulfilled:

- ☐ The water supply is established at the fixed water connection. See installation instructions.
- ☐ IceMaker is put into operation. (see 9.4 IceMaker)



Fig. 59

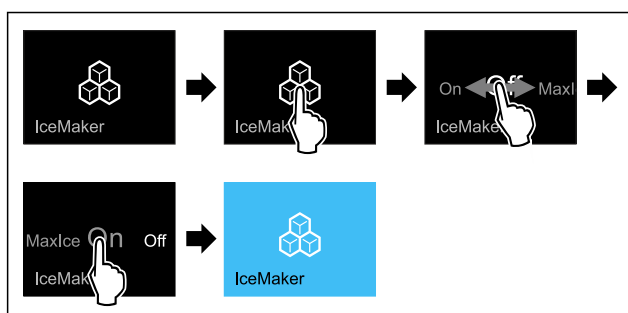


Fig. 60

- ▶ Carry out action steps according to the illustration.
- or-
- ▶ Activate with the SmartDevice app.
- ▶ IceMaker is activated. It can take up to 24 hours for the IceMaker to produce the first ice cubes.

### Activating the IceMaker with MaxIce

If you have not activated the IceMaker function before, make sure that the following requirements are met:

- ☐ The water supply is established at the fixed water connection. See installation instructions.
- ☐ IceMaker is put into operation. (see 9.4 IceMaker)

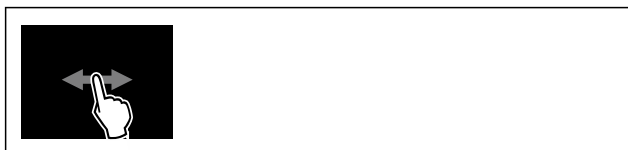


Fig. 61

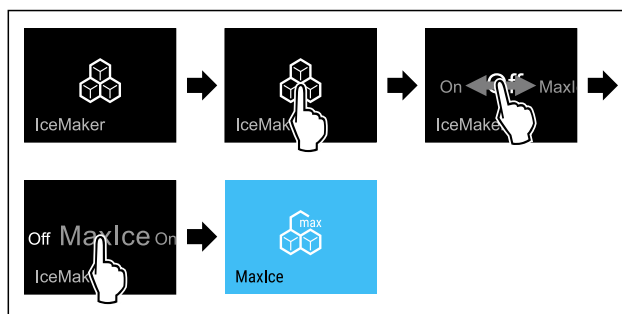


Fig. 62

- ▶ Carry out action steps according to the illustration.
- or-
- ▶ Activate with the SmartDevice app.
- ▶ The IceMaker is activated with MaxIce.

### Changing between the IceMaker and MaxIce

If you have activated the IceMaker and would like to change to MaxIce:



Fig. 63

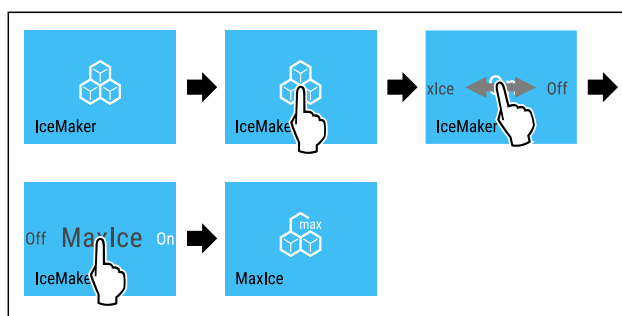


Fig. 64

- ▶ Carry out action steps according to the illustration.
- ▶ The IceMaker is activated with MaxIce.

If you have activated MaxIce and would like to change to the IceMaker:

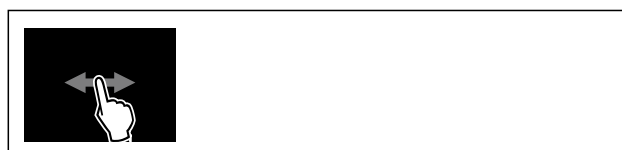


Fig. 65

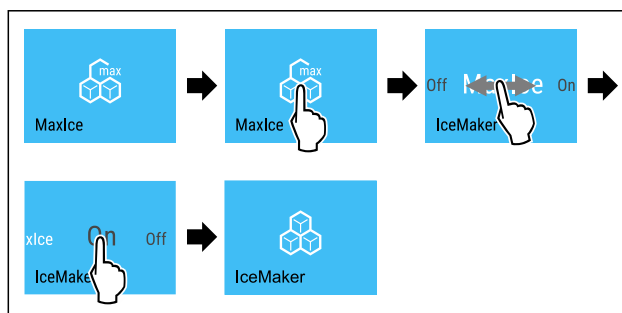


Fig. 66

- ▶ Carry out action steps according to the illustration.
- ▶ IceMaker is activated.
- ▶ MaxIce is deactivated.

# Controls

## Deactivating the IceMaker and MaxIce



Fig. 67

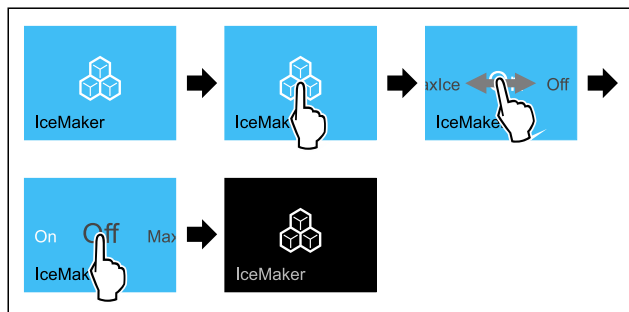


Fig. 68 Example illustration of the active IceMaker function

- Carry out action steps according to the illustration.
- or-
- Deactivate with the SmartDevice app.
- IceMaker and MaxIce are deactivated.
- If ice cubes are currently being made, the system completes the process.
- The IceMaker goes off automatically.

## Deactivating MaxIce

- Activate the IceMaker. (see Activating IceMaker )
- MaxIce is deactivated.
- IceMaker is activated.
- To deactivate the IceMaker and MaxIce: (see Deactivating the IceMaker and MaxIce)

5

## IceMaker water supply

Use this function to set the water supply. The water supply regulates the amount of water supplied. The water supply can be changed if it does not match the water pressure and the ice cube size dispensed.

The water supply is pre-set to value 4 as delivered. A value from 1 (smallest inflow volume) to 8 (largest inflow volume) can be selected.

## Setting water supply

Make sure that the following requirements are fulfilled:

- ☐ The IceMaker has been started. (see 5.2 Starting the IceMaker for the first time)
- ☐ IceMaker is activated. (see IceMaker / MaxIce )



Fig. 69

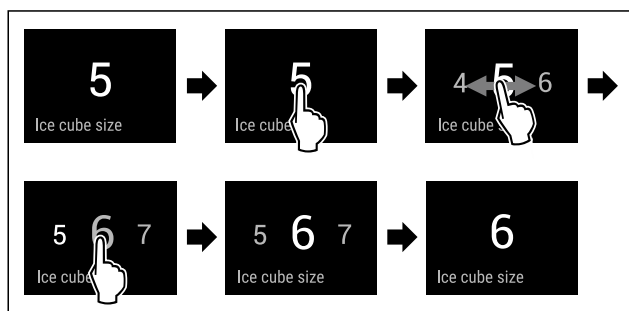


Fig. 70 Example illustration: Switch from value 5 to value 6.

- Carry out action steps according to the illustration.
- The water supply is set.



## TubeClean

You can use this function to activate or deactivate TubeClean. If TubeClean is activated, it cleans the IceMaker lines.

## Activating TubeClean

Make sure that the following requirements are fulfilled:

- ☐ IceMaker cleaning is prepared. (see 10.3.5 Cleaning the IceMaker)
- ☐ Empty container with a capacity of 1.5 l and with a maximum height of 10 cm is ready.
- Place the container in the drawer under the IceMaker.



Fig. 71

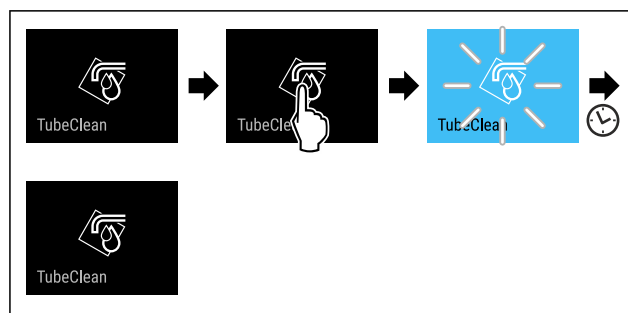


Fig. 72

- Carry out action steps according to the illustration.
- TubeClean is activated.
- The cleaning process has started: Icon flashes until the cleaning process is automatically completed after 60 minutes.
- When the cleaning process is complete: The device continues to run in normal mode.

## Deactivating TubeClean

TubeClean is automatically ended after 60 minutes. However, TubeClean can also be deactivated at any time during the cleaning process:



Fig. 73

- Carry out action steps according to the illustration.
- TubeClean is deactivated: Cleaning process is aborted.
- The device continues to run in normal mode.



## Input lock

You can use this function to activate or deactivate the input lock. The input lock prevents the appliance being operated accidentally, e.g. by children.

Application:

- Avoid unintentional modification of functions.

- Avoid unintentional switching off of the device.
- Avoid unintentional temperature setting.

## Activating the input lock

If you activate the input lock, you can continue to navigate in the menus but you cannot select or change other functions.



Fig. 74

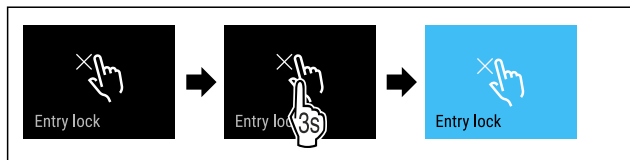


Fig. 75

- ▶ Carry out action steps according to the illustration.
- ▶ Input lock is activated.

## Deactivating the input lock



Fig. 76

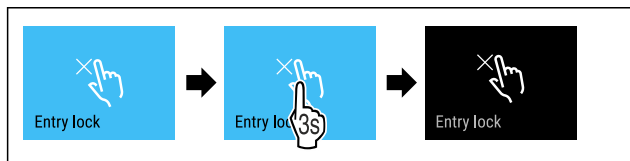


Fig. 77

- ▶ Carry out action steps according to the illustration.
- ▶ Input lock is deactivated.

## Reminder

Use this function to activate or deactivate the reminders. The function is activated on delivery.

### Activating the reminder



Fig. 78

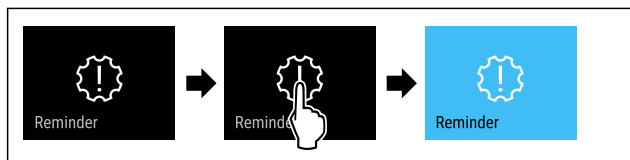


Fig. 79

- ▶ Carry out action steps according to the illustration.
- ▶ Reminder is activated.

### Deactivating the reminder



Fig. 80

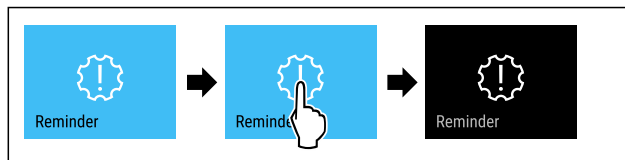


Fig. 81

- ▶ Carry out action steps according to the illustration.
- ▶ Reminder is deactivated.



## Language

Use this function to set the display language.

You can select the following languages:

- Deutsch
- English
- Français
- Español
- Italiano
- Nederlands
- Čeština
- Polski
- Português
- Bulgarian
- Русский
- 温度单位

### Setting the language



Fig. 82

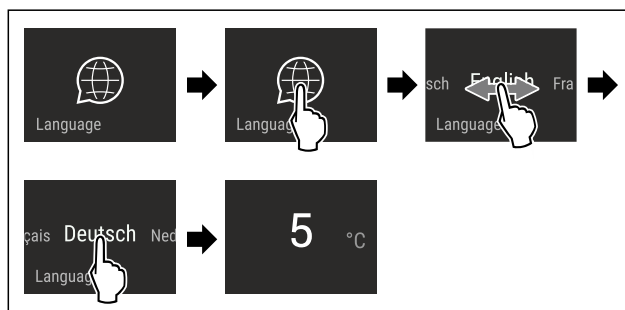


Fig. 83 Example illustration depending on the language and temperature

- ▶ Carry out action steps according to the illustration.
- ▶ The language is set.
- ▶ The display returns to the status display.



## Temperature unit

Use this function to set the temperature unit. You can set degrees Celsius or degrees Fahrenheit as the temperature unit.

### Setting the temperature unit



Fig. 84

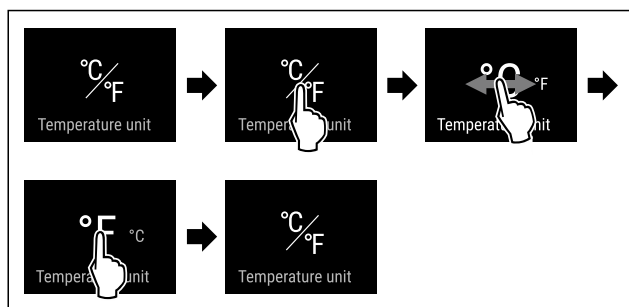


Fig. 86 Example illustration: Switch from degrees Celsius to degrees Fahrenheit.

- Carry out action steps according to the illustration.
- The temperature unit is set.



## Status light (status display)\*

This function activates and deactivates the status light (status display). When you start up the appliance, the status light is deactivated by default. After you have activated the status light, the colour of the light indicates the status of the appliance when the door is closed. When the door is open, the status light is inactive.

| Status light         | Status of the appliance                            |
|----------------------|----------------------------------------------------|
| Blue light           | The appliance is working perfectly.                |
| Red, pulsating light | Power failure (see 8.3.1 Overview of warnings)     |
| Audible signal       | Temperature alarm (see 8.3.1 Overview of warnings) |
|                      | Error (see 8.3.1 Overview of warnings)             |

Meaning of the colour of the status light

## Activating the status light



Fig. 87

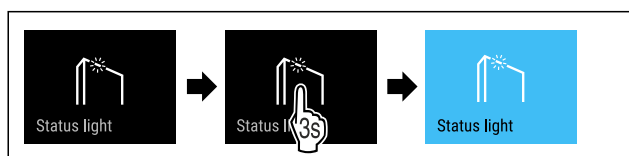


Fig. 88

- Carry out action steps according to the illustration.

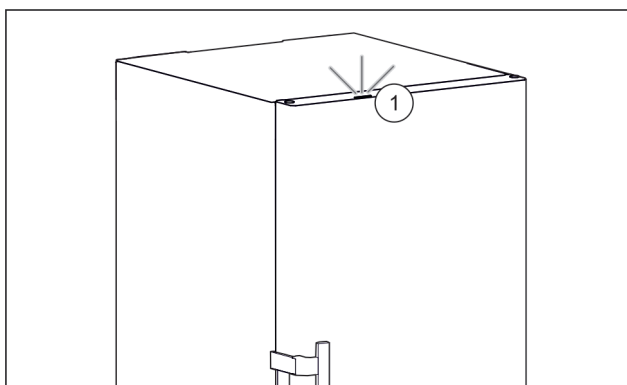


Fig. 89 Active status light when the door is closed

- Status light Fig. 89 (1) is activated.
- The status light lights up blue or red when the door is closed.

## Deactivating the status light



Fig. 90

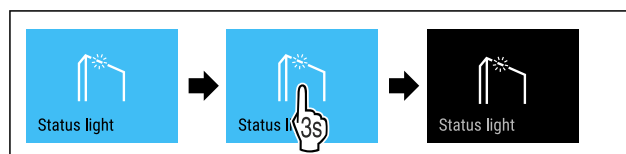


Fig. 91

- Carry out action steps according to the illustration.
- Status light is deactivated.



## Display brightness

Use this function to set the display brightness in stages.

You can select the following brightness levels:

- 40 %
- 60 %
- 80 %
- 100 % (pre-setting)

## Setting the brightness



Fig. 92

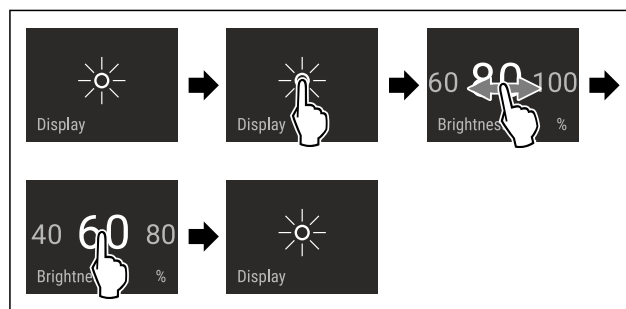


Fig. 93 Example illustration: Switch from 80 % to 60 %.

- Carry out action steps according to the illustration.
- The brightness is set.



## WiFi

Use this function to connect your appliance to WiFi. You can then operate it via the SmartDevice app on a mobile device. You can also use this function to disconnect or reset the WiFi connection.

More information on the SmartDevice: (see 2.3 SmartDevice)

### Note

The SmartDevice function is not available in the following countries: Russia, Belarus, Kazakhstan.

## Establishing the WiFi connection for the first time

Make sure that the following requirements are fulfilled:

- ☐ You have installed the SmartDevice app (see [apps.home.liebherr.com](https://apps.home.liebherr.com)).
- ☐ Registration in the SmartDevice app is completed.




Fig. 94

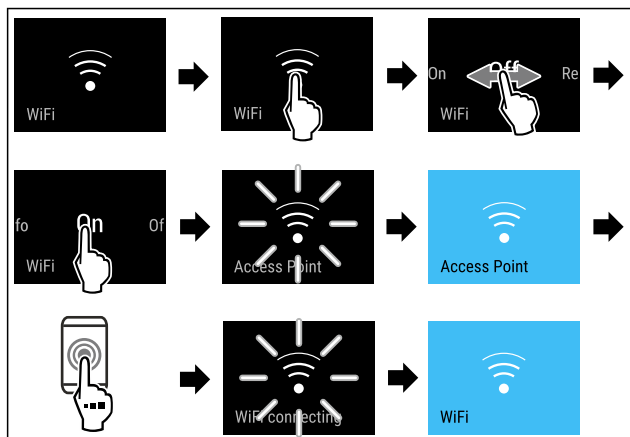


Fig. 95

- Carry out action steps according to the illustration.
- Connection is established.

## Disconnecting from the WiFi



Fig. 96

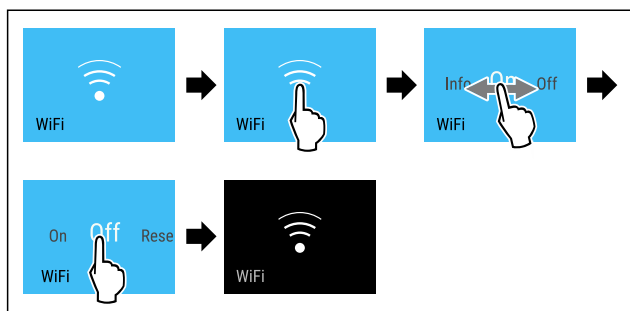


Fig. 97

- Carry out action steps according to the illustration.
- There is no connection.

## Resetting the WiFi connection



Fig. 98

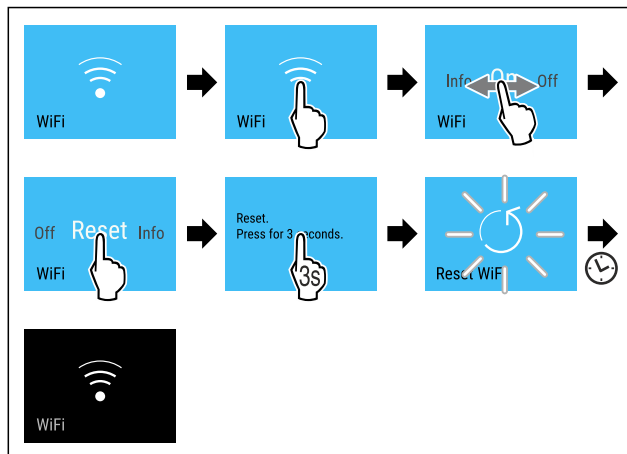


Fig. 99

- Carry out action steps according to the illustration.
- WiFi connection and other WiFi settings are reset to factory settings.

## Showing information about the WiFi connection



Fig. 100

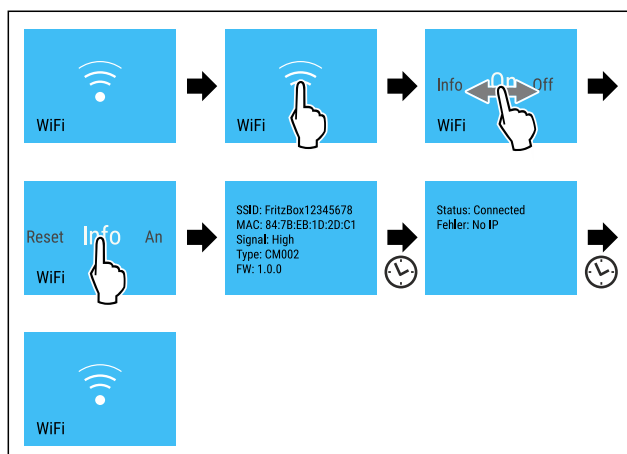


Fig. 101

- Carry out action steps according to the illustration.

## Device information


Use this function to indicate the model name, index, serial number and service number of your device. You will need the device information when you contact customer service. (see 11.4 Customer Service)

This function also opens the Advanced menu. (see 4 Functionality of the Touch & Swipe display)

## Indicating the device information



Fig. 102

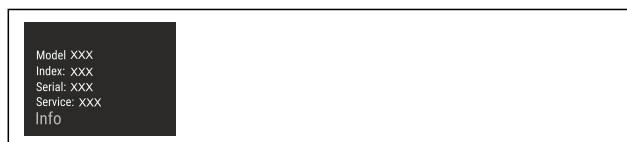

# Controls

Fig. 103

- ▶ Carry out action steps according to the illustration.
- ▶ Display indicates device information.



## Software

Use this function to indicate the software version of your device.

### Indicating the software version



Fig. 104

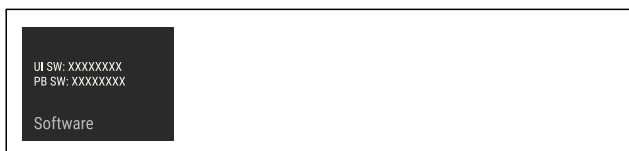


Fig. 105

- ▶ Carry out action steps according to the illustration.
- ▶ Display indicates software version.



## Start defrosting cycle

Use this function to start the automatic defrosting cycle manually if it does not start automatically in the event of a fault.

### Starting defrosting cycle



Fig. 106

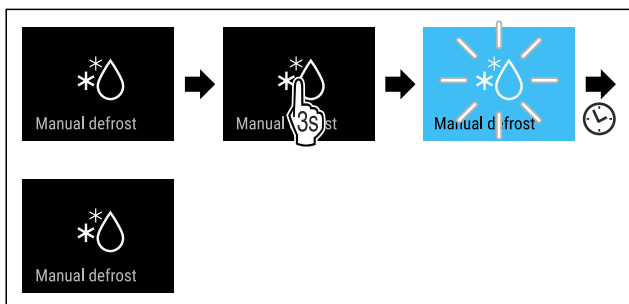


Fig. 107

- ▶ Carry out action steps according to the illustration.
- ▶ Defrosting cycle has started: Icon flashes until defrosting cycle is automatically completed.
- ▶ When defrosting cycle is finished: The device continues to run in normal mode.

### Cancelling defrosting cycle

The defrosting cycle will be stopped automatically. However, you can also cancel the defrosting cycle at any time during the defrosting process:

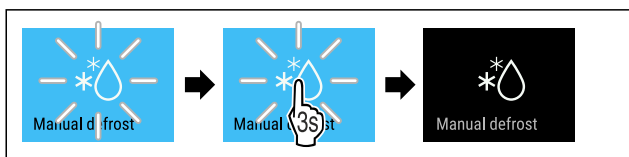


Fig. 108

- ▶ Carry out action steps according to the illustration.

- ▶ Defrosting cycle is cancelled.
- ▶ The device continues to run in normal mode.



## Door alarm

Use this function to activate or deactivate the door alarm. The door alarm sounds if the door is open for too long. The door alarm is activated on delivery. You can set how long the door may be open before the door alarm sounds.

The following values can be set:

- 1 minute
- 2 minutes
- 3 minutes
- Off

### Setting the door alarm



Fig. 109

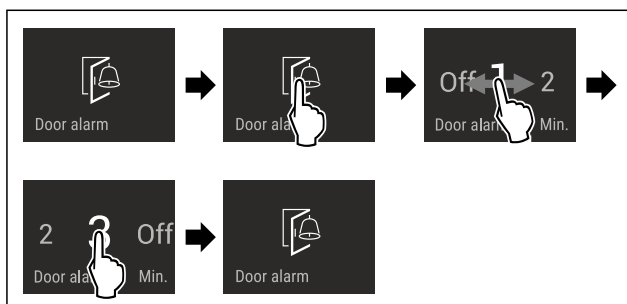


Fig. 110 Example illustration: Change door alarm from 1 minute to 3 minutes.

- ▶ Carry out action steps according to the illustration.
- ▶ The door alarm is set.

### Deactivating the door alarm




Fig. 112

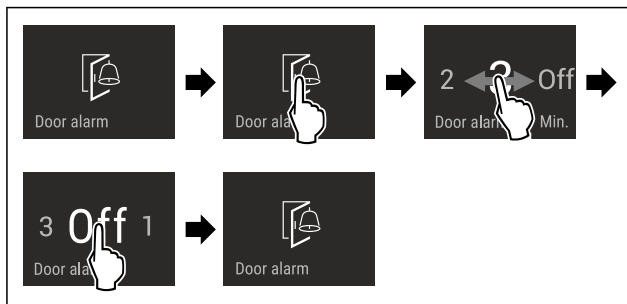


Fig. 113

- ▶ Carry out action steps according to the illustration.
- ▶ The door alarm is deactivated.



## Demo mode

Demo mode is a special feature for dealers who want to demonstrate appliance features. If you activate demo mode, all refrigeration functions are deactivated.

If you switch on your appliance and "Demo" appears in the status display, then demo mode is already activated.

If you activate and then deactivate demo mode, the appliance will be reset to factory defaults. (see Resetting to factory settings)

## Activating demo mode



Fig. 114

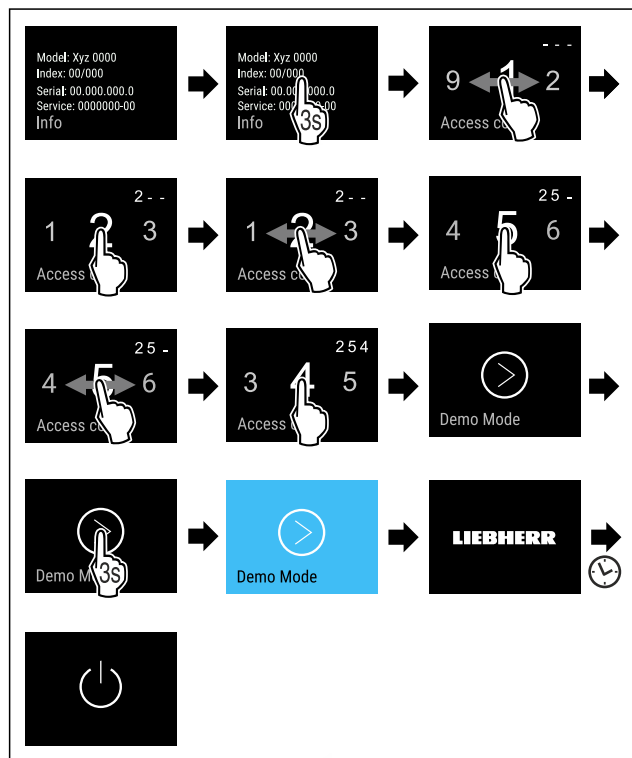


Fig. 115

- Carry out action steps according to the illustration.
- Demo mode is activated.
- Appliance is switched off.
- Switch on the appliance. (see 5.1 Switching on appliance (first use))
- "DEMO" appears in the status display.

## Deactivating demo mode



Fig. 116

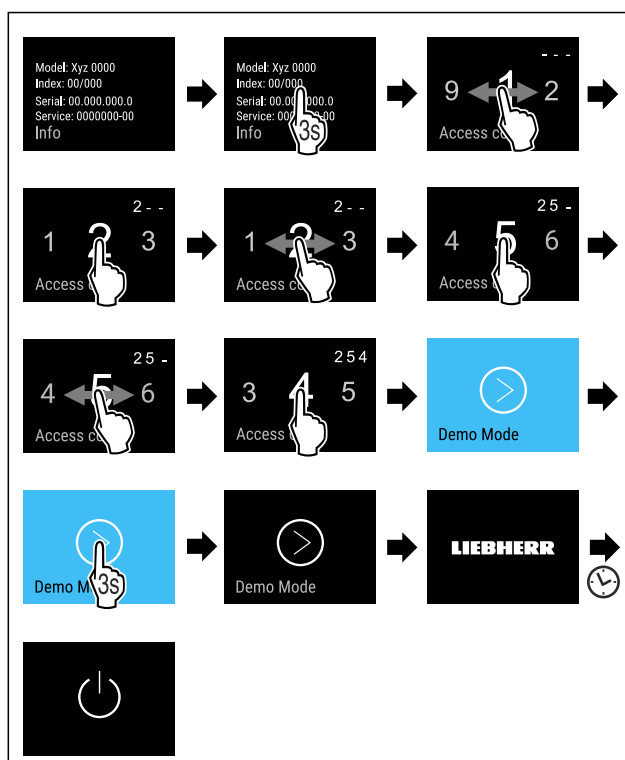


Fig. 117

- Carry out action steps according to the illustration.
- Demo mode is deactivated.
- Appliance is switched off.
- Switch on the appliance. (see 5.1 Switching on appliance (first use))
- Appliance is reset to factory settings.



## Resetting to factory settings

Use this function to reset all settings to factory defaults. All settings you have made so far are reset to their original settings.

### Performing a reset



Fig. 118

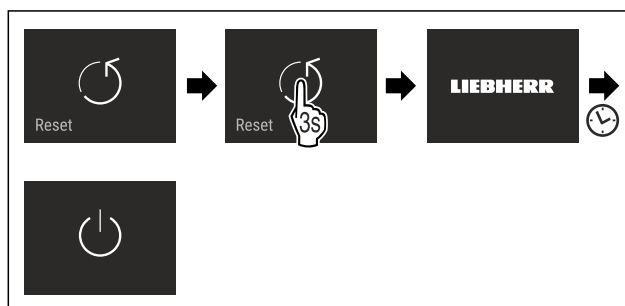


Fig. 119

- Carry out action steps according to the illustration.
- Device is reset.
- Device is switched off.
- Restart the device. (see 5.1 Switching on appliance (first use))

## 8.3 Messages




There are two categories of messages:

| Category | Importance                                                                                                                                                                                                         |
|----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Warning  | Warnings appear in the event of a door alarm or malfunction.<br>Simple warnings can be cancelled by yourself. In the event of serious malfunctions, you must contact customer service. (see 11.4 Customer Service) |
| Reminder | Reminders remind you of general processes. You can carry out these operations to end the message.                                                                                                                  |

### 8.3.1 Overview of warnings

Behaviour of the appliance in the event of warnings:

- Warning appears in red on the display.
- The alarm tone sounds at an ever-increasing volume.
- The interior lighting pulsates for some warnings.

| Message                                                                                                          | Cause                                                                                                                                                                                 | Exit the message                                |
|------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------|
| <br><b>Door alarm</b>           | The message appears if the door is open for too long.                                                                                                                                 | Carry out action steps. (see Door alarm)        |
| <br><b>Power outage alarm</b> | The message appears if the freezing temperature has risen due to a power failure.                                                                                                     |                                                 |
| <br><b>Temperature alarm</b>  | The message appears if the freezing temperature does not correspond to the set temperature.                                                                                           | Carry out action steps. (see Temperature alarm) |
| <br><b>Error</b>              | The message appears if there is an appliance error. A component of the appliance has a fault.                                                                                         | Carry out action steps. (see Error)             |
| <br><b>WLAN error</b>         | The message appears if the appliance could not be connected to the WLAN. (see Establishing the WiFi connection for the first time) The message only appears during the initial setup. | Carry out action steps. (see WLAN error)        |

### 8.3.2 Ending warnings

**Door alarm**

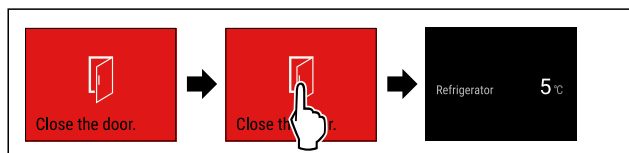


Fig. 120 Example illustration

- ▶ Carry out action steps according to the illustration.
  - or-
  - ▶ Close the door.
  - ▶ The display returns to the status indicator.
  - ▶ The appliance cools more vigorously, which means that the temperature shown on the display may be higher than the actual temperature inside the appliance.\*
  - ▶ Appliance noises can be louder.\*
- You can set how long the door may be open before the door alarm sounds. (see Setting the door alarm)

#### Power outage alarm

When the power failure has ended, the appliance will automatically cool down to the previously set target temperature without you having to confirm the message. However, for the message to disappear from the display, you must confirm it.

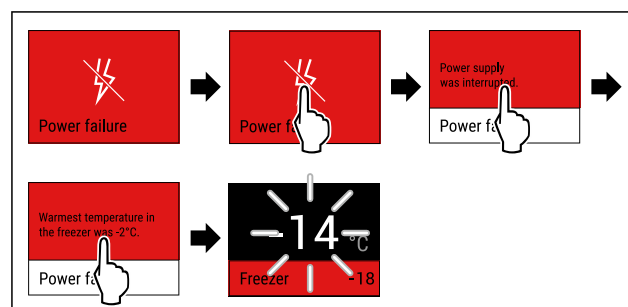


Fig. 121 Example illustration

- ▶ Briefly touch the display.
- ▶ Display shows information about the warning.
- ▶ Briefly touch the display.
- ▶ Warmest freezing temperature is displayed.
- ▶ If the freezing temperature was below -9 °C: Food can still be consumed.
- ▶ If the freezing temperature has risen above -9 °C:
  - ▶ Check the food.
- ▶ Briefly touch the display.
- ▶ The display returns to the status indicator: Current temperature and target temperature are displayed.

#### Temperature alarm

Temperature differences can be caused by:

- You have put in warm, fresh food.
- Too much warm air has got in while you were sorting out the freezer or removing items.
- There has been a longer power failure.
- The appliance is faulty.
- ▶ Eliminate causes.
- ▶ The appliance cools to the target temperature set previously.

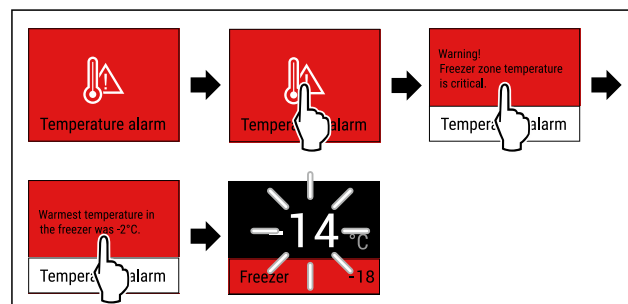


Fig. 122 Example illustration

- ▶ Briefly touch the display.
- ▶ Display shows information about the warning.
- ▶ Briefly touch the display.
- ▶ Warmest freezing temperature is displayed.

- ▶ If the freezing temperature was below -9 °C: Food can still be consumed.  
If the freezing temperature has risen above -9 °C:
- ▶ Check the food.
- ▶ Briefly touch the display.
- ▶ The display returns to the status indicator: Current temperature and target temperature are displayed.

## Error

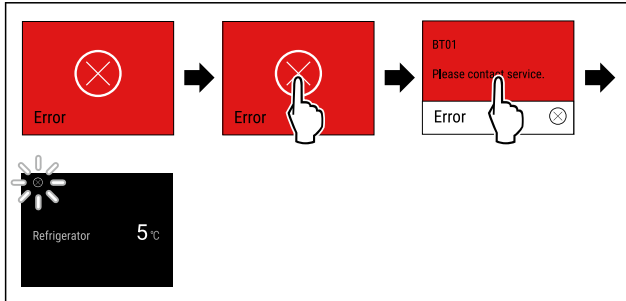


Fig. 123 Example illustration

- ▶ Briefly touch the display.
- ▶ Error code is displayed.
- ▶ Note the error code.
- ▶ Briefly touch the display.
- ▶ The display returns to the status indicator.
- ▶ Contact Customer Service. (see 11.4 Customer Service)

## WLAN error



- ▶ Check WLAN connection.
- ▶ Reconnect the appliance to the WLAN. (see WiFi)

## 8.3.3 Overview of reminders

Behaviour of the appliance during reminders:

- Reminder appears yellow on the display.
- Alarm tone sounds.
- The interior lighting pulsates for some reminders.

The following reminders can be deactivated (see Deactivating the reminder) :

| Message                                                                                                                 | Cause                                                                                                                              | Exit the message                                         |
|-------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------|
| <br><b>Check the water connection</b> | The message appears if the IceMaker is activated but the IceMaker is not being supplied with water via the fixed water connection. | Carry out action steps. (see Check the water connection) |
| <br><b>Insert the IceMaker drawer</b> | The message appears if the IceMaker is activated but the IceMaker drawer is open.                                                  | Carry out action steps. (see Insert the IceMaker drawer) |

## 8.3.4 Ending reminders

### Check the water connection

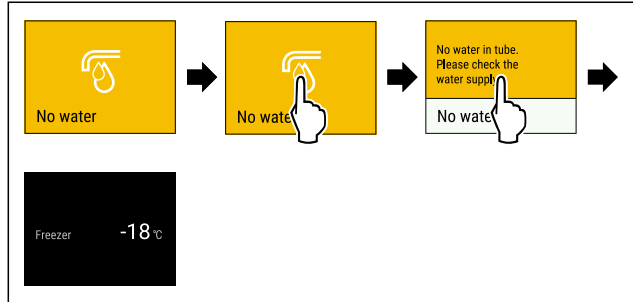


Fig. 124 Example illustration

- ▶ Briefly touch the display
- ▶ Display shows reminder information.
- ▶ Briefly touch the display
- ▶ Check the water connection.

-or-

- ▶ Deactivate IceMaker. (see Deactivating the IceMaker and MaxIce)

If water connection is checked and IceMaker is activated:

- ▶ Clean the IceMaker. (see 10.3.5 Cleaning the IceMaker)
- ▶ IceMaker produces ice cubes.

### Insert the IceMaker drawer

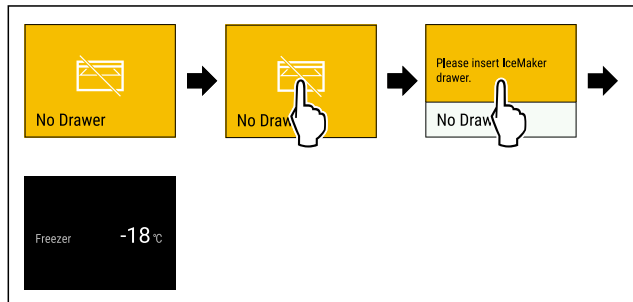


Fig. 125 Example illustration

- ▶ Briefly touch the display.
- ▶ Display shows reminder information.
- ▶ Briefly touch the display.
- ▶ Insert the IceMaker drawer.

-or-

- ▶ Deactivate IceMaker. (see IceMaker / MaxIce)

- ▶ If IceMaker drawer is inserted and IceMaker is activated: IceMaker produces ice cubes.

# 9 Features

## 9.1 Drawers

You can remove the drawers for cleaning.

You can remove the drawers to use VarioSpace.

The way to remove/insert the drawers varies depending on the pull-out system. Your appliance can contain various pull-out systems.

### Note

The energy consumption increases and the cooling power goes down if ventilation is not sufficient.

- ▶ Leave the bottom drawer in the appliance!
- ▶ Always leave the fan air vents clear on the back wall!

# Features

## 9.1.1 Drawer on telescopic rails

The drawer runs on extendible rails (telescopic rails). There are fully extendible telescopic rails and telescopic rails with partial pull-out. Drawers which are fully extendible can be pulled out fully from the appliance. Drawers with partial pull-out cannot be removed fully from the appliance. The system in your appliance depends on the type of appliance.

### Drawer on glass shelf

The drawer guided on a glass shelf is a partial pull-out.

### Removing drawer

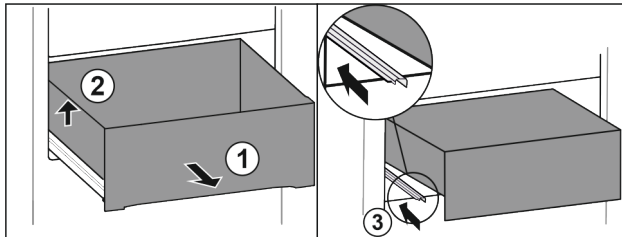


Fig. 126

- Pull out drawer as far as it will go. Fig. 126 (1)
- Lift drawer on the left. Fig. 126 (2)
- Insert left rail. Fig. 126 (3)

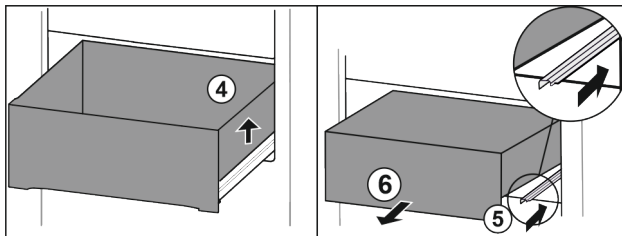


Fig. 127

- Lift drawer on the right. Fig. 127 (4)
- Insert right rail. Fig. 127 (5)
- Remove drawer to the front. Fig. 127 (6)

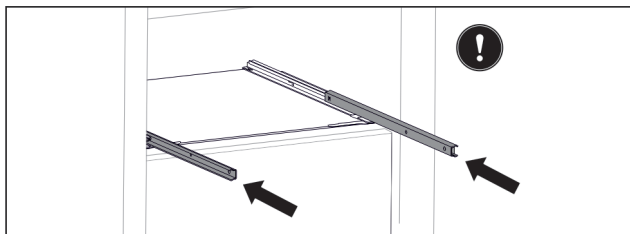


Fig. 128

If the rails are not yet fully inserted after removing the drawer:

- Push rails in completely.

### Inserting drawer

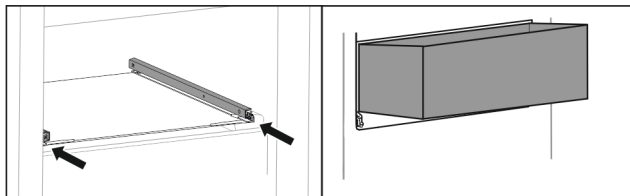


Fig. 129

- Slide rails in.
- Place drawer on rails at an angle.

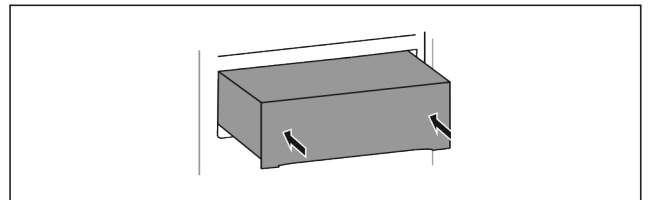


Fig. 130

- Lower drawer.
- Slide in drawer to the back.

## 9.1.2 Top tilting drawer

When you pull out the top drawer, it tilts forward. This gives you a better view into the drawer. The function depends on the height of the appliance.

### Removing drawer

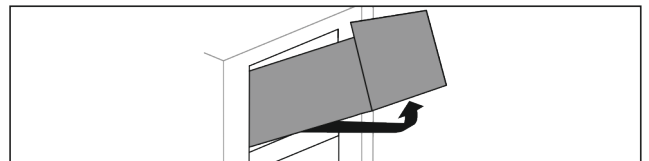


Fig. 131

- Pull out drawer as far as it will go.
- Lift drawer at the front.
- Lift drawer from below.
- Remove drawer to the front.

### Inserting drawer

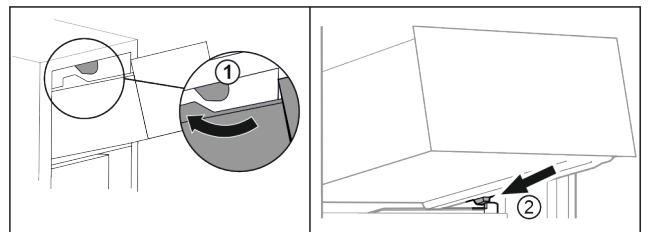


Fig. 132

- Guide drawer around the upper stoppers. Fig. 132 (1)
- Place drawer at an angle behind the lower stoppers onto moulded rib. Fig. 132 (2)
- Lower drawer.
- Slide to the back.

## 9.1.3 Drawer on moulded rib\*

The drawer runs directly on the moulded rib. There are no rails.

### Removing drawer

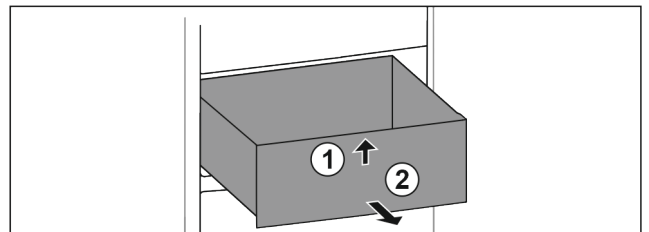


Fig. 133

- Pull out drawer as far as it will go.
- Lift up drawer at the front. Fig. 133 (1)
- Remove drawer to the front. Fig. 133 (2)

## Inserting drawer

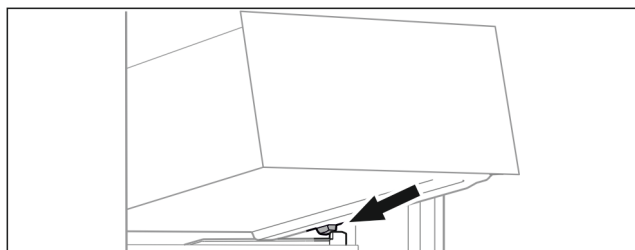


Fig. 134

- ▶ Place drawer at an angle behind the stoppers on the moulded rib. (see Fig. 134)
- ▶ Lower drawer.
- ▶ Slide in drawer to the back.

### 9.1.4 Bottom drawer

The drawer is the lowest drawer in the appliance. It runs directly on the moulded rib. There are no rails.

#### Removing drawer

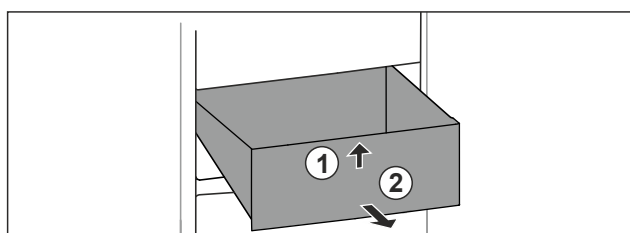


Fig. 135

- ▶ Pull out drawer as far as it will go.
- ▶ Lift up drawer at the front. Fig. 135 (1).
- ▶ Remove drawer to the front. Fig. 135 (2).

#### Inserting drawer

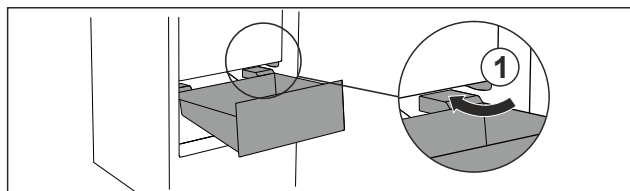


Fig. 136

- ▶ Guide drawer in at an angle around the stoppers Fig. 136 (1).
- ▶ Lower drawer.
- ▶ Slide in drawer to the back.

## 9.2 Pull-out board with IceTower

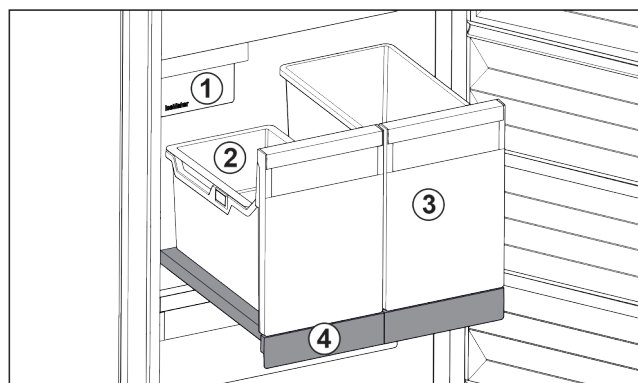


Fig. 137 Pull-out board with IceTower

- (1) IceMaker
- (3) Container for pizza or alcoholic beverages, for example

### (2) Hang-on tray for ice cubes

### (4) Pull-out board

There are two high (IceTower) containers on the pull-out board. Ice cubes from the IceMaker are collected and stored in the Fig. 137 (2) container. The container Fig. 137 (3) is suitable for storing tall foodstuffs or beverages such as pizzas or alcoholic drinks.

The pull-out board with IceTower is mounted on a glass shelf with pull-out rails. You can dismantle the pull-out board for cleaning.

### 9.2.1 Dismantling the pull-out board with IceTower

#### Removing the container

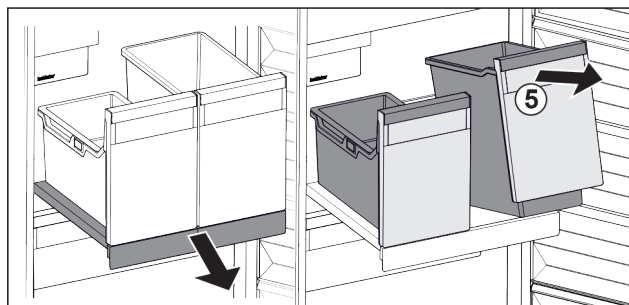


Fig. 138

- ▶ Pull out the pull-out board.
- ▶ Lift the container Fig. 138 (5) at the front.
- ▶ Remove the container.

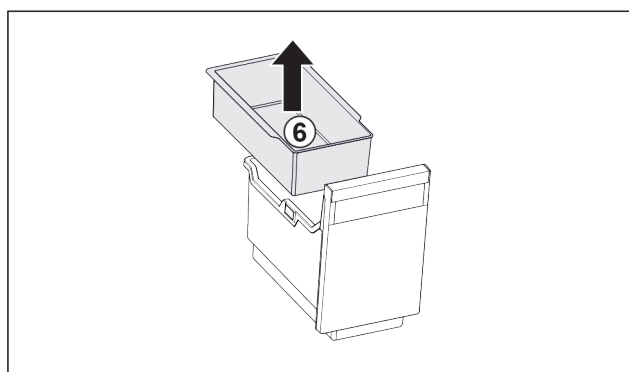


Fig. 139

- ▶ Remove the hang-on tray Fig. 139 (6).
- ▶ If there are ice cubes in the hang-on tray: Empty the hang-on tray.
- ▶ The container and hang-on tray have been removed and you can clean them. (see 10.3.4 Clean the components)

#### Removing the pull-out board

Ensure that the following conditions are met:

- ☐ Containers have been removed. (see Removing the container)

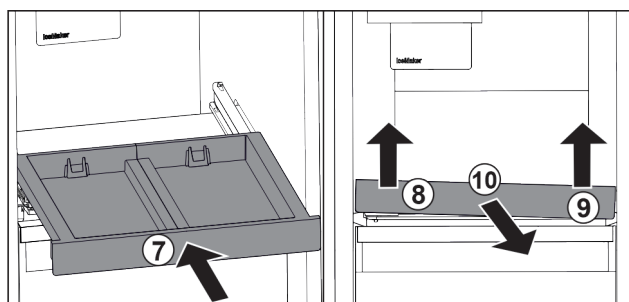


Fig. 140

- ▶ Slide in the pull-out board. Fig. 140 (7)
- ▶ Lift the pull-out board on the front left. Fig. 140 (8)

## Features

- ▶ Lift the pull-out board on the front right. *Fig. 140 (9)*
- ▶ Pull-out board is detached from the attachment at the front.
- ▶ Take out the pull-out board to the front. *Fig. 140 (10)*
- ▶ The pull-out board has been removed and you can clean it. (see 10.3.4 Clean the components)

### Removing the glass shelf from under the pull-out board


(see 9.3 Glass shelves)

### 9.2.2 Inserting the pull-out board with IceTower

#### Inserting the glass shelf from under the pull-out board


(see 9.3 Glass shelves)

#### Inserting the pull-out board

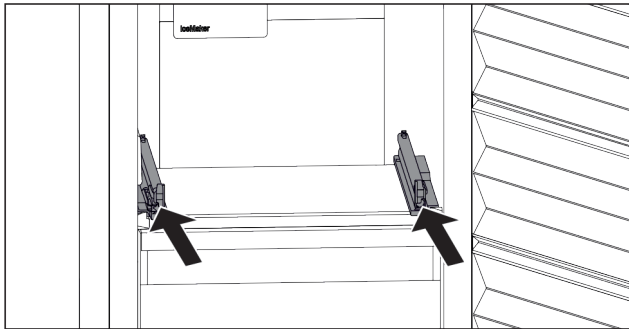


*Fig. 141*

- ▶ Slide the rails in.

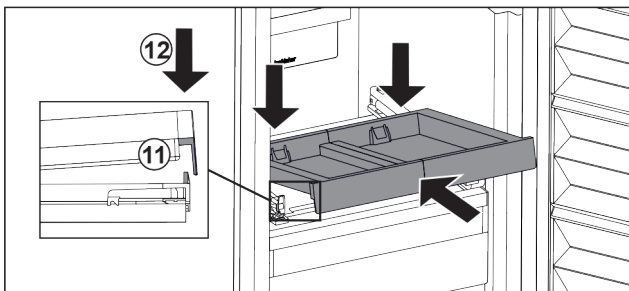

*Fig. 142*

- ▶ Place the pull-out board in at an angle behind the front lug.
- ▶ Slide in at an angle. Make sure that the stop is behind the lug on both sides. *Fig. 142 (11)*
- ▶ Lower the pull-out board at the front. *Fig. 142 (12)*

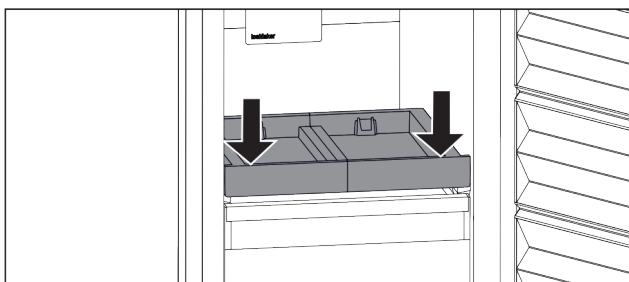


*Fig. 143*

- ▶ Push the pull-out board down at the front.
- ▶ Pull-out board clicks into place.

#### Inserting the container

Ensure that the following conditions are met:

- ❑ The pull-out board is inserted. (see Inserting the pull-out board)

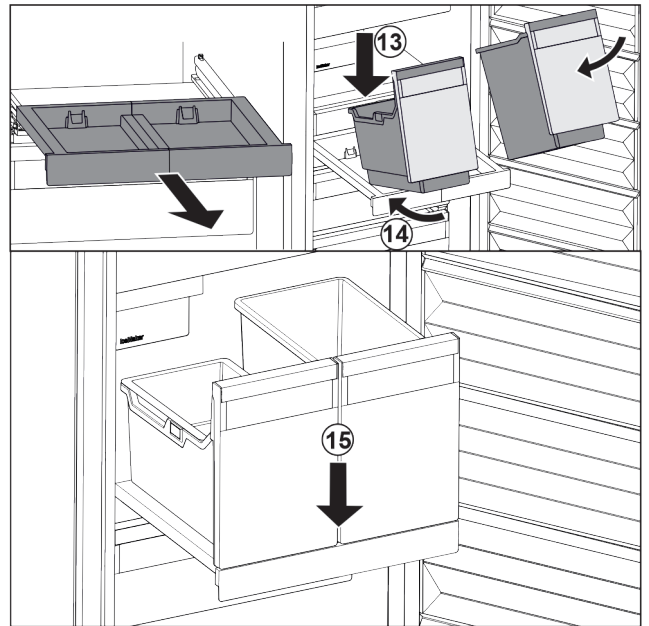


*Fig. 144*

- ▶ Pull out the pull-out board.
- ▶ Hold the pull-out board with one hand.

#### Note

The containers are shaped in a way that they cannot be interchanged.

- ▶ Place the container at an angle on the pull-out board. *Fig. 144 (13)*
- ▶ Slide the container to the back at an angle. *Fig. 144 (14)*
- ▶ Place container in the front. *Fig. 144 (15)*

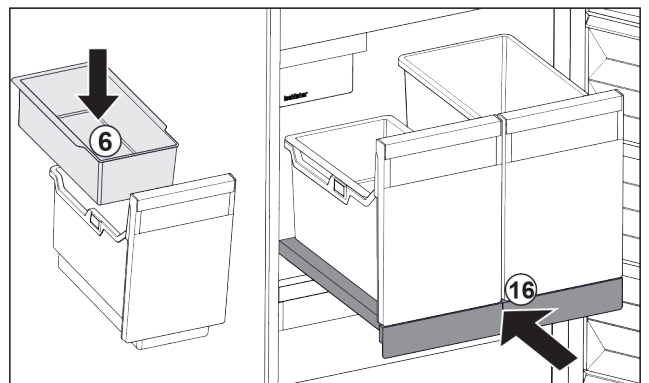

*Fig. 145*

- ▶ Insert hang-on tray *Fig. 145 (6)* for ice cubes.
- ▶ Slide in the pull-out board with (IceTower) container. *Fig. 145 (16)*
- ▶ Pull-out shelf with IceTower is fully inserted.

## 9.3 Glass shelves

#### NOTICE

Impermissible removal of the glass panel above the IceTower!

Damage to the IceMaker. The IceMaker is attached to the glass panel above the IceTower.

- ▶ Do not remove the glass panel above the IceTower.

You can remove the glass shelves under the drawers for cleaning.

You can remove the glass shelves under the drawers to use VarioSpace.

## 9.3.1 Removing / inserting the glass shelf

Make sure that the following requirements are fulfilled:

- ❑ Glass shelf under the drawer: The drawer has been removed. (see 9.1 Drawers)
- ❑ Pull-out board under IceTower: IceTower has been removed. (see 9.2 Pull-out board with IceTower)

### Removing glass shelf

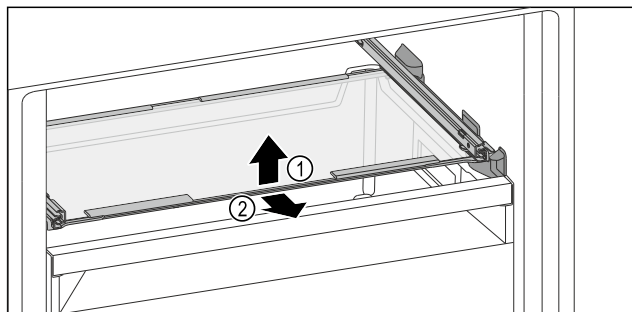


Fig. 146 Example illustration, glass shelf

- Lift the glass shelf forwards.
- Remove the glass shelf forwards.

### Inserting glass shelf

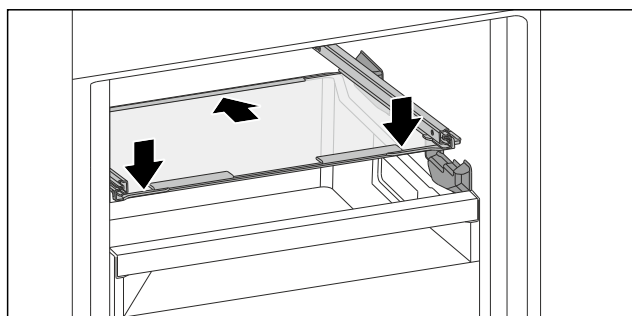


Fig. 147 Example illustration, glass shelf

- Place the glass shelf at an angle behind the stoppers.
- Lower glass shelf.
- Slide in glass shelf to the back.

## 9.4 IceMaker

The IceMaker will produce ice cubes for household use only.

Ensure that the following conditions are met:

- The IceMaker is clean. (see 10 Maintenance)
- IceMaker drawer is cleaned.
- IceMaker drawer is fully inserted.

### 9.4.1 Producing ice cubes

The volume depends on the freezing temperature. The colder the temperature, the more ice cubes the system can produce in a certain time period.

After the IceMaker is turned on for the first time, it can take up to 24 hours for the first ice cubes to be made.

- Activate the IceMaker function.
- Producing many ice cubes: Activate the MaxIce function.
- Distribute the ice cubes evenly in the drawer to increase the capacity.
- Closing the drawer: IceMaker starts making ice cubes again automatically.

#### Note

When a certain level is reached in the IceMaker drawer, it stops producing ice cubes. The IceMaker does not fill the drawer all the way to the top.

## 9.5 VarioSpace

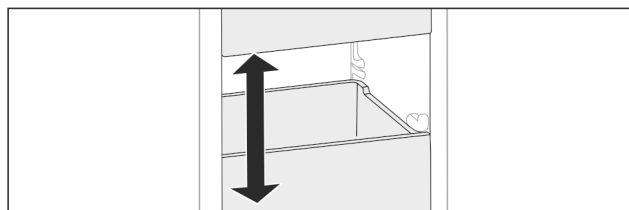


Fig. 148

You can remove drawers and glass panels from your appliance. This provides more room for large food items such as poultry, joints of meat, large game, and tall baked products. You can then freeze these items whole for later preparation.

- Note the weight limits on the drawers and glass panels (see 11.1 Technical specifications).

## 9.6 Freezer pack

Freezer packs prevent the temperature rising too quickly should there be a power cut.

The freezer packs are in the drawer.

You can store the freezer packs in the freezer tray.

### 9.6.1 Using the freezer pack

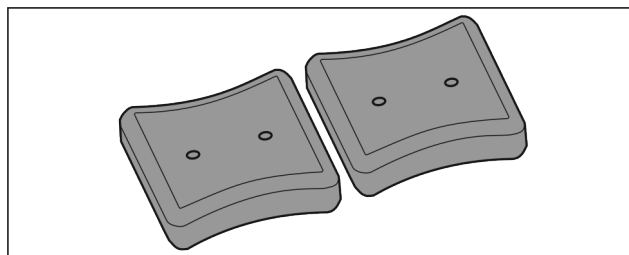


Fig. 149

When the freezer packs are fully frozen:

- Place on the frozen goods in the top, front part of the freezer.

## 10 Maintenance

### 10.1 Disassembling / assembling pull-out systems

#### 10.1.1 Notes on disassembly

You can disassemble some of the pull-out systems for cleaning. Your appliance can contain a variety of pull-out systems.

The following pull-out systems can be disassembled or cannot be disassembled:

| Pull-out system                 | can be disassembled / cannot be disassembled              |
|---------------------------------|-----------------------------------------------------------|
| Drawer guided on glass shelf    | can be disassembled (see Drawer on glass shelf)           |
| Top tiltable drawer             | cannot be disassembled                                    |
| Drawer guided on container rib* | can be disassembled (see 10.1.3 Drawer on moulded rib*) * |
| Bottom drawer                   | cannot be disassembled                                    |
| IceTower                        | can be disassembled (see 10.1.4 IceTower)                 |

# Maintenance

## 10.1.2 Drawer on telescopic rails

### Drawer on glass shelf

#### Disassembling pull-out system

Make sure the following prerequisites are met:

- ❑ Drawer has been removed.
- ❑ Glass shelf has been removed. (see 9.3 Glass shelves)

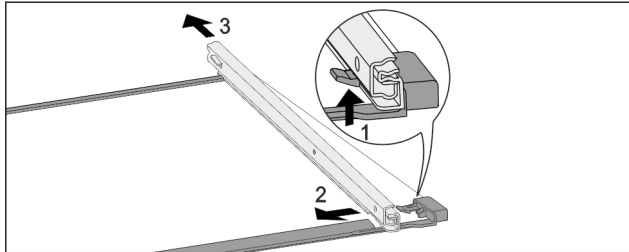


Fig. 150 Glass shelf with rails

- Push up front click-in hooks. (1)
- Move pull-out rails to the side (2) and to the rear (3).

#### Installing pull-out system

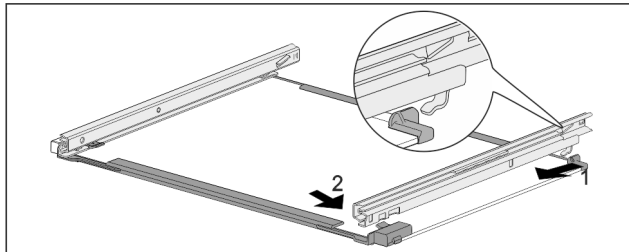


Fig. 151 Glass shelf with rails

- Hook in rail at the back. (1)
- Hook in rail at the front. (2)

## 10.1.3 Drawer on moulded rib\*

#### Disassembling pull-out system

Make sure the following prerequisites are met:

- ❑ Drawer has been removed. (see 9.1.3 Drawer on moulded rib\*)

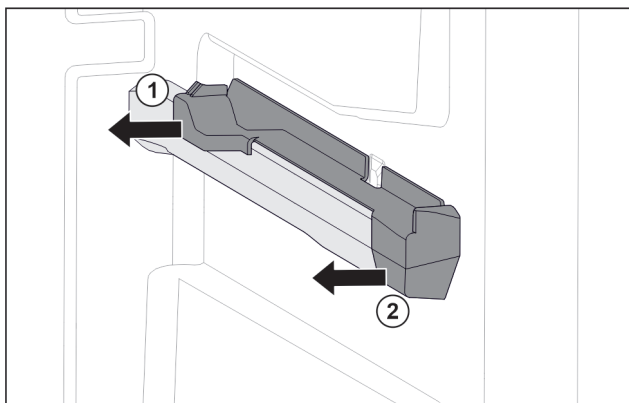


Fig. 152 Attachment on the right moulded rib

- Grab attachment at the back from below.
- Pull off attachment at the back sideways. Fig. 152 (1)
- Pull off attachment at the front sideways. Fig. 152 (2)

#### Installing pull-out system

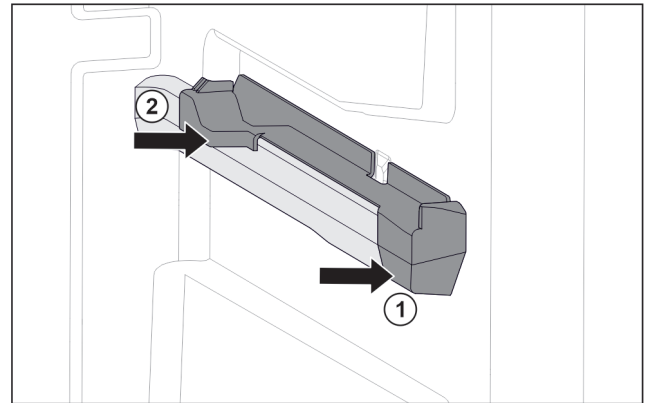


Fig. 153 Attachment on the right moulded rib

- Position attachment on moulded rib at the front. Fig. 153 (1)
- Press on attachment at the back. Fig. 153 (2)

## 10.1.4 IceTower

#### Disassembling pull-out system

Make sure the following prerequisites are met:

- ❑ IceTower has been removed. (see 9.2 Pull-out board with IceTower)
- ❑ Glass shelf has been removed. (see 9.3 Glass shelves)
- Place pull-out board on a table.
- You are able to remove the rails more easily from the glass shelf.

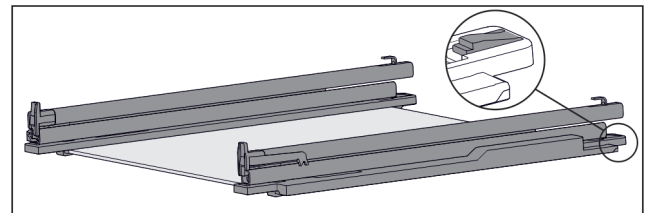


Fig. 154 Glass shelf with rails and retaining parts

- Press down retaining part at the rear (see Fig. 154) and at the same time push the rail back.

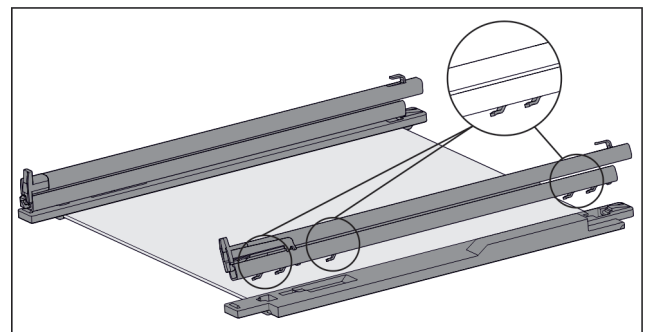


Fig. 155 Glass shelf with rails and retaining parts

- The rail hooks are released from the retaining part.
- Remove rail from retaining part.

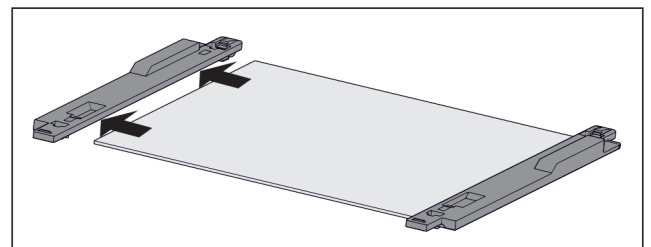


Fig. 156 Glass shelf with retaining part

- Remove retaining part from glass shelf sideways.

## Installing pull-out system

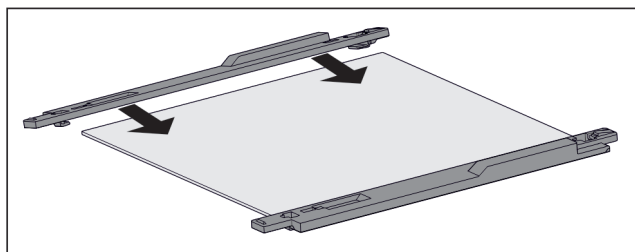


Fig. 157 Glass shelf with retaining part

- Fit retaining part on glass shelf.
- Push retaining part onto glass shelf as far as it will go.

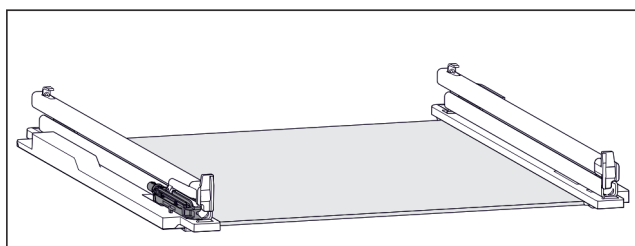


Fig. 158 Damping mechanism

The damping mechanism is attached to the left rail. (see Fig. 158) There is no damping mechanism attached to the right rail.

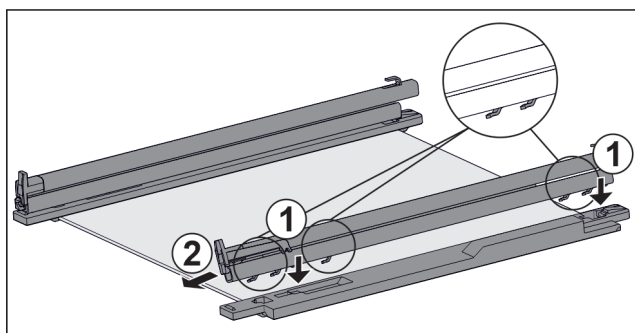


Fig. 159 Glass shelf with rails and retaining parts

Install rail **with** damping mechanism:

- Place rail hooks onto the openings of the **left** retaining part. Fig. 159 (1)
  - Push rail forwards. Fig. 159 (2)
  - Rail latches in audibly.
- Install rail **without** damping mechanism:
- Place rail hooks onto the openings of the **right** retaining part. Fig. 159 (1)
  - Push rail forwards. Fig. 159 (2)
  - Rail latches in audibly.

## 10.2 Defrosting the appliance

### 10.2.1 Defrosting with NoFrost

Defrosting is performed automatically with the NoFrost system. The moisture is deposited on the evaporator, is periodically defrosted and evaporates.

The appliance does not have to be defrosted.

#### Note

Water droplets may collect on the bottom of the appliance. When you take the appliance out of operation:

- Place a towel in front of the appliance to catch any water droplets that escape. (see 12 Shutting down)

## 10.3 Cleaning the appliance

### 10.3.1 Ready



#### WARNING

Danger of electric shock!

- Remove the refrigerator connector or interrupt the power supply.



#### WARNING

Risk of fire

- Do not damage the refrigeration circuit.

- Empty the appliance.
- Remove mains connector.

### 10.3.2 Clean the housing

#### NOTICE

Improper cleaning!

Damage to the appliance.

- Only use soft cleaning cloths and ph-neutral all-purpose cleaners.
- Do not use abrasive sponges or steel wool which may cause scratches.
- Do not use any sharp or abrasive cleaning agents, nor any that contain sand, chloride or acid.



#### WARNING

Risk of injury and damage as a result of hot steam!

Hot steam can lead to burns and can damage the surfaces.

- Do not use any steam cleaners!
- Wipe the housing down with soft, clean cloth. If very dirty, use lukewarm water with a neutral cleaner. Glass surfaces can also be cleaned with glass cleaner.

### 10.3.3 Cleaning the interior

#### NOTICE

Improper cleaning!

Damage to the appliance.

- Only use soft cleaning cloths and ph-neutral all-purpose cleaners.
- Do not use abrasive sponges or steel wool which may cause scratches.
- Do not use any sharp or abrasive cleaning agents, nor any that contain sand, chloride or acid.
- Plastic surfaces: clean by hand with a soft clean cloth, lukewarm water and a little detergent.
- Metal surfaces: clean by hand with a soft clean cloth, lukewarm water and a little detergent.

### 10.3.4 Clean the components

#### NOTICE

Improper cleaning!

Damage to the appliance.

- Only use soft cleaning cloths and ph-neutral all-purpose cleaners.
- Do not use abrasive sponges or steel wool which may cause scratches.
- Do not use any sharp or abrasive cleaning agents, nor any that contain sand, chloride or acid.

# Customer help

**Clean with a soft, clean cloth, lukewarm water and some detergent:**

- IceTower pull-out board
- Drawer  
Please note: Do not remove the magnet on the drawer. The magnet ensures the functionality of the IceMaker.
- Freezer tray

**Clean with a damp cloth:**

- Retractable rails  
Please note: The grease in the tracks is used for lubrication and must not be removed!

**Wash in the dishwasher up to 60 °C:**

- Ice cube scoop
- To disassemble components: see the relevant section.
- Clean the components.

## 10.3.5 Cleaning the IceMaker

There are various options for cleaning the IceMaker.

Cleaning is required in the following cases:

- ☐ Initial operation
- ☐ With mains connection:  
If out of use for more than 5 days.

Ensure that the following conditions are met:

- ☐ IceMaker drawer is emptied.
- ☐ IceMaker drawer is in place.
- ☐ The IceMaker is activated.

**First use or after a long period of non-use**

Clean the IceMaker with the TubeClean function.

- Put an empty 1.5 l vessel (max. height 10 cm) in the drawer under the IceMaker.
- Activate the TubeClean function.
- The rinse process is prepared (max. 60 min.): Symbol flashes.
- Water pipes are rinsed: Symbol flashes.
- Rinsing process is complete: Function turns off automatically.
- Remove the IceMaker drawer and remove the container.
- Clean the IceMaker drawer with warm water and a little detergent.
- Push the IceMaker drawer in.
- The system starts making ice cubes automatically.

Without a water filter

- Dispose of any ice cubes that were made 24 hours after the first ice cubes.

**If cleaning is required**

Clean the IceMaker by hand.

- Remove the IceMaker drawer and clean with warm water and a little detergent.
- Push the IceMaker drawer in.
- The system starts making ice cubes automatically.

## 10.3.6 After cleaning

- Wipe the appliance and the components dry.
- Connect and switch on the appliance.
- Activate SuperFrost (see 8.2 Appliance functions).  
The temperature is cold enough:
- Place the food inside.
- Repeat cleaning regularly.

# 11 Customer help

## 11.1 Technical specifications

| Temperature range |                  |
|-------------------|------------------|
| Freeze            | -28 °C to -15 °C |

| Maximum ice cube quantity / 24 hours |                                                    |
|--------------------------------------|----------------------------------------------------|
| Freezer compartment                  | see type plate under "Freezing capacity .../ 24 h" |

| Maximum loading weight for the equipment                            |                                                                           |                                                                           |                                                                           |
|---------------------------------------------------------------------|---------------------------------------------------------------------------|---------------------------------------------------------------------------|---------------------------------------------------------------------------|
| Equipment                                                           | Appliance width 600 mm (see installation instructions, device dimensions) | Appliance width 700 mm (see installation instructions, device dimensions) | Appliance width 750 mm (see installation instructions, device dimensions) |
| Drawer on container rib* (see 9.1.3 Drawer on moulded rib*) *       | 19 kg*                                                                    | 25 kg*                                                                    | --*                                                                       |
| Drawer guided on glass shelf (see 9.1.1 Drawer on telescopic rails) | 15 kg                                                                     | 22 kg                                                                     | 22 kg                                                                     |
| Bottom drawer (see 9.1.4 Bottom drawer)                             | 11 kg                                                                     | 19 kg                                                                     |                                                                           |
| Top tiltable drawer (see 9.1.2 Top tilting drawer)                  | 19 kg                                                                     | 19 kg                                                                     | --                                                                        |

| Ice cube production with IceMaker      |                                                  |
|----------------------------------------|--------------------------------------------------|
| Ice cube production / 24 hours         | At a temperature of -18 °C: 0.8 kg of ice cubes  |
| maximum ice cube production / 24 hours | With the MaxIce function on: 1.2 kg of ice cubes |

| Lighting                                                                   |              |
|----------------------------------------------------------------------------|--------------|
| Class <sup>1</sup>                                                         | Light source |
| This product contains one or more energy efficiency class G light sources. | LED          |

<sup>1</sup> The appliance may contain light sources with different energy efficiency classes. The lowest energy efficiency class is indicated.

For appliances with a WiFi connection:

| Frequency specification           |                                                              |
|-----------------------------------|--------------------------------------------------------------|
| Frequency band                    | 2.4 GHz                                                      |
| Maximum radiated power            | < 100 mW                                                     |
| Purpose of the wireless equipment | Integration in the local WiFi network for data communication |

## 11.2 Operating noises

The appliance makes different noises when it is on.

- At **higher temperatures** the appliance uses less energy but works for longer. It is **quieter**.
- At **lower temperatures** the food is cooled faster. It is **louder**.

Examples:

- Functions on (see 8.2 Appliance functions)
- Fan running
- Food recently added
- High ambient temperature
- Door open for a while

| Noise                  | Possible cause                                                      | Type of noise           |
|------------------------|---------------------------------------------------------------------|-------------------------|
| Bubbling and splashing | Coolant flowing into the cooling circuit.                           | Normal operating noise  |
| Hissing                | Coolant sprays into the cooling circuit.                            | Normal operating noise  |
| Humming                | The appliance is cooling. The volume depends on the cooling output. | Normal operating noise  |
| Suction noises*        | Soft-closing door is being opened and closed.*                      | Normal operating noise* |
| Humming and rustling   | The fan is running.                                                 | Normal operating noise  |
| Clicking               | Components are switched on and off.                                 | Normal switching noise  |

| Noise                               | Possible cause               | Type of noise          |
|-------------------------------------|------------------------------|------------------------|
| Rattling or humming                 | Valves or flaps are working. | Normal switching noise |
| Faint knocking, humming or buzzing* | The valve is active.         | Normal operating noise |

| Noise     | Possible cause                         | Type of noise   | Lifting                                                  |
|-----------|----------------------------------------|-----------------|----------------------------------------------------------|
| Vibration | Improper setup                         | Defective noise | Level the appliance using the adjustable feet.           |
| Rattling  | Components, items inside the appliance | Defective noise | Secure components. Leave enough space between the items. |

## 11.3 Technical fault

Your appliance is designed and built to ensure it works reliably and has a long service life. In the unlikely event that a fault occurs during operation, please check whether it is due to an operating error. If so, you will be charged for the callout and repair costs even if it falls within the warranty period.

You can fix the following faults yourself.

### 11.3.1 Appliance function

| Defect                                 | Cause                                                         | Remedy                                                                                                                                                                           |
|----------------------------------------|---------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>The appliance is not working.</b>   | → The appliance is not switched on.                           | ► Switch the appliance on.                                                                                                                                                       |
|                                        | → The power plug is not properly plugged into the socket.     | ► Check the power plug.                                                                                                                                                          |
|                                        | → There is something wrong with the power outlet fuse.        | ► Check the fuse.                                                                                                                                                                |
|                                        | → Power cut                                                   | ► Keep the appliance closed.<br>► Safeguarding food: Place cold packs on top of food or use another freezer if the power cut lasts longer.<br>► Do not re-freeze defrosted food, |
|                                        | → The IEC socket is not plugged into the appliance correctly. | ► Check the IEC socket.                                                                                                                                                          |
| <b>Temperature is not cold enough.</b> | → The appliance door is not closed properly.                  | ► Close the appliance door.                                                                                                                                                      |
|                                        | → The ambient temperature is too high.                        | ► Problem solution:                                                                                                                                                              |
|                                        | → The appliance was opened too many times or for too long.    | ► Wait to see if the required temperature corrects itself. If not, contact Customer Service. (see 11.4 Customer Service)                                                         |
|                                        | → Too much fresh food was placed inside without SuperFrost.   | ► Solution: (see SuperFrost)                                                                                                                                                     |
|                                        | → The temperature is set incorrectly.                         | ► Turn down the temperature and check after 24 hours.                                                                                                                            |

| Defect                                                                                               | Cause                                                                                                                                        | Remedy                                                               |
|------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------|
|                                                                                                      | → The appliance is too close to a heat source (oven, radiator, etc).                                                                         | ► Move the appliance or the heat source.                             |
| <b>The temperature shown on the display is higher than the actual temperature in the appliance.*</b> | → Appliance door was open for a long time and the door alarm was triggered automatically. This causes the appliance to cool more vigorously. | ► Close appliance door.                                              |
| <b>The status display does not light up.*</b>                                                        | → The status display is switched off.                                                                                                        | ► Switch on the status display. (see Status light (status display)*) |
|                                                                                                      | → The door is open.                                                                                                                          | ► Close the door.                                                    |
|                                                                                                      | → The appliance is switched off.                                                                                                             | ► Switch the appliance on.                                           |
|                                                                                                      | → LED is faulty.                                                                                                                             | ► Contact Customer Service. (see 10 Maintenance)                     |
| <b>The door seal is defective or needs to be replaced for another reason.</b>                        | → The door seal can be replaced. It can be replaced without the need for special tools.                                                      | ► Contact Customer Service. (see 11.4 Customer Service)              |
| <b>The appliance builds up too much ice or condensation.</b>                                         | → The door seal may have slipped out of its groove.                                                                                          | ► Check that the door seal is well fitted in the groove.             |
| <b>The exterior surfaces of the appliance are warm.*</b>                                             | → The heat of the refrigeration circuit is used to avoid condensation.                                                                       | ► This is normal.                                                    |

## 11.3.2 Features

| Defect                                          | Cause                                                         | Remedy                                                                                       |
|-------------------------------------------------|---------------------------------------------------------------|----------------------------------------------------------------------------------------------|
| <b>You cannot activate the IceMaker.</b>        | → The appliance and therefore the IceMaker are not connected. | ► Connect the appliance (see the Installation Guide).                                        |
| <b>The IceMaker is not producing ice cubes.</b> | → The IceMaker is not on.                                     | ► Activate the IceMaker.                                                                     |
|                                                 | → The drawer of the IceMakers is not connected properly.      | ► Push the drawer in correctly.                                                              |
|                                                 | → The water connection is not open.                           | ► Open the water connection.                                                                 |
| <b>The internal light does not come on.</b>     | → The appliance is not switched on.                           | ► Switch the appliance on.                                                                   |
|                                                 | → The door was open for longer than 15 minutes.               | ► Interior lighting switches off automatically after about 15 minutes when the door is open. |
|                                                 | → The LED interior light is faulty or the lid is damaged.     | ► Contact Customer Service. (see 11.4 Customer Service)                                      |

## 11.4 Customer Service

First check whether you can rectify the fault yourself (see 11 Customer help) . If you cannot rectify the problem, contact Customer Service.

You can find the address in the enclosed brochure "Liebherr-Service" or at [home.liebherr.com/service](http://home.liebherr.com/service).



### WARNING

Unprofessional repair!  
Injuries.

- Have any repairs and action - not expressly specified - on the appliance and mains cable carried out by service personnel only. (see 10 Maintenance)
- A damaged mains cable may only be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person.
- In the case of appliances with an IEC connector, the change may be made by the customer.

## 11.4.1 Contacting Customer Service

Make sure that the following appliance information is available:

- ☐ Appliance name (model and index)
- ☐ Service no. (Service)
- ☐ Serial no. (S no.)
- Call up the appliance information via the display. (see Device information)
- or-
- Refer to the type plate for appliance information. (see 11.5 Model plate)
- Note down the appliance information.
- Notify customer service: Report errors and the appliance information.
- This will help us to provide you with a faster, more accurate service.
- Follow further instructions from Customer Service.

## 11.5 Model plate

The model plate is behind the drawers on the inside of the appliance.

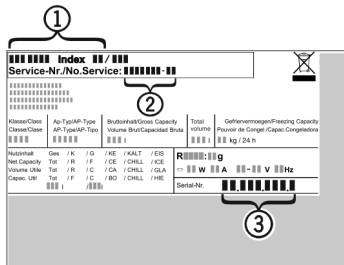


Fig. 160

- (1) Appliance description      (3) Serial no.  
(2) Service no.

- Note the data on the model plate.

## 12 Shutting down

- Empty the appliance.
- Deactivate IceMaker. (see Deactivating the IceMaker and MaxIce)
- Switch off appliance. (see Switching the appliance off and on)
- Pull the mains plug out of the socket.
- Remove the IEC socket if required: Pull the IEC socket out of the appliance plug and move it to the left and right at the same time.
- Place a towel in front of the appliance to catch any drops of water that may run out.
- Clean appliance. (see 10.3 Cleaning the appliance)
- Leave the door open, so that no unpleasant odours arise.

## 13 Disposal

Ensure that the following requirements are met:

- ☐ Meaning of the symbols on the appliance: are familiar. (see 1.14 Symbols on the appliance)
- ☐ Notes on disposal are familiar. (see 1.8 Disposal)

### 13.1 Preparing the appliance for disposal

- Shutting your appliance down.

### 13.2 Disposing of the appliance in an environmentally friendly manner



#### WARNING


Leaking coolant and oil!

Fire. The coolant contained in the appliance is eco-friendly, but also flammable. The oil contained in the appliance is flammable. Escaping coolant and oil can ignite if the concentration is high enough and in contact with an external heat source.

- Do not damage the pipelines of the coolant circuit and the compressor.

- Observe the notes on transporting the appliance.
- Remove the appliance without damaging it.
- Dispose of appliance according to specifications.

Scan QR Code and find  
digital operating and  
installation instructions.

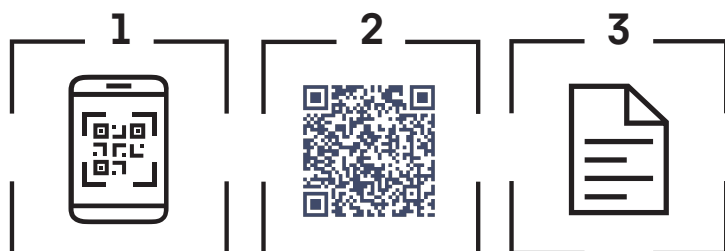

[home.liebherr.com](https://home.liebherr.com)


20251107

**7088643-00**




User Guide

Quality, Design and Innovation

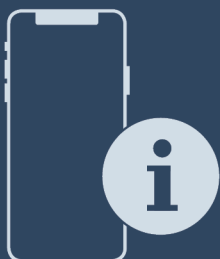

[home.liebherr.com/fridge-manuals](http://home.liebherr.com/fridge-manuals)



# LIEBHERR


# Contents

|                                                                                     |                                                            |          |
|-------------------------------------------------------------------------------------|------------------------------------------------------------|----------|
| <b>1</b>                                                                            | <b>General safety instructions.....</b>                    | <b>3</b> |
| <b>2</b>                                                                            | <b>Appliance at a glance.....</b>                          | <b>4</b> |
| 2.1                                                                                 | Scope of delivery.....                                     | 4        |
| 2.2                                                                                 | Overview of the appliance and equipment.....               | 4        |
| 2.3                                                                                 | SmartDevice.....                                           | 4        |
| 2.4                                                                                 | Appliance range of use.....                                | 5        |
| 2.5                                                                                 | Conformity.....                                            | 5        |
| 2.6                                                                                 | SVHC substances according to REACH regulation.....         | 5        |
| 2.7                                                                                 | EPREL database.....                                        | 5        |
| 2.8                                                                                 | Spare parts.....                                           | 5        |
| <b>3</b>                                                                            | <b>Functionality of the Touch &amp; Swipe display.....</b> | <b>5</b> |
| 3.1                                                                                 | Navigation and symbol explanation.....                     | 5        |
| 3.2                                                                                 | Menus.....                                                 | 6        |
| 3.3                                                                                 | Sleep mode.....                                            | 7        |
| <b>4</b>                                                                            | <b>Putting into operation.....</b>                         | <b>7</b> |
| 4.1                                                                                 | Switching on appliance (first use).....                    | 7        |
| 4.2                                                                                 | Putting InfinitySpring into operation*.....                | 7        |
| 4.3                                                                                 | Starting the HydroBreeze for the first time*.....          | 7        |
| <b>5</b>                                                                            | <b>Storage.....</b>                                        | <b>7</b> |
| 5.1                                                                                 | Information regarding storage.....                         | 7        |
| 5.2                                                                                 | Fridge compartment.....                                    | 8        |
| 5.3                                                                                 | BioFresh.....                                              | 8        |
| 5.4                                                                                 | Storage times.....                                         | 8        |
| <b>6</b>                                                                            | <b>Saving energy.....</b>                                  | <b>9</b> |
| <b>7</b>                                                                            | <b>Controls.....</b>                                       | <b>9</b> |
| 7.1                                                                                 | Controls and displays.....                                 | 9        |
| 7.1.1                                                                               | Status display.....                                        | 9        |
| 7.1.2                                                                               | Display symbols.....                                       | 10       |
| 7.2                                                                                 | Appliance functions.....                                   | 10       |
| 7.2.1                                                                               | Notes on the appliance functions.....                      | 10       |
|  | Switching the appliance off and on.....                    | 10       |
|  | WiFi.....                                                  | 10       |
|  | Temperature.....                                           | 11       |
|  | Temperature unit.....                                      | 12       |
|  | BioFresh B-Value .....                                     | 12       |
|  | D-Value.....                                               | 12       |
|  | SuperCool.....                                             | 12       |
|  | HolidayMode.....                                           | 13       |
|  | SabbathMode.....                                           | 13       |
|  | EnergySaver .....                                          | 14       |
|  | HydroBreeze*.....                                          | 14       |
|  | CleaningMode.....                                          | 15       |
|  | Display brightness.....                                    | 15       |
|  | Door alarm.....                                            | 15       |

|                                                                                   |                                                                       |           |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------|-----------|
|  | Input lock.....                                                       | 16        |
|  | Language.....                                                         | 16        |
|  | Device information.....                                               | 17        |
|  | Software.....                                                         | 17        |
|  | Reminder.....                                                         | 17        |
|  | Demo mode.....                                                        | 18        |
|  | Resetting to factory settings.....                                    | 18        |
| 7.3                                                                               | Messages.....                                                         | 19        |
| 7.3.1                                                                             | Overview of warnings.....                                             | 19        |
| 7.3.2                                                                             | Ending warnings.....                                                  | 19        |
| 7.3.3                                                                             | Overview of reminders.....                                            | 19        |
| 7.3.4                                                                             | Ending reminders.....                                                 | 19        |
| <b>8</b>                                                                          | <b>Features.....</b>                                                  | <b>20</b> |
| 8.1                                                                               | Door rack.....                                                        | 20        |
| 8.2                                                                               | Shelves.....                                                          | 22        |
| 8.3                                                                               | Dividing shelf.....                                                   | 23        |
| 8.4                                                                               | VarioSafe .....                                                       | 23        |
| 8.5                                                                               | InfinitySpring*.....                                                  | 25        |
| 8.6                                                                               | Adjustable bottle shelf.....                                          | 25        |
| 8.7                                                                               | Drawers.....                                                          | 26        |
| 8.8                                                                               | Compartment lid for Fruit & Vegetable Safe.....                       | 26        |
| 8.9                                                                               | HydroBreeze*.....                                                     | 27        |
| 8.10                                                                              | Butter dish.....                                                      | 28        |
| 8.11                                                                              | Egg rack.....                                                         | 28        |
| 8.12                                                                              | Bottle holder.....                                                    | 29        |
| 8.13                                                                              | FlexSystem*.....                                                      | 29        |
| 8.14                                                                              | FlexCube*.....                                                        | 29        |
| <b>9</b>                                                                          | <b>Maintenance.....</b>                                               | <b>30</b> |
| 9.1                                                                               | FreshAir carbon filter.....                                           | 30        |
| 9.2                                                                               | Water tank*.....                                                      | 30        |
| 9.3                                                                               | Water filter*.....                                                    | 31        |
| 9.4                                                                               | Disassembling / assembling pull-out systems.....                      | 31        |
| 9.5                                                                               | Removing / inserting the variable bottle rack.....                    | 31        |
| 9.6                                                                               | Compartment lid for Fruit & Vegetable Safe.....                       | 32        |
| 9.7                                                                               | Defrosting the appliance.....                                         | 32        |
| 9.8                                                                               | Cleaning the appliance.....                                           | 33        |
| <b>10</b>                                                                         | <b>Customer help.....</b>                                             | <b>34</b> |
| 10.1                                                                              | Technical specifications.....                                         | 34        |
| 10.2                                                                              | Operating noises.....                                                 | 34        |
| 10.3                                                                              | Technical fault.....                                                  | 34        |
| 10.4                                                                              | Customer Service.....                                                 | 36        |
| 10.5                                                                              | Model plate.....                                                      | 36        |
| <b>11</b>                                                                         | <b>Shutting down.....</b>                                             | <b>36</b> |
| <b>12</b>                                                                         | <b>Disposal.....</b>                                                  | <b>36</b> |
| 12.1                                                                              | Preparing appliance for disposal.....                                 | 36        |
| 12.2                                                                              | Disposing of the appliance in an environmentally friendly manner..... | 36        |

The manufacturer is continually working on the further development of all types and models. Please be aware that we reserve the right to make changes to the shape, equipment and technology.

| Symbol                                                                              | Explanation                                                                                                                                                 |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p><b>Read instructions</b></p> <p>Please read the information in these instructions carefully to understand all of the benefits of your new appliance.</p> |
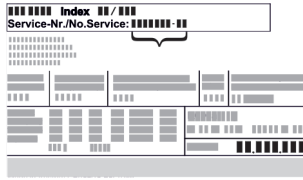
| Symbol                                                                             | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | <b>Additional information on the Internet</b><br>The digital manual with additional information and in other languages can be found via the QR code on the front of the manual or by entering the service number at <a href="http://home.liebherr.com/fridge-manuals">home.liebherr.com/fridge-manuals</a> .<br>The service number can be found on the serial tag: <div data-bbox="284 443 587 622" data-label="Image">  </div> <p style="text-align: center;"><i>Fig. Example illustration</i></p> |
|    | <b>Check appliance</b><br>Check all parts for transport damage. If you have any complaints, please contact your agent or customer service.                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|    | <b>Differences</b><br>These instructions apply to a range of models, so differences are possible. Sections that apply to certain models only are marked with an asterisk (*).                                                                                                                                                                                                                                                                                                                                                                                                        |
|   | <b>Instructions and results</b><br>Instructions are marked with a ►.<br>Results are marked with a ▷.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|  | <b>Videos</b><br>Videos about the appliances are available on the YouTube channels of Liebherr-Hausgeräte.                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |

## Open source licences:

The appliance contains software components that use open source licences. Information on the open source licences used can be found here: [home.liebherr.com/open-source-licences](http://home.liebherr.com/open-source-licences)

These operating instructions apply to:

|       |                    |
|-------|--------------------|
| RB..  | 525i / 528i        |
| SRB.. | 526i / 528i / 529i |

## 1 General safety instructions

Please keep these operating instructions in a safe place so you can refer back to them at any time.

If you pass the appliance on, please hand these operating instructions to the next user.

Read these operating instructions carefully before use to ensure safe and correct use of the appliance. Follow the instructions, safety instructions and warning messages included at all times. They are important for ensuring you can operate and install the appliance safely and without any problems.

### Danger for the user:

- This device can be used by children and people with impaired physical, sensory or mental abilities or with a lack of experience and knowledge provided that they are supervised or have received instruction in the safe use of this device, and about the resulting hazards.  
Children must not play with this appliance. Cleaning and user maintenance work must not be carried out by chil-

dren without adult supervision. Children aged between 3 and 8 are allowed to load and unload the appliance. Children below the age of 3 must be kept away from the appliance unless they are under continuous adult supervision.

- The socket must be easily accessible so that the appliance can be disconnected quickly from the electricity in an emergency. It must not be located in the area behind the appliance.
- When disconnecting the appliance from the supply, always take hold of the plug. Do not pull the cable.
- In the event of a fault pull out the mains plug or deactivate the fuse.
- Do not damage the mains power cable. Do not operate the appliance with a defective mains power cable.
- Only customer service or other specially trained staff may repair or perform other operations on the appliance.
- Only assemble, connect and dispose of the appliance according to the instructions.
- The manufacturer is not liable for damage caused by a faulty fixed water connection.\*

### Fire hazard:

- The coolant used (information on the model plate) is ecofriendly but also flammable. Any leaking coolant may ignite.
  - Do not damage the refrigerant circuit pipes.
  - Do not handle ignition sources inside the appliance.
  - Do not use electrical appliances inside the appliance (e.g. steam cleaners, heaters, ice cream makers, etc.).
  - If the refrigerant leaks: remove any naked flames or ignition sources from the vicinity of the leakage point. Properly air the room. Inform customer services.
- Do not store explosives or sprays using combustible propellants such as butane, propane, pentane, etc. in the appliance. To identify these spray cans, look for the list of contents printed on the can, or a flame symbol. Gases possibly escaping may ignite due to electrical components.
- Keep burning candles, lamps and other items with naked flames away from the appliance so that they do not set the appliance on fire.
- Please be sure to store alcoholic drinks or other packaging containing alcohol in tightly closed containers. Any alcohol that leaks out may be ignited by electrical components.

### Danger of tipping and falling:

- Do not misuse the plinth, drawers, doors etc. as a step or for support. This applies particularly to children.

### Danger of food poisoning:

- Do not consume food which has been stored too long.

### Danger of frostbite, numbness and pain:

- Avoid prolonged skin contact with cold surfaces or refrigerated/frozen goods or take protective measures, e.g. wear gloves.

### Danger of injury and damage:

- Hot steam can lead to injury. Do not use electrical heating or steam cleaning equipment, open flames or defrosting sprays to defrost.
- Do not use sharp implements to remove the ice.

### Risk of crushing:

- Do not hold the hinge when opening and closing the door. Fingers may get caught.

### Symbols on the appliance:

## Appliance at a glance



This symbol may be located on the compressor. It relates to the oil in the compressor and makes reference to the risk that: Swallowing or inhaling can be fatal. This advice is only relevant to recycling. There is no danger in normal operation.



This symbol is located on the compressor and indicates the danger of flammable materials. Do not remove the sticker.



This or a similar sticker may be located on the rear of the appliance. This sticker indicates that there are vacuum insulation panels (VIP) or perlite panels in the door and/or housing. This advice is only relevant to recycling. Do not remove the sticker.

Please note the warning messages and other specific advice in the other chapters:

|  |         |                                                                                                                 |
|--|---------|-----------------------------------------------------------------------------------------------------------------|
|  | DANGER  | indicates an immediately hazardous situation which will lead to death or serious injuries if it is not avoided. |
|  | WARNING | indicates a hazardous situation which may lead to death or serious injuries if it is not avoided.               |
|  | CAUTION | indicates a hazardous situation which may lead to minor or moderate injuries if it is not avoided.              |
|  | NOTICE  | indicates a hazardous situation which may lead to damage to property if it is not avoided.                      |
|  | Note    | indicates useful instructions and tips.                                                                         |

## 2 Appliance at a glance

### 2.1 Scope of delivery

Check all parts for transport damage. Contact your dealer or customer service in the event of complaints. (see 10.4 Customer Service)

Your new appliance comes with the following parts:

- Standalone appliance
- Features (depending on the model)
- Installation materials (depending on the model)
- "Quick Start Guide"
- "Installation Guide"
- Service Brochure

### 2.2 Overview of the appliance and equipment

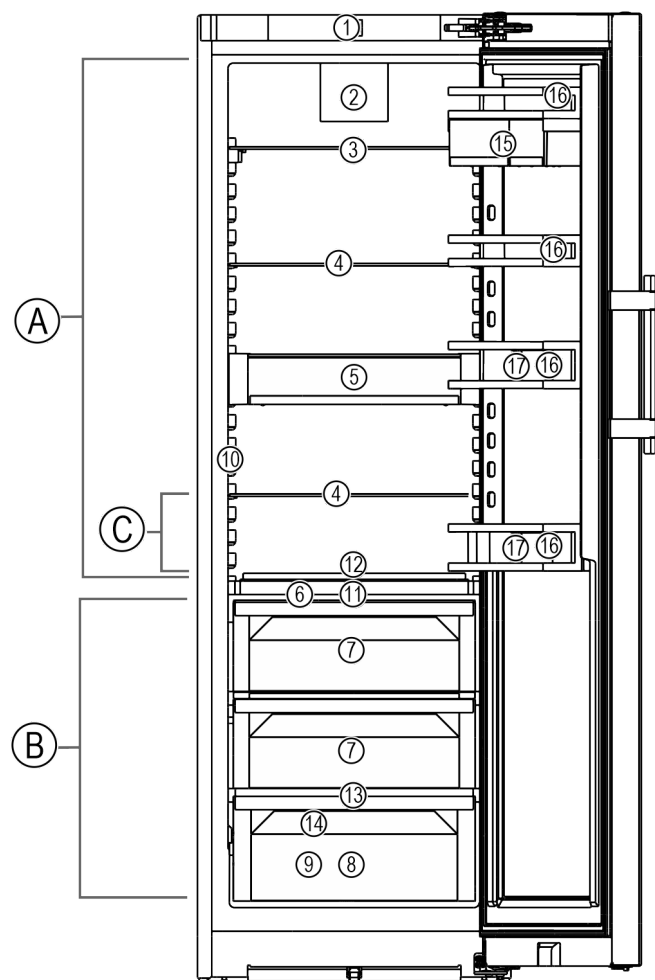


Fig. 1 Example illustration

#### Temperature range

- (A) Fridge compartment (C) Coldest zone  
(B) BioFresh

#### Equipment

- |                                                 |                              |
|-------------------------------------------------|------------------------------|
| (1) Controls                                    | (10) InfinitySpring*         |
| (2) Fan with FreshAir activated charcoal filter | (11) HydroBreeze*            |
| (3) Separable storage shelf                     | (12) Adjustable bottle shelf |
| (4) Storage shelf                               | (13) Drain outlet            |
| (5) VarioSafe                                   | (14) Type plate              |
| (6) Compartment lid for Fruit & Vegetable Safe  | (15) VarioBox                |
| (7) Fruit & Vegetable Safe                      | (16) Door rack               |
| (8) Meat & Dairy Safe                           | (17) Bottle holder           |
| (9) Fish & Seafood Safe*                        |                              |

#### Note

- Shelves, drawers and baskets are arranged for optimum energy efficiency when the appliance is delivered. Changing how the shelves, for example, are inserted in the fridge compartment does not have any impact on energy consumption.

### 2.3 SmartDevice

SmartDevice is the networking solution for your refrigerator. If your appliance SmartDevice-enabled or compatible, you can quickly and easily connect your appliance to your WiFi. With the SmartDevice app, you can operate your appli-

# Functionality of the Touch & Swipe display

ance from a mobile device. Additional functions and setting options are available in the SmartDevice SmartDevice app.

SmartDevice-enabled appliance: Your appliance is capable of being a SmartDevice. To be able to connect your device to WiFi, you need to download the SmartDevice app.



More information about SmartDevice: [smartdevice.liebherr.com](https://smartdevice.liebherr.com)

Downloading the SmartDevice app:



After installing and configuring the SmartDevice app, you can connect your appliance to your Wi-Fi (see Wi-Fi) using the SmartDevice app and the appliance's Wi-Fi function.

## Note

The SmartDevice function is not available in the following countries: Russia, Belarus, Kazakhstan.

## 2.4 Appliance range of use

### Intended use

The appliance is only suitable for cooling food products in a domestic or household-like environment. This includes, for example, use:

- in staff kitchens, bed and breakfast establishments,
- by guests in country houses, hotels, motels and other accommodation,
- for catering and similar services in the wholesale trade.

The appliance is not suitable for freezing food;

The appliance is not suitable as a built-in unit.

All other types of use are not permitted.

### Foreseeable misuse

The following applications are expressly forbidden:

- Storing and refrigerating medicines, blood plasma, laboratory preparations or similar substances and products based on the Medical Device Directive 2007/47/EC
- Use in areas at risk of explosions

Misusing the appliance may lead to damage to the goods stored or they may spoil.

### Climate classifications

Depending on the climate classification the appliance is designed to operate in restricted ambient temperatures. The climate classification applying to your appliance is printed on the rating plate.

## Note

- Keep to the specified ambient temperatures in order to guarantee that the appliance works properly.

| Climate classification | for ambient temperatures of |
|------------------------|-----------------------------|
| SN                     | 10 °C to 32 °C              |

| Climate classification | for ambient temperatures of |
|------------------------|-----------------------------|
| N                      | 16 °C to 32 °C              |
| ST                     | 16 °C to 38 °C              |
| T                      | 16 °C to 43 °C              |
| SN-ST                  | 10 °C to 38 °C              |
| SN-T                   | 10 °C to 43 °C              |

## 2.5 Conformity

The refrigerant circuit has been tested for leaks. The appliance complies with the applicable safety regulations and with the corresponding directives.

For the EU market: The appliance complies with directive 2014/53/EU.

For the GB market: The appliance complies with Radio Equipment Regulations 2017 SI 2017 No. 1206.

The full text of the EU Declaration of Conformity is available on the following website: [www.liebherr.com](http://www.liebherr.com)

The BioFresh compartment meets the requirements of a cold storage compartment as set out in DIN EN 62552:2020.

## 2.6 SVHC substances according to REACH regulation

You can check whether your appliance contains SVHC substances according to REACH regulation at the following link: [home.liebherr.com/de/deu/de/liebherr-erleben/nachhaltigkeit/umwelt/scip/scip.html](http://home.liebherr.com/de/deu/de/liebherr-erleben/nachhaltigkeit/umwelt/scip/scip.html)

## 2.7 EPREL database

Details about energy labelling and ecodesign requirements will be available on the European product database (EPREL) from 1st March 2021. You can access the product database at the following link: <https://eprel.ec.europa.eu/> You will be asked to enter the model ID. You can find the model ID on the nameplate.

## 2.8 Spare parts

The spare parts availability for functional parts and stockable parts of the equipment is 15 years.



## 3 Functionality of the Touch & Swipe display

You operate your appliance using the Touch & Swipe display. You select appliance functions in the Touch & Swipe display (hereafter referred to as display) by tapping them. If you do not perform any action on the display for 10 seconds, the display either jumps back to the higher-level menu or directly to the status display.

### 3.1 Navigation and symbol explanation

In the illustrations, different symbols are used to navigate the display. The following table describes these symbols.


# Functionality of the Touch & Swipe display
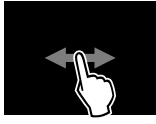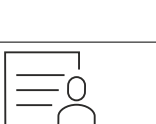
| Symbol                                                                              | Description                                                                                                                                                                                                         |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | <b>Briefly touch the display:</b><br>Activates/deactivates function.<br>Confirms selection.<br>Opens submenu.                                                                                                       |
|    | <b>Touch the display for a specified time (e.g. 3 seconds):</b><br>Activates/deactivates function or value.                                                                                                         |
|    | <b>Swipe left or right:</b><br>Navigate in the menu.                                                                                                                                                                |
|    | <b>Briefly touch the Back symbol:</b><br>Jumps back one menu level.                                                                                                                                                 |
|    | <b>Press and hold the Back symbol for 3 seconds:</b><br>Jumps back to the status display.                                                                                                                           |
|   | <b>Arrow with clock:</b><br>It takes more than 10 seconds for the following message to appear in the display.                                                                                                       |
|  | <b>Arrow with a time indication:</b><br>It takes the specified amount of time until the following message appears in the display.                                                                                   |
|  | <b>“Open Settings menu” symbol:</b><br>Navigates to the Settings menu and opens the settings menu.<br>If necessary: Navigate to the desired function in the Settings menu.<br>(see 3.2.1 Opening the Settings menu) |
|  | <b>“Open Advanced menu” symbol:</b><br>Navigates to the Advanced menu and opens the advanced menu.<br>If necessary: Navigate to the desired function in the Advanced menu.<br>(see 3.2.2 Opening the expanded menu) |
| No action for 10 seconds                                                            | If you do not perform any action on the display for 10 seconds, the display either jumps back to the higher-level menu or directly to the status display.                                                           |
| Open door and close it again.                                                       | If you open the door and immediately close it again, the display jumps directly back to the status display.                                                                                                         |

Note: Illustrations of the display are shown in the English version.

## 3.2 Menus

The appliance functions are distributed over various menus:
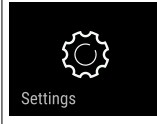
| Menu                                                                                             | Description                                                                                                                                                                                       |
|--------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Main menu                                                                                        | When you switch the appliance on, you are automatically in the main menu.<br>From here you can navigate to the most important appliance functions, to the Settings menu and to the Advanced menu. |
|  Settings menu | The Settings menu contains additional appliance functions for setting up your appliance.                                                                                                          |
| Advanced menu                                                                                    | The advanced menu contains special appliance functions for setting up your appliance. Access to the Advanced menu is protected by the numerical code <b>151</b> .                                 |

### 3.2.1 Opening the Settings menu

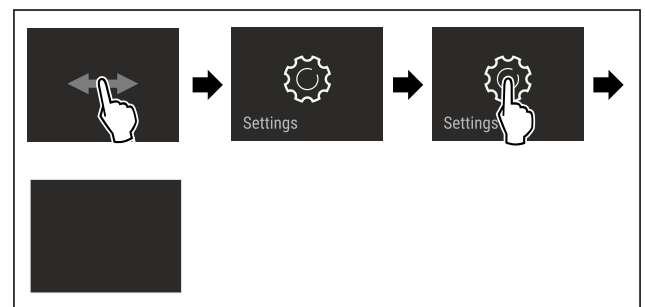


Fig. 2 Example illustration

- Carry out action steps according to the illustration.
- Settings menu is open.
- If necessary: Navigate to the desired function.

### 3.2.2 Opening the expanded menu




Fig. 3

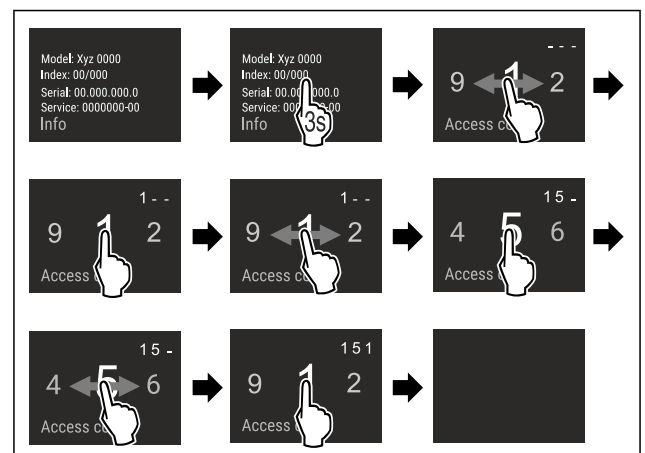


Fig. 4 Example illustration, access with numerical code **151**

- Carry out action steps according to the illustration.
- The expanded menu is open.
- If necessary: Navigate to the desired function.

## 3.3 Sleep mode

If you do not touch the display for 1 minute, the display switches to sleep mode. In sleep mode, the display brightness is dimmed.

### 3.3.1 Ending sleep mode

- ▶ Touch the display briefly with your finger.
- ▶ Sleep mode is ended.

## 4 Putting into operation

### 4.1 Switching on appliance (first use)

Make sure that the following requirements are fulfilled:

- ☐ The appliance has been installed and connected in accordance with the installation instructions.
- ☐ All adhesive strips, adhesive and protective films and transport locks are removed from inside and on the appliance.
- ☐ All marketing leaflets are removed from the drawers.
- ☐ You are familiar with the functionality of the Touch & Swipe display. (see 3 Functionality of the Touch & Swipe display)

**Switch on the appliance using the Touch & Swipe display:**

- ▶ If the display is in sleep mode: Briefly touch the display.
- ▶ Carry out action steps according to the illustration.

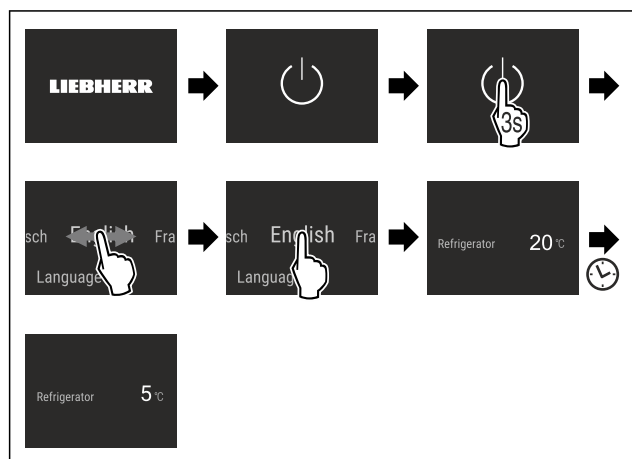


Fig. 5 Example illustration

- ▶ Status display appears.
- ▶ The appliance cools to the temperature set at the factory.
- ▶ The appliance starts in demo mode (status display with DEMO appears): If the appliance starts in demo mode, you can deactivate demo mode within the next 5 minutes. (see Demo mode)

**More information:**

- Start the InfinitySpring for the first time. (see 4.2 Putting InfinitySpring into operation\*) \*
- Start the HydroBreeze for the first time. (see 4.3 Starting the HydroBreeze for the first time\*) \*
- Start the SmartDevice for the first time. (see 2.3 Smart-Device) and (see WiFi)

#### Note

The manufacturer recommends:

- ▶ Stock with food: Wait for around 6 hours until the set temperature is reached.
- ▶ Observe the notes on storing food. (see 5.1 Information regarding storage)

#### Note

Accessories can be purchased from the Liebherr-Hausgeräte store at [home.liebherr.com/shop/de/deu/zubehor.html](http://home.liebherr.com/shop/de/deu/zubehor.html).

## 4.2 Putting InfinitySpring into operation\*

If your appliance is equipped with an InfinitySpring, **before the first use** you must bleed the water system for the InfinitySpring and clean the InfinitySpring.

Make sure that the following requirements are fulfilled:

- ☐ The water supply is connected. See the Installation Guide or installation instructions.
- ☐ The water tank is fitted. See the Installation Guide or installation instructions.
- ☐ The water filter is fitted. See the Installation Guide or installation instructions.\*
- ☐ Appliance is properly connected.

### 4.2.1 Bleeding the water system

- ▶ Open the appliance door.
- ▶ Push a glass against the lower part of the InfinitySpring dispenser.
- ▶ The upper part moves out and air escapes or water flows into the glass.
- ▶ Continue until the water flows evenly into the glass.
- ▶ The water system is now bled.

### 4.2.2 Cleaning the InfinitySpring

(see 9.8.5 Cleaning the InfinitySpring \*)

## 4.3 Starting the HydroBreeze for the first time\*

If your appliance is equipped with HydroBreeze, you must clean the HydroBreeze **before using it for the first time**.

Make sure that the following requirements are fulfilled:

- ☐ The appliance is properly connected.
- ▶ Clean the HydroBreeze. (see 9.8.6 Cleaning the HydroBreeze\*)
- ▶ Fill the water tank. (see 8.9.1 Fill the water tank)
- ▶ Activate HydroBreeze. (see HydroBreeze\*)

## 5 Storage

### 5.1 Information regarding storage



#### WARNING

Fire hazard from electrical appliances!

If you use electrical appliances in the food area of your appliance, they can cause a fire.

- ▶ Do not use electrical appliances in the food area of the appliance unless recommended by the manufacturer.

#### Note

The energy consumption increases and the cooling power goes down if ventilation is not sufficient.

- ▶ Always keep air slots clear.

Observe the following specifications for storage:

- Keep the air vents on the fan free.
- Package or cover foods that readily take on or give off odours or taste in closed containers.

# Storage

- Package raw meat or fish in clean, closed containers. This will prevent meat or fish from touching or dripping onto other food.
- Keep liquids in closed containers.
- Leave space between goods to ensure good air circulation.
- Store food according to the instructions on the packaging.
- Always observe the best-before date indicated on the packaging.

## Note

Failure to follow these guidelines can lead to foodstuffs spoiling.

## 5.2 Fridge compartment

The air circulation in the appliance creates different temperature zones. You will find the different temperature zones in the appliance and equipment overview. (see 2.2 Overview of the appliance and equipment)

### 5.2.1 Arranging your food properly

- Upper area and door: Store butter, cheese, tinned food and tubes.
- Coldest temperature zone: Store perishable foods such as pre-cooked meals.

## 5.3 BioFresh

BioFresh will extend the storage time for some fresh foods compared to traditional refrigeration.

## Note

If the temperature drops below 0 °C foods may freeze.

- Store cold-sensitive produce such as cucumbers, aubergines, courgettes and tropical fruit in the fridge compartment.

### 5.3.1 Fruit & Vegetable safe

This safe creates a storage climate of close to 0 °C. The compartment lid ensures constant levels of humidity. This storage climate is suitable for storing unpackaged food with high intrinsic moisture (for example, lettuce, vegetables, fruit).

The humidity in the compartment depends on the moisture content of the chilled goods placed in it, and also depends on how often the compartment is opened. You can regulate the humidity level.

#### Arranging your food properly

- Store unpackaged fruit and vegetables.  
If the humidity is too high:
- Regulate the humidity.

### 5.3.2 Meat & Dairy safe

This safe creates a storage climate of close to 0 °C. This storage climate is suitable for more sensitive foods (e.g. dairy products, meat, fish, sausage).\*

This safe creates a storage climate of close to 0 °C. This storage climate is suitable for more sensitive foods (e.g. dairy products, meat, sausage).\*

#### Arranging your food properly

- Store dry or packaged food.

### 5.3.3 Fish & Seafood safe

This safe creates a storage climate of between -2 °C and 0 °C. This storage climate is great for dry or packaged groceries (for example, dairy products, meat, fish, seafood, sausage).

This compartment includes a Fish & Seafood tray that you can move or take away.

You can set the temperature via the Touch & Swipe display. Dividing the compartment into different temperature zones is only possible with the Fish & Seafood tray inserted. (see Setting the temperature in the fridge section)

The following temperature combinations are possible:

|     |     |      |     |      |      |
|-----|-----|------|-----|------|------|
| 0°C | 0°C | -2°C | 0°C | -2°C | -2°C |
|-----|-----|------|-----|------|------|

Fig. 6

#### Arranging your food properly

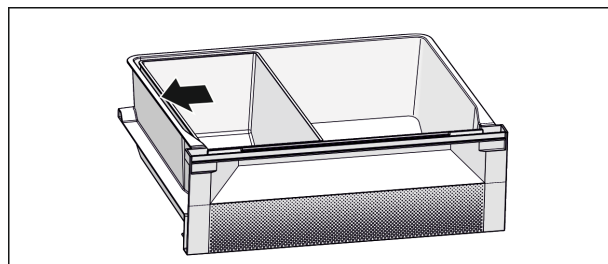


Fig. 7

- For an optimum cooling function: Position Fish & Seafood tray according to illustration (see Fig. 7) .
- Temperature zone -2 °C: Store fresh seafood or fish.
- Temperature zone 0 °C: Store dairy products or packaged meats.

## Note

You can achieve the highest level of energy efficiency using the temperature combination 0 °C / 0 °C.

Energy consumption is slightly higher using the temperature combination -2 °C / 0 °C and -2 °C / -2 °C.

## 5.4 Storage times

Refer to the specified storage times as a guide.

In the case of foods with a minimum shelf life, the date indicated on the packaging still applies.

### 5.4.1 Fridge section

Always follow the best-before date stated on the packaging.

### 5.4.2 BioFresh

| Recommended storage periods in the Meat & Dairy-Safe |         |                |
|------------------------------------------------------|---------|----------------|
| Butter                                               | at 1 °C | up to 90 days  |
| Hard cheese                                          | at 1 °C | up to 110 days |
| Milk                                                 | at 1 °C | up to 12 days  |
| Sausage, cold meats                                  | at 1 °C | up to 8 days   |
| Poultry                                              | at 1 °C | up to 6 days   |
| Pork                                                 | at 1 °C | up to 6 days   |
| Beef                                                 | at 1 °C | up to 6 days   |
| Game                                                 | at 1 °C | up to 6 days   |

## Note

- Remember that high-protein foods perish quicker; shellfish and crustaceans do not last as long as fish, and fish does not last as long as meat.

| Recommended storage periods in the Fruit & Vegetable-Safe |         |                |
|-----------------------------------------------------------|---------|----------------|
| Vegetables, salads                                        |         |                |
| Artichokes                                                | at 1 °C | up to 14 days  |
| Celery                                                    | at 1 °C | up to 28 days  |
| Cauliflower                                               | at 1 °C | up to 21 days  |
| Broccoli                                                  | at 1 °C | up to 13 days  |
| Chicory                                                   | at 1 °C | up to 27 days  |
| Lettuce                                                   | at 1 °C | up to 19 days  |
| Peas                                                      | at 1 °C | up to 14 days  |
| Kale                                                      | at 1 °C | up to 14 days  |
| Carrots                                                   | at 1 °C | up to 80 days  |
| Garlic                                                    | at 1 °C | up to 160 days |
| Turnip                                                    | at 1 °C | up to 14 days  |
| Lettuce                                                   | at 1 °C | up to 13 days  |
| Herbs                                                     | at 1 °C | up to 13 days  |
| Leeks                                                     | at 1 °C | up to 29 days  |
| Mushrooms                                                 | at 1 °C | up to 7 days   |
| Radishes                                                  | at 1 °C | up to 10 days  |
| Brussels sprouts                                          | at 1 °C | up to 20 days  |
| Asparagus                                                 | at 1 °C | up to 18 days  |
| Spinach                                                   | at 1 °C | up to 13 days  |
| Savoy                                                     | at 1 °C | up to 20 days  |
| Fruit                                                     |         |                |
| Apricots                                                  | at 1 °C | up to 13 days  |
| Apples                                                    | at 1 °C | up to 80 days  |
| Pears                                                     | at 1 °C | up to 55 days  |
| Blackberries                                              | at 1 °C | up to 3 days   |
| Dates                                                     | at 1 °C | up to 180 days |
| Strawberries                                              | at 1 °C | up to 7 days   |
| Figs                                                      | at 1 °C | up to 7 days   |
| Blueberries                                               | at 1 °C | up to 9 days   |
| Raspberries                                               | at 1 °C | up to 3 days   |
| Currants                                                  | at 1 °C | up to 7 days   |
| Sweet cherries                                            | at 1 °C | up to 14 days  |
| Kiwis                                                     | at 1 °C | up to 80 days  |
| Peaches                                                   | at 1 °C | up to 13 days  |
| Plums                                                     | at 1 °C | up to 20 days  |
| Cranberries                                               | at 1 °C | up to 60 days  |
| Rhubarb                                                   | at 1 °C | up to 13 days  |
| Gooseberries                                              | at 1 °C | up to 13 days  |
| Grapes                                                    | at 1 °C | up to 29 days  |

| Recommended storage periods in the Fish & Seafood-Safe* |          |              |
|---------------------------------------------------------|----------|--------------|
| Seafood                                                 |          |              |
| Crabs                                                   | at -2 °C | up to 4 days |
| Mussels                                                 | at -2 °C | up to 6 days |
| Sushi                                                   | at -2 °C | up to 4 days |
| Fish                                                    | at -2 °C | up to 4 days |

## 6 Saving energy

- Pay attention to good ventilation. Do not cover ventilation holes or grids.
- Always keep the fan air slits clear.
- Do not place the appliance in direct sunlight or near radiators or similar sources of heat.
- If the appliance is placed directly next to an oven, the energy consumption may increase slightly. This is dependent on the service life and usage intensity of the oven.
- Energy consumption depends on the installation conditions, e.g. the ambient temperature (see 2.4 Appliance range of use) . A warmer ambient temperature can increase the energy consumption.
- Open the appliance for as short a time as possible.
- The lower the temperature is set the higher the energy consumption.
- Sort your food: [home.liebherr.com/food](http://home.liebherr.com/food).
- Keep all food properly packed and covered. This prevents frost from forming.
- Only take food out for as long as necessary so that it doesn't warm up too much.
- Inserting warm food: allow to cool down to room temperature first.
- For longer periods of absence, use HolidayMode (see HolidayMode) .

## 7 Controls

### 7.1 Controls and displays

#### 7.1.1 Status display

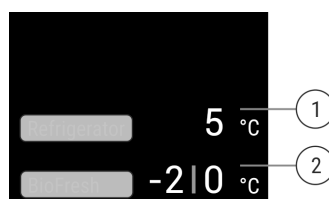


Fig. 8 The status display shows the actual temperature.\*

- (1) Temperature display of the fridge section      (2) Temperature display Bio-Fresh (Fish & Seafood Safe)

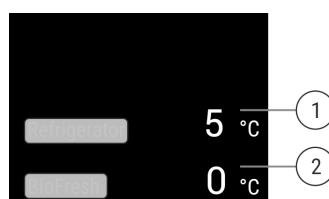


Fig. 9 The status display shows the actual temperature.\*

- (1) Temperature display of the fridge section      (2) Temperature display BioFresh

# Controls

The status display shows the actual temperature and is the initial display. Navigation to the functions takes place from there.

## 7.1.2 Display symbols

Display symbols provide information on the current appliance status:

| Symbol                                                                            | Appliance status                                                                                          |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
|  | <b>Standby</b><br>The appliance or temperature zone is switched off.                                      |
|  | <b>Flashing number</b><br>Appliance is working. Temperature flashes until the set temperature is reached. |
|  |                                                                                                           |
|  | <b>Flashing symbol</b><br>Appliance is working. Setting is made.                                          |
|  |                                                                                                           |

## 7.2 Appliance functions

### 7.2.1 Notes on the appliance functions

The appliance functions are set at the factory so that your appliance is fully functional.

Before you alter, activate or deactivate the device functions, make sure that the following requirements are met:

- ☐ You have read and understood the descriptions of how the display works. (see 3 Functionality of the Touch & Swipe display)
- ☐ You have familiarised yourself with the operating and display elements of your appliance.



### Switching the appliance off and on

Use this function to switch the entire appliance off and on.

#### Switching off the appliance

When you switch the appliance off, then the previously saved settings are saved.

Make sure that the following requirements are fulfilled:

- ☐ Handling instructions (see 11 Shutting down) are carried out.



Fig. 10

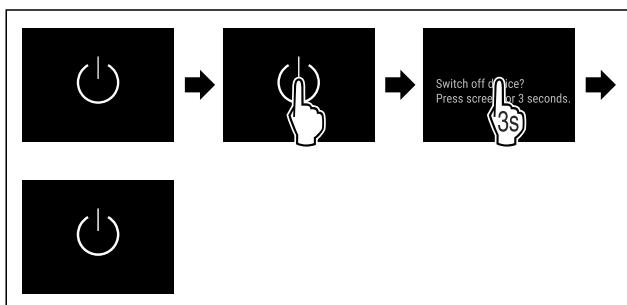


Fig. 11

- ▶ Carry out action steps according to the illustration.
- ▶ Appliance is switched off.
- ▶ The standby symbol appears in the display.
- ▶ Display turns black.

#### Switching on the appliance

If the display is in sleep mode:

- ▶ Briefly touch the display.

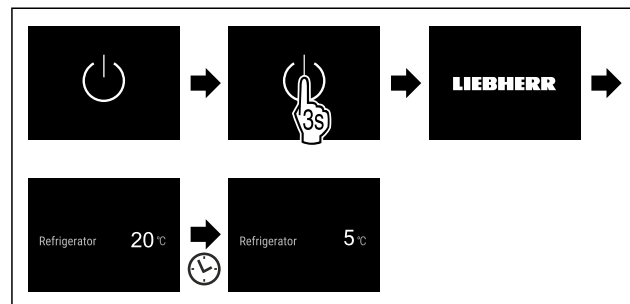


Fig. 12 Example illustration

- ▶ Carry out action steps according to the illustration.
- When the appliance starts in demo mode:
- ▶ Deactivating demo mode. (see Deactivating demo mode)
- ▶ The appliance is switched on.
- ▶ Previous settings are restored.
- ▶ The appliance cools to the target temperature set.



### WiFi

Use this function to connect your appliance to WiFi. You can then operate it via the SmartDevice app on a mobile device. You can also use this function to disconnect or reset the WiFi connection.

More information on the SmartDevice: (see 2.3 SmartDevice)

#### Note

The SmartDevice function is not available in the following countries: Russia, Belarus, Kazakhstan.

#### Establishing the WiFi connection for the first time

Make sure that the following requirements are fulfilled:

- ☐ You have installed the SmartDevice app (see [apps.home.liebherr.com](https://apps.home.liebherr.com)).
- ☐ Registration in the SmartDevice app is completed.



Fig. 13

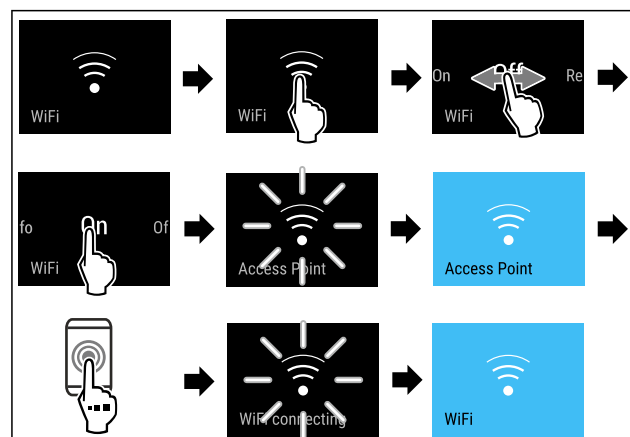


Fig. 14

- Carry out action steps according to the illustration.
- Connection is established.

## Disconnecting from the WiFi




Fig. 15

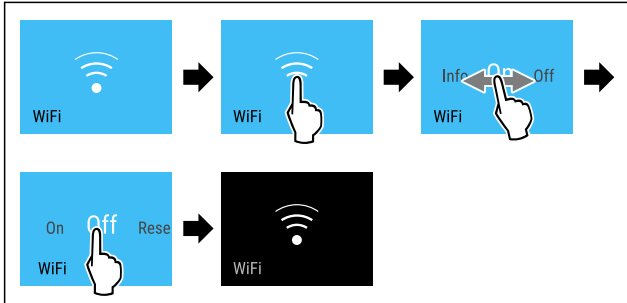


Fig. 16

- Carry out action steps according to the illustration.
- There is no connection.

## Resetting the WiFi connection



Fig. 17

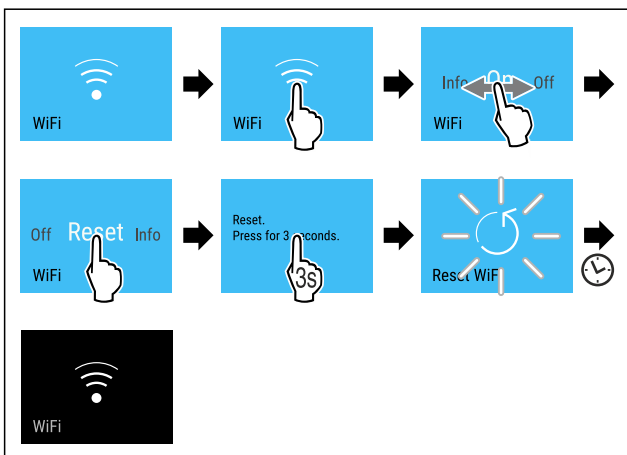


Fig. 18

- Carry out action steps according to the illustration.
- WiFi connection and other WiFi settings are reset to factory settings.

## Showing information about the WiFi connection



Fig. 19

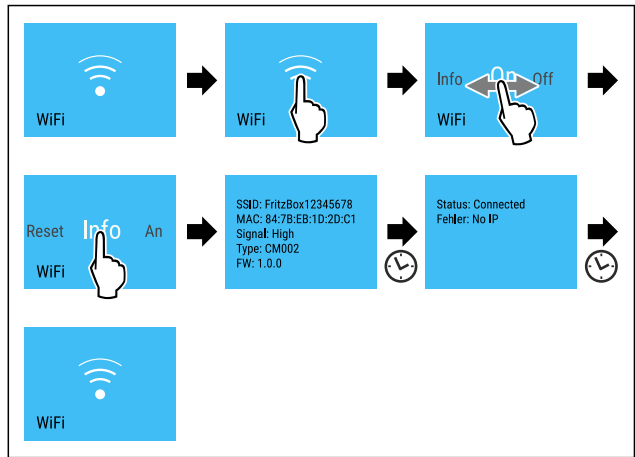


Fig. 20

- Carry out action steps according to the illustration.

5 °C

## Temperature

Use this function to set the temperature.

The temperature depends on the following factors:

- Frequency of door opening
- Duration of door opening
- Room temperature of the installation site
- Type, temperature and quantity of food

| Temperature zone                                                | Factory-set temperature | Recommended setting                 |
|-----------------------------------------------------------------|-------------------------|-------------------------------------|
| 5 °C Fridge section                                             | 5 °C                    | 4 °C                                |
| 0 °C BioFresh*<br>Fruit & Vegetable-safe*<br>Meat & Dairy-safe* | 0 °C                    | B-Value<br>(see BioFresh B-Value )  |
| -210 °C Fish & Seafood-safe*                                    | -2 °C   0 °C*           | (see 5.3.3 Fish & Seafood safe *) * |

## Setting the temperature in the fridge section

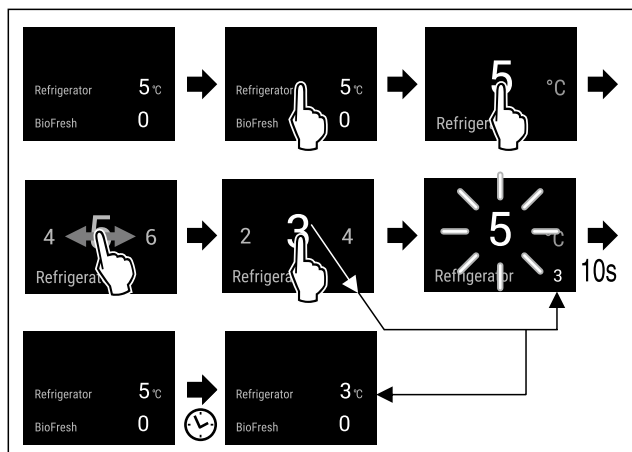


Fig. 21 Example illustration

- Carry out action steps according to the illustration.

# Controls

► Temperature is set.

## Setting the temperature in BioFresh

Set the temperature using the **BioFresh B-Value**. (see BioFresh B-Value )

## Setting the temperature in the Fish & Seafood safe\*

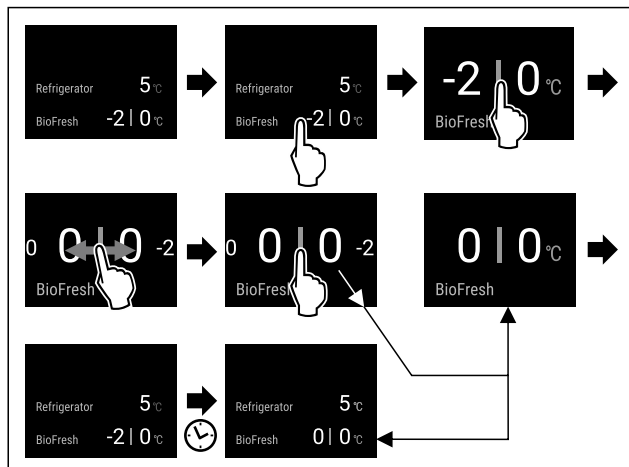


Fig. 22 Example illustration

- Carry out action steps according to the illustration.
- Temperature is set.

## Temperature unit

Use this function to set the temperature unit. You can set degrees Celsius or degrees Fahrenheit as the temperature unit.

## Setting the temperature unit



Fig. 23

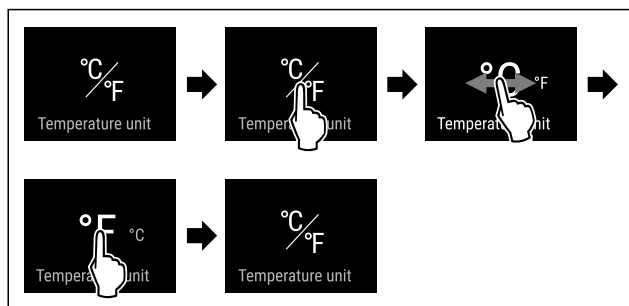


Fig. 25 Example illustration: Switch from degrees Celsius to degrees Fahrenheit.

- Carry out action steps according to the illustration.
- The temperature unit is set.

## B5 BioFresh B-Value

Use this function to set the BioFresh B-Value. With the BioFresh B-Value, you can set BioFresh slightly warmer or colder if necessary due to higher or lower ambient temperatures. The BioFresh B-Value is pre-set to value B5 as delivered. If you change the B-Value, refer to the following table:

| Value | Description        |
|-------|--------------------|
| B1    | Lowest temperature |

| Value | Description                                                              |
|-------|--------------------------------------------------------------------------|
| B1-B4 | The temperature can drop below 0 °C which means foods can easily freeze. |
| B5    | Pre-set temperature                                                      |
| B9    | Highest temperature                                                      |

## Setting the BioFresh B-Value



Fig. 26

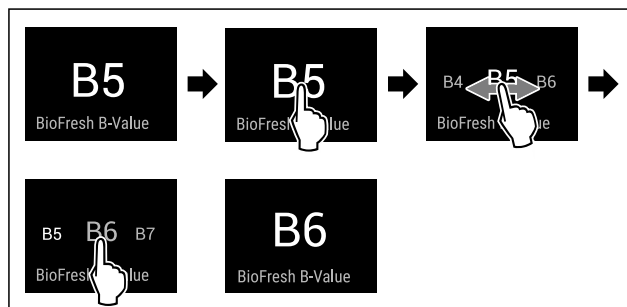


Fig. 28 Example illustration: Switch from B5 to B6.

- Carry out action steps according to the illustration.
- The BioFresh B-Value is set.
- Status display shows target temperature.\*

## D1 D-Value

The D-Value is pre-set for your appliance and is not permitted to be changed.

## SuperCool

- ▶ Activate with the SmartDevice app.
- ▶ SuperCool is activated.
- ▶ The temperature display turns blue.

## Deactivating SuperCool

SuperCool is deactivated automatically after 18 hours. However, you can also deactivate SuperCool manually at any time:



Fig. 31

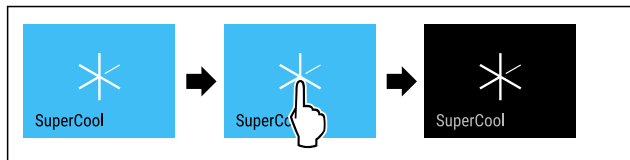


Fig. 32

- ▶ Carry out action steps according to the illustration.
- or-
- ▶ Deactivate with the SmartDevice app.
- ▶ SuperCool is deactivated.
- ▶ The appliance continues to run in normal mode.
- ▶ The appliance cools to the temperature set previously.



## HolidayMode

You can use this function to activate or deactivate HolidayMode. If you activate HolidayMode, the fridge section is set to 15 °C. This saves you energy during longer periods of absence and prevents bad odours and growth of mould.

| Appliance status when HolidayMode is active |
|---------------------------------------------|
| Fridge section cools to 15 °C.              |
| BioFresh cools to 15 °C.                    |
| SuperCool is deactivated.                   |

## Activating HolidayMode

- ▶ Empty the fridge section completely.
- ▶ Empty BioFresh completely.



Fig. 33

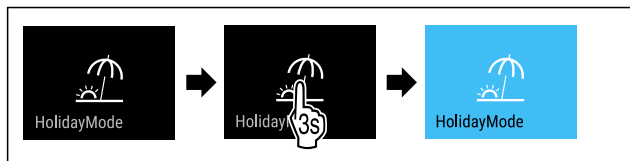


Fig. 34

- ▶ Carry out action steps according to the illustration.
- ▶ HolidayMode is activated.
- ▶ Temperature display turns blue and shows HolidayMode symbol.

## Deactivating HolidayMode



Fig. 35

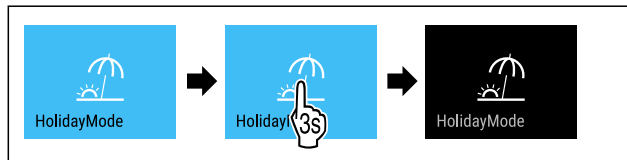


Fig. 36

- ▶ Carry out action steps according to the illustration.
- ▶ HolidayMode is deactivated.
- ▶ The appliance cools to the temperature set previously.



## SabbathMode

You can use this function to activate or deactivate SabbathMode. If you activate this function, some electronic functions are switched off. As a result, your device meets the religious requirements for Jewish holidays such as Sabbath and complies with STAR-K Kosher certification.

| Device status when SabbathMode is active                                                                  |
|-----------------------------------------------------------------------------------------------------------|
| The status display shows SabbathMode permanently.                                                         |
| All functions on the display are locked except for the <b>Deactivate SabbathMode function</b> .           |
| Active functions remain active.                                                                           |
| The display remains bright when you close the door.                                                       |
| The interior lighting is deactivated.                                                                     |
| Reminders are not implemented. The set time interval stops.                                               |
| Reminders and warnings are not displayed.                                                                 |
| There is no door alarm.                                                                                   |
| There is no temperature alarm.                                                                            |
| The InfinitySpring is switched off.*                                                                      |
| The defrosting cycle operates only for the specified time, without considering the appliance consumption. |
| After a power failure, the appliance returns to SabbathMode.                                              |

## Device status

## Note

This appliance has certification from the "Institute for Science and Halacha". ([www.machonhalacha.co.il](http://www.machonhalacha.co.il))

You can find a list of STAR-K-certified appliances at [www.star-k.org/appliances](http://www.star-k.org/appliances).

# Controls

## Activating SabbathMode



### WARNING

Danger of food poisoning from spoiled food!  
If you have SabbathMode activated and a power failure occurs, no message appears in the status display about the power failure. Once the power is restored, the appliance continues to operate in SabbathMode. The power failure may mean that food spoils and the consumption of this food could lead to food poisoning.

After a power failure:

- Do not consume food that was frozen and has thawed out.



Fig. 37

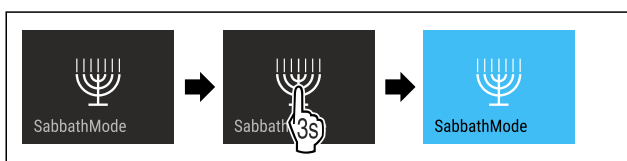


Fig. 38

- Carry out action steps according to the illustration.
- SabbathMode is activated.
- The status display shows SabbathMode permanently.

## Deactivating SabbathMode

The SabbathMode is automatically deactivated after 80 hours. However, you can also deactivate SabbathMode manually at any time:

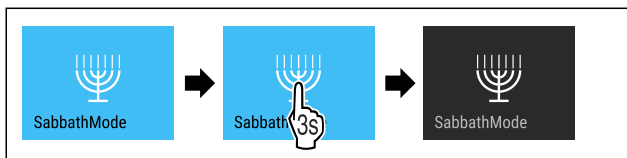


Fig. 39

- Carry out action steps according to the illustration.
- SabbathMode is deactivated.



## EnergySaver

You can use this function to activate or deactivate Energy saving mode. If energy saving mode is activated, the energy consumption decreases and the temperature in the device increases. The food remains fresh, but the shelf life is shortened.

| Temperature zone               | Recommended setting (see Setting the temperature in the fridge section) | Temperature with active EnergySaver |
|--------------------------------|-------------------------------------------------------------------------|-------------------------------------|
| <div>5 °C</div> Fridge section | 4 °C                                                                    | 7 °C                                |

Temperatures

## Activating EnergySaver



Fig. 40

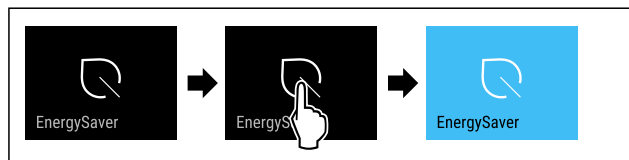


Fig. 41

- Carry out action steps according to the illustration.
- Energy saving mode is activated.

## Deactivating EnergySaver



Fig. 42

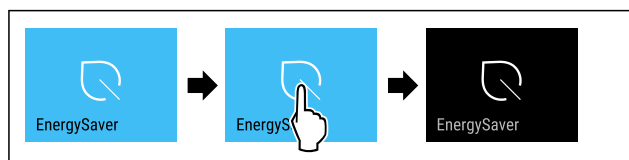


Fig. 43

- Carry out action steps according to the illustration.
- Energy saving mode is deactivated.



## HydroBreeze\*

You can use this function to activate or deactivate HydroBreeze. If you activate the function, HydroBreeze generates a fine, cool mist in BioFresh-safe. This extends the shelf life of unpackaged salad, vegetables and fruit with high intrinsic moisture.

If you activate the function, HydroBreeze activates every 90 minutes for 4 seconds when the door is closed. When you open the door, HydroBreeze activates according to the setting:

| Value                     | Description                                                |
|---------------------------|------------------------------------------------------------|
| 1                         | HydroBreeze is active for 4 seconds when the door is open. |
| 2                         | HydroBreeze is active for 6 seconds when the door is open. |
| 3                         | HydroBreeze is active for 8 seconds when the door is open. |
| Deactivated (pre-setting) | HydroBreeze is deactivated.                                |

HydroBreeze duration when the door is open

## Activating HydroBreeze

### Note

If you activate HydroBreeze but there is no food in the drawer, condensate forms on the base of the drawer.

- Only activate HydroBreeze if you are storing food in the drawer.

Make sure that the following requirements are fulfilled:

- ❑ The HydroBreeze is clean. (see 9.8.6 Cleaning the HydroBreeze\*)
- ❑ The water tank is full. (see 8.9.1 Fill the water tank)

Activate HydroBreeze by selecting a value for the HydroBreeze duration:



Fig. 44

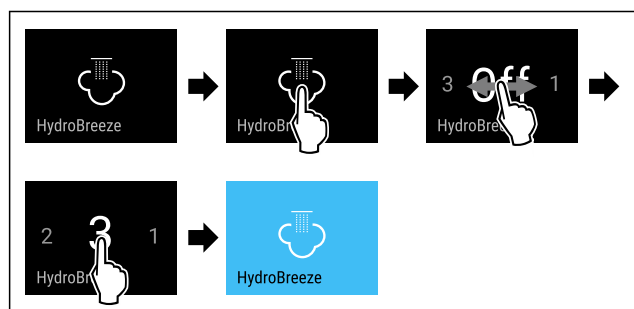


Fig. 45 Example illustration: Activate HydroBreeze with value 3.

- Carry out action steps according to the illustration.
- HydroBreeze is activated.

## Deactivating HydroBreeze



Fig. 46

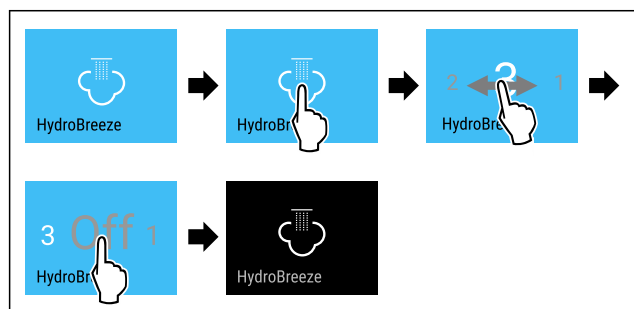


Fig. 47

- Carry out action steps according to the illustration.
- HydroBreeze is deactivated.

## CleaningMode

You can use this function to activate or deactivate CleaningMode. CleaningMode enables the appliance to be cleaned conveniently.

This setting applies to the fridge section.

Application:

- Clean the fridge section. (see 9.8 Cleaning the appliance)
- Clean the InfinitySpring. (see 9.8.5 Cleaning the InfinitySpring \*) \*

| Device status when CleaningMode is active          |
|----------------------------------------------------|
| The status display shows CleaningMode permanently. |

| Device status when CleaningMode is active                            |
|----------------------------------------------------------------------|
| The fridge section is switched off.                                  |
| Interior lighting is activated.                                      |
| The reminders and warnings are not displayed. No signal tone sounds. |
| The InfinitySpring is switched off.*                                 |

Device status

## Activating CleaningMode



Fig. 48



Fig. 49

- Carry out action steps according to the illustration.
- CleaningMode is activated.
- The status display shows CleaningMode permanently.

## Deactivating CleaningMode

CleaningMode is deactivated automatically after 60 minutes. However, you can also deactivate CleaningMode manually at any time:



Fig. 50

- Carry out action steps according to the illustration.
- CleaningMode is deactivated.
- The appliance cools to the temperature set previously.



## Display brightness

Use this function to set the display brightness in stages.

You can select the following brightness levels:

- 40 %
- 60 %
- 80 %
- 100 % (pre-setting)

## Setting the brightness



Fig. 51

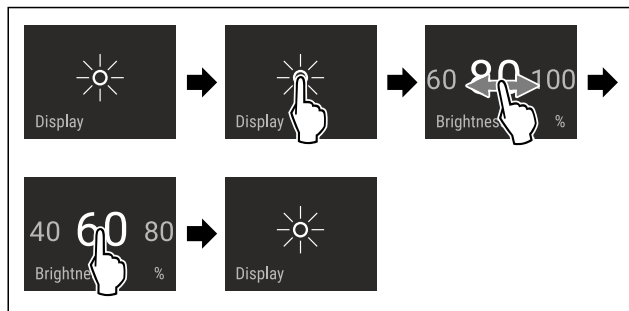


Fig. 52 Example illustration: Switch from 80 % to 60 %.

- Carry out action steps according to the illustration.
- The brightness is set.



## Door alarm

Use this function to activate or deactivate the door alarm. The door alarm sounds if the door is open for too long. The door alarm is activated on delivery. You can set how long the door may be open before the door alarm sounds.

The following values can be set:

- 1 minute
- 2 minutes
- 3 minutes
- Off

### Setting the door alarm



Fig. 53

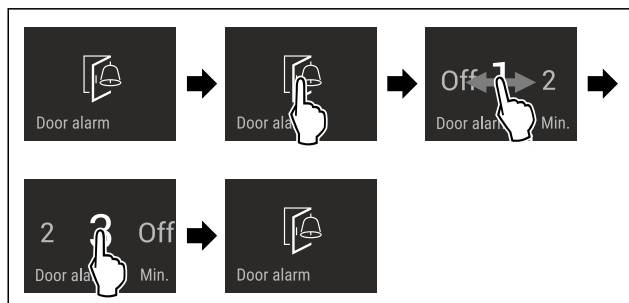


Fig. 54 Example illustration: Change door alarm from 1 minute to 3 minutes.

- Carry out action steps according to the illustration.
- The door alarm is set.

### Deactivating the door alarm



Fig. 55

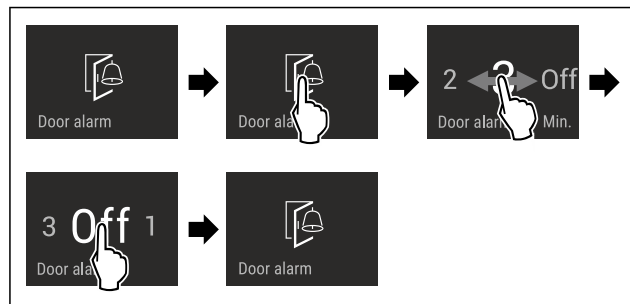


Fig. 57

- Carry out action steps according to the illustration.
- The door alarm is deactivated.



## Input lock

You can use this function to activate or deactivate the input lock. The input lock prevents the appliance being operated accidentally, e.g. by children.

Application:

- Avoid unintentional modification of functions.
- Avoid unintentional switching off of the device.
- Avoid unintentional temperature setting.

### Activating the input lock

If you activate the input lock, you can continue to navigate in the menus but you cannot select or change other functions.



Fig. 58

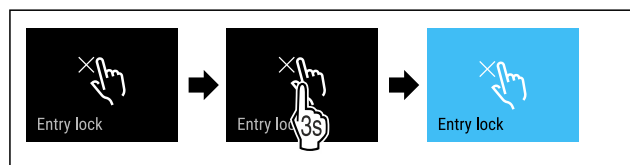


Fig. 59

- Carry out action steps according to the illustration.
- Input lock is activated.

### Deactivating the input lock



Fig. 60

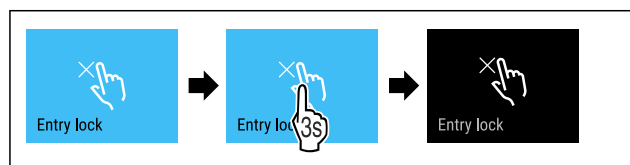


Fig. 61

- Carry out action steps according to the illustration.
- Input lock is deactivated.



## Language

Use this function to set the display language.

You can select the following languages:

- Deutsch
- English
- Français
- Español
- Italiano
- Nederlands
- Čeština
- Polski
- Português
- Bulgarian
- Русский
- 温度单位

## Setting the language




Fig. 62

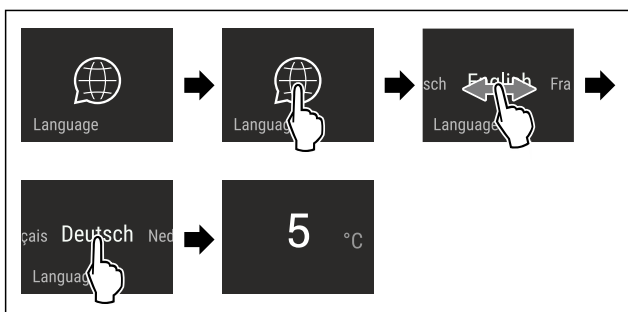


Fig. 63 Example illustration depending on the language and temperature

- ▶ Carry out action steps according to the illustration.
- ▶ The language is set.
- ▶ The display returns to the status display.



## Device information

Use this function to indicate the model name, index, serial number and service number of your device. You will need the device information when you contact customer service. (see 10.4 Customer Service)

This function also opens the Advanced menu. (see 3 Functionality of the Touch & Swipe display)

### Indicating the device information



Fig. 64



Fig. 65

- ▶ Carry out action steps according to the illustration.
- ▶ Display indicates device information.



## Software

Use this function to indicate the software version of your device.

### Indicating the software version



Fig. 66



Fig. 67

- ▶ Carry out action steps according to the illustration.
- ▶ Display indicates software version.



## Reminder

Use this function to activate or deactivate the reminders. The function is activated on delivery.

If the function is activated, the following reminders will appear:

- Replace the water filter (see Replace the water filter\*) \*
- Replace the FreshAir activated carbon filter (see Replace the FreshAir activated carbon filter)

### Activating the reminder




Fig. 68

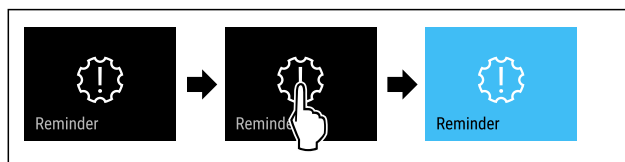


Fig. 69

- ▶ Carry out action steps according to the illustration.
- ▶ Reminder is activated.

### Deactivating the reminder



Fig. 70

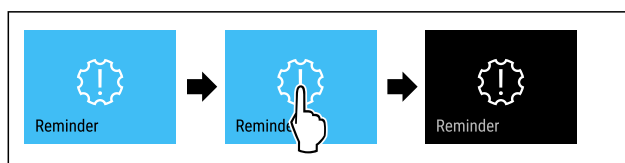


Fig. 71

- ▶ Carry out action steps according to the illustration.
- ▶ Reminder is deactivated.



## Demo mode

Demo mode is a special feature for dealers who want to demonstrate appliance features. If you activate demo mode, all refrigeration functions are deactivated.

If you switch on your appliance and “Demo” appears in the status display, then demo mode is already activated.

If you activate and then deactivate demo mode, the appliance will be reset to factory defaults. (see [Resetting to factory settings](#))

## Activating demo mode



*Fig. 72*

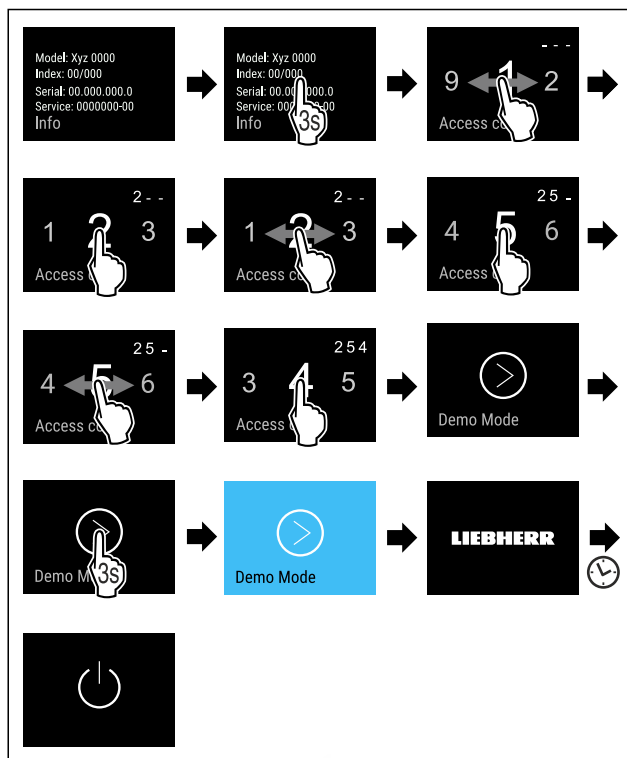


Fig. 73

- ▶ Carry out action steps according to the illustration.
- ▶ Demo mode is activated.
- ▶ Appliance is switched off.
- ▶ Switch on the appliance. (see 4.1 Switching on appliance (first use))
- ▶ “DEMO” appears in the status display.

## Deactivating demo mode





Fig. 74



*Fig. 75*

- ▶ Carry out action steps according to the illustration.
- ▶ Demo mode is deactivated.
- ▶ Appliance is switched off.
- ▶ Switch on the appliance. (see 4.1 Switching on appliance (first use))
- ▶ Appliance is reset to factory settings.

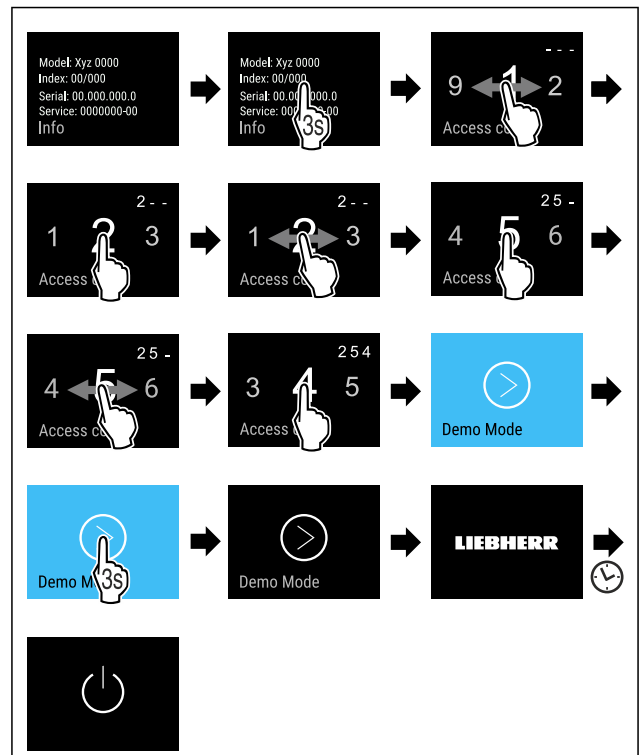


## Resetting to factory settings

Use this function to reset all settings to factory defaults. All settings you have made so far are reset to their original settings.

## Performing a reset



Fig. 76

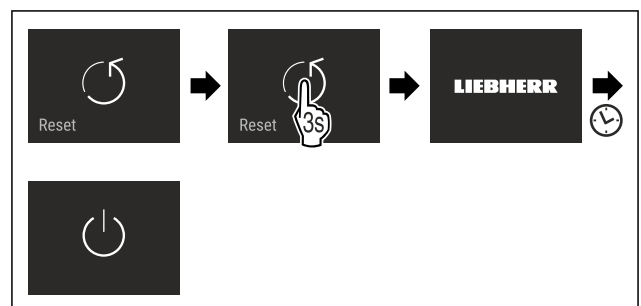

*Fig. 77*

- ▶ Carry out action steps according to the illustration.
- ▶ Device is reset.
- ▶ Device is switched off.
- ▶ Restart the device. (see 4.1 Switching on appliance (first use))

## 7.3 Messages



There are two categories of messages:

| Category | Importance                                                                                                                                                                                                         |
|----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Warning  | Warnings appear in the event of a door alarm or malfunction.<br>Simple warnings can be cancelled by yourself. In the event of serious malfunctions, you must contact customer service. (see 10.4 Customer Service) |
| Reminder | Reminders remind you of general processes. You can carry out these operations to end the message.                                                                                                                  |

### 7.3.1 Overview of warnings

Behaviour of the appliance in the event of warnings:

- Warning appears in red on the display.
- The alarm tone sounds at an ever-increasing volume.
- The interior lighting pulsates for some warnings.
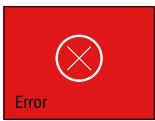
| Message                                                                                                 | Cause                                                                                                                                                                                 | Exit the message                         |
|---------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------|
| <br><b>Door alarm</b>   | The message appears if the door is open for too long.                                                                                                                                 | Carry out action steps (see Door alarm). |
| <br><b>Error</b>      | The message appears if there is an appliance error. A component of the appliance has a fault.                                                                                         | Carry out action steps (see Error).      |
| <br><b>WLAN error</b> | The message appears if the appliance could not be connected to the WLAN. (see Establishing the WiFi connection for the first time) The message only appears during the initial setup. | Carry out action steps (see WLAN error). |

### 7.3.2 Ending warnings

#### Door alarm

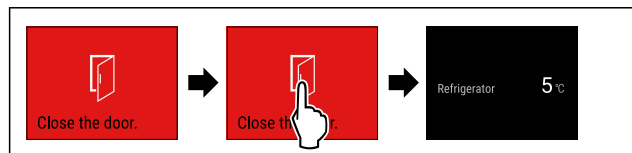


Fig. 78 Example illustration

- Carry out action steps according to the illustration.

-or-

- Close the door.

- The display returns to the status indicator.

You can set how long the door may be open before the door alarm sounds. (see Setting the door alarm)

#### Error

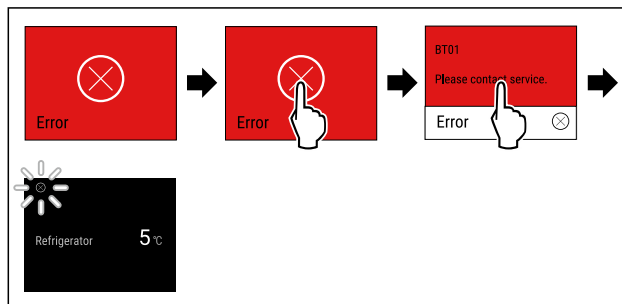


Fig. 79 Example illustration

- Briefly touch the display.
- Error code is displayed.
- Note the error code.
- Briefly touch the display.
- The display returns to the status indicator.
- Contact Customer Service. (see 10.4 Customer Service)

#### WLAN error

- Check WLAN connection.
- Reconnect the appliance to the WLAN. (see WiFi)



### 7.3.3 Overview of reminders

Behaviour of the appliance during reminders:

- Reminder appears yellow on the display.
- Alarm tone sounds.
- The interior lighting pulsates for some reminders.

The following reminders can be deactivated (see Deactivating the reminder) :

- Replace the FreshAir activated carbon filter
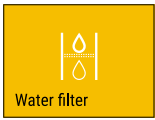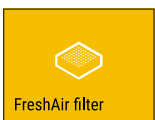
| Message                                                                                                                                    | Cause                                                                               | Exit the message                                                           |
|--------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------|
| <br><b>Replace the water filter*</b>                    | The message appears when the water filter needs to be replaced.*                    | Carry out action steps (see Replace the water filter*). *                  |
| <br><b>Replace the FreshAir activated carbon filter</b> | The message appears when the FreshAir activated carbon filter needs to be replaced. | Carry out action steps (see Replace the FreshAir activated carbon filter). |

### 7.3.4 Ending reminders

#### Replace the water filter\*

Liebherr recommends: Replace the water filter every 6 months.

#### Note

Water filters are available from the Liebherr-Hausgeräte store at [home.liebherr.com/shop/de/deu/zubehor.html](https://home.liebherr.com/shop/de/deu/zubehor.html).

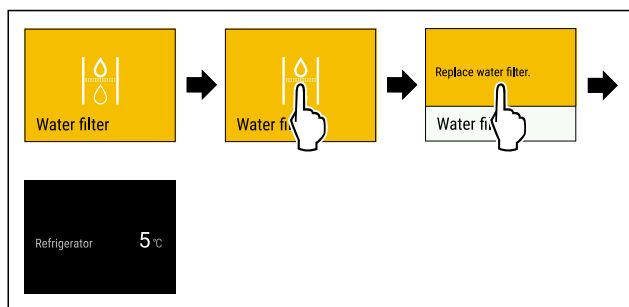


Fig. 80 Example illustration

- ▶ Briefly touch the display.
- ▶ Display shows reminder information.
- ▶ Briefly touch the display.
- ▶ Replace the water filter. (see 9.3 Water filter\*)
- ▶ Water filter ensures optimum water quality.
- ▶ Reminder appears again after 6 months.

If you no longer wish to receive this reminder, you can deactivate it. (see Deactivating the reminder)

## Replace the FreshAir activated carbon filter

Liebherr recommends: Replace the FreshAir activated carbon filter every 6 months.

### Note

FreshAir activated charcoal filters can be purchased from the Liebherr-Hausgeräte store at [home.liebherr.com/shop/de/deu/zubehor.html](http://home.liebherr.com/shop/de/deu/zubehor.html).

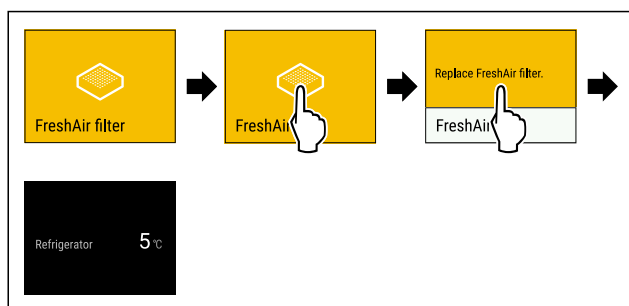


Fig. 81 Example illustration

- ▶ Briefly touch the display.
- ▶ Display shows reminder information.
- ▶ Briefly touch the display.
- ▶ Replace the activated carbon filter. (see 9.1 FreshAir carbon filter)
- ▶ Activated carbon filter ensures optimum air quality in the cooling unit.
- ▶ Reminder appears again after 6 months.

If you no longer wish to receive this reminder, you can deactivate it. (see Deactivating the reminder)

## 8 Features

### 8.1 Door rack

Door racks are suitable for storing drinks and food. You can move door racks for your own individual use and take them apart for cleaning. However, Liebherr recommends using the door racks in the position in the door as delivered from the factory.

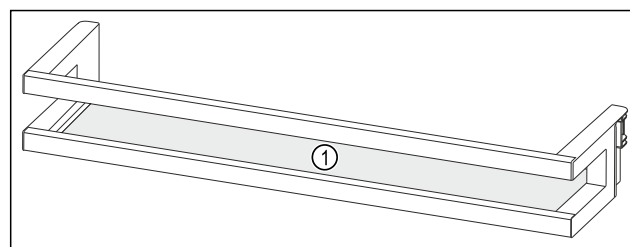


Fig. 82 Example illustration, Door rack

(1) Shelf

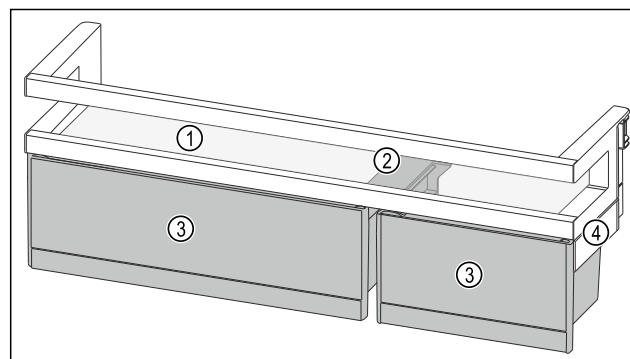


Fig. 83 Example illustration, Door racks with VarioBoxes

(1) Shelf  
(2) Holding part for VarioBoxes  
(3) VarioBoxes  
(4) Side part

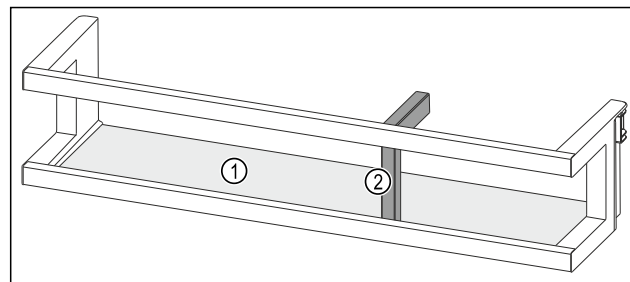


Fig. 84 Example illustration, Door rack with bottle holder

(1) Shelf  
(2) Bottle holder

The following table shows examples of what can be stored in each door rack. Do not exceed the maximum loading weight of the door.

| Door rack                                  | Food                                                                       |
|--------------------------------------------|----------------------------------------------------------------------------|
| Door rack (see Fig. 82)                    | Butter, cheese, tinned food, tubes                                         |
| Door rack with bottle holder (see Fig. 84) | Bottles<br>The sliding bottle holder secures the bottles in the door rack. |
| Door rack with VarioBoxes (see Fig. 83)    | small food items                                                           |

#### 8.1.1 Removing VarioBoxes

Either one or both VarioBoxes can be used. If you want to store particularly tall bottles in the door rack under the door rack with VarioBoxes, you can remove one or both VarioBoxes.

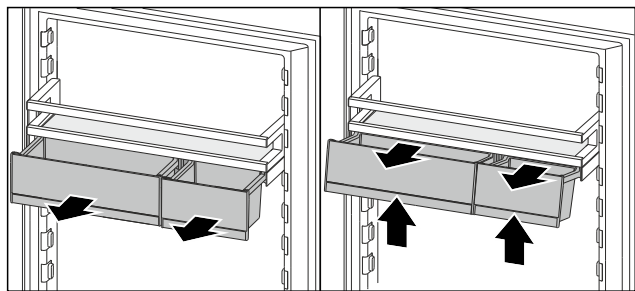


Fig. 85

- ▶ Pull out VarioBox to the end stop.
- ▶ Lift VarioBoxes out forwards.
- ▶ Take VarioBox out forwards.

## 8.1.2 Removing the door rack

Ensure that the following requirements are met:

- ❑ VarioBoxes have been removed. (see 8.1.1 Removing VarioBoxes)

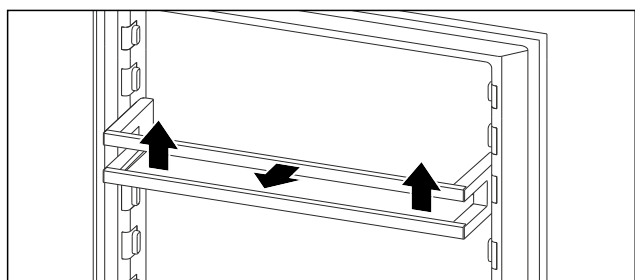


Fig. 86 Example illustration

- ▶ Push the door rack upwards.
- ▶ Pull the door rack forward.

## 8.1.3 Inserting the door rack

Ensure that the following requirements are met:

- ❑ VarioBoxes have been removed. (see 8.1.1 Removing VarioBoxes)

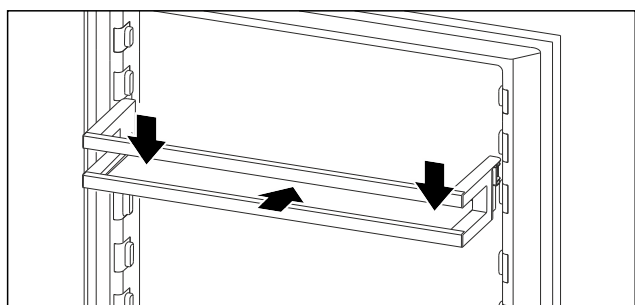


Fig. 87 Example illustration

- ▶ Slide in the door rack.
- ▶ Press the door rack down.

## 8.1.4 Inserting VarioBoxes

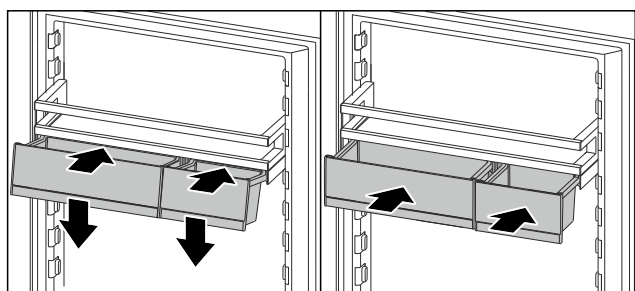


Fig. 88

- ▶ Place VarioBoxes at an angle on the rib of the door rack.

- ▶ Lower VarioBoxes.
- ▶ Push in the VarioBoxes.

## 8.1.5 Converting VarioBoxes

Ensure that the following requirements are met:

- ❑ VarioBoxes have been removed. (see 8.1.1 Removing VarioBoxes)
- ❑ Door rack has been removed. (see 8.1.2 Removing the door rack)

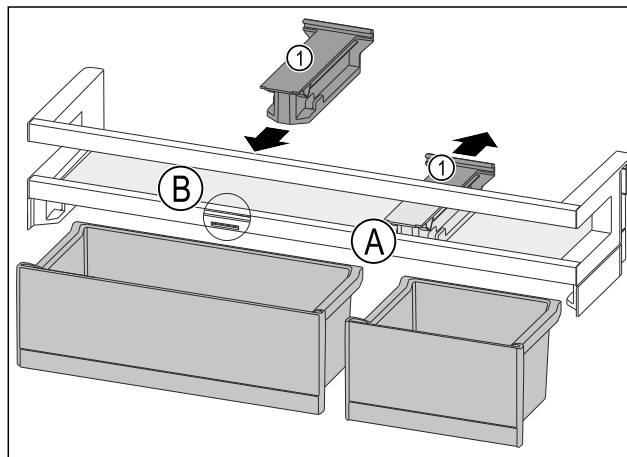


Fig. 89

- ▶ Take off the holding part Fig. 89 (1) in position Fig. 89 (A) backwards.
- ▶ Insert the holding part Fig. 89 (1) in position Fig. 89 (B).
- ▶ Insert the door rack. (see 8.1.3 Inserting the door rack)

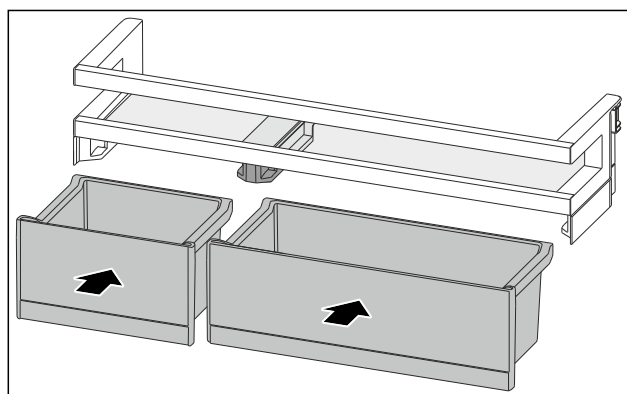


Fig. 90

- ▶ Insert the VarioBoxes in reverse order. (see Fig. 90)

## 8.1.6 Dismantling the door rack

It is possible to dismantle some of the door racks if you want to clean them or install or remove spare parts.

### Dismantling the door rack

Ensure that the following requirements are met:

- ❑ Door rack has been removed. (see 8.1.2 Removing the door rack)

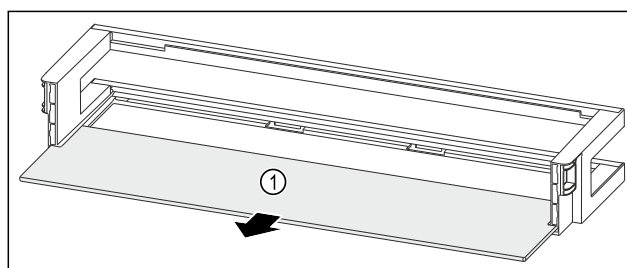


Fig. 91 Door rack with shelf


# Features

- Remove the shelf *Fig. 91 (1)*.

## Dismantling the door rack with VarioBoxes

Ensure that the following requirements are met:


- ❑ Door rack has been removed. (see 8.1.2 Removing the door rack)

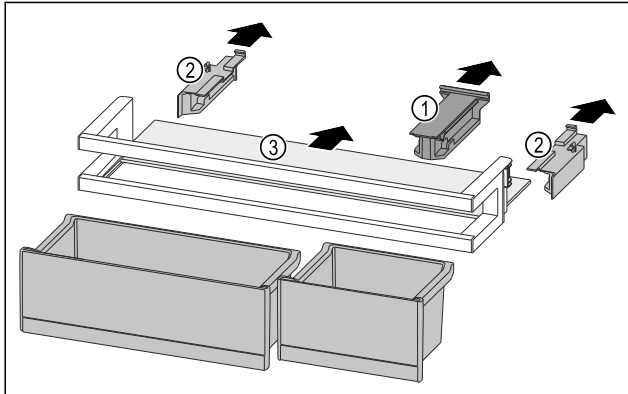

*Fig. 92*

- Remove the VarioBoxes. (see 8.1.1 Removing VarioBoxes)
- Pull off the holding part *Fig. 92 (1)*.
- Pull off the side parts *Fig. 92 (2)*.
- Remove the shelf *Fig. 92 (3)*.

## Dismantling the door rack with bottle holder

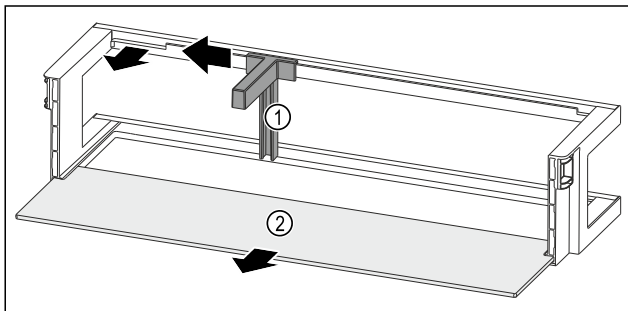


*Fig. 93 Door rack with bottle holder and shelf*

- Slide the bottle holder *Fig. 93 (1)* to the side as far as the recess.
- Remove the bottle holder *Fig. 93 (1)*.
- Remove the shelf *Fig. 93 (2)*.

## 8.1.7 Assembling the door rack


### Assembling the door rack

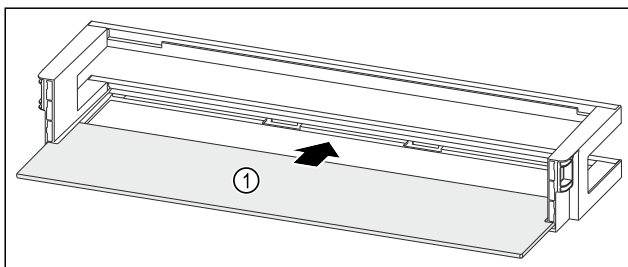

*Fig. 94 Door rack with shelf*

- Push the shelf *Fig. 94 (1)* into the side recesses.


### Assembling the door rack with VarioBoxes

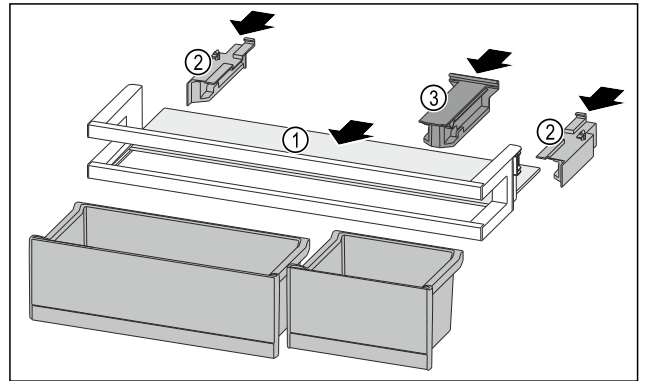

*Fig. 95*

- Push the shelf *Fig. 95 (1)* into the side recesses.
- Insert the side parts *Fig. 95 (2)*.
- Insert the holding part *Fig. 95 (3)*.
- Insert the VarioBoxes. (see 8.1.4 Inserting VarioBoxes)

### Assembling the door rack with bottle holder

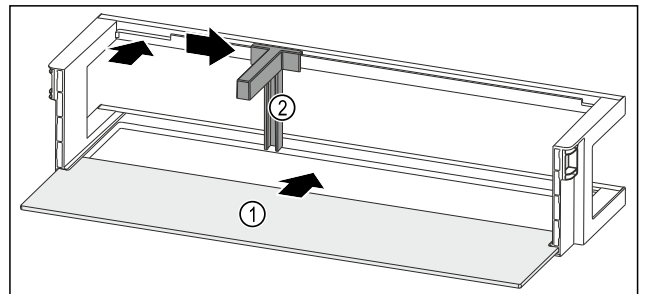


*Fig. 96 Door rack with shelf*

- Push the shelf *Fig. 96 (1)* into the side recesses.
- Insert the bottle holder *Fig. 96 (2)* in the recess.
- Push the bottle holder *Fig. 96 (2)* to the desired position to the side.

## 8.2 Shelves

### 8.2.1 Adjusting/removing the shelves

The shelves are prevented from being pulled out accidentally by pull out stops.

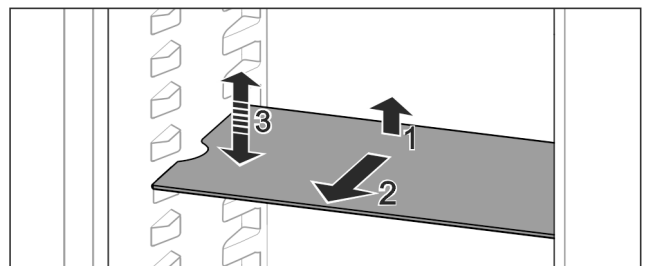

*Fig. 97*

- Lift the shelf and pull forward.
- Line up the side runner.
- Adjust the height of the shelf: Lift or lower it to the desired height and slide it in.

-or-

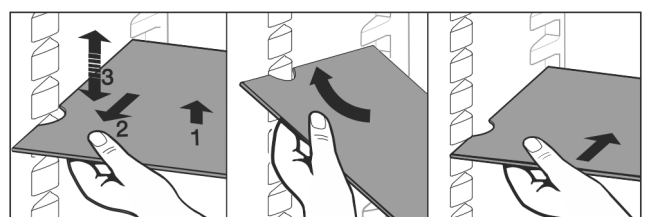


Fig. 98

- Remove the shelf completely: Pull it out to the front.
- Easier removal: Set the shelf at an angle.
- Insert the shelf again: Slide it in all the way.
- The pull-out stoppers point downwards.
- The pull-out stoppers are behind the front support.

## 8.3 Dividing shelf

### 8.3.1 Using the dividing shelf

The shelves are prevented from being pulled out accidentally by pull out stops.

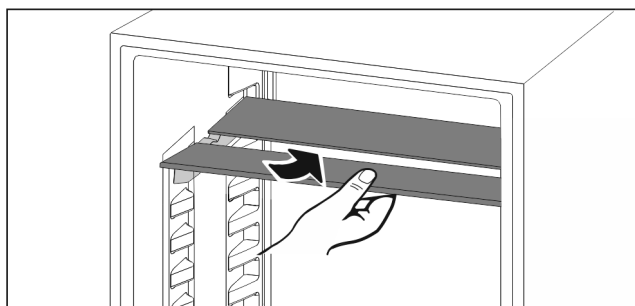


Fig. 99

- Push the dividing shelf underneath as shown.

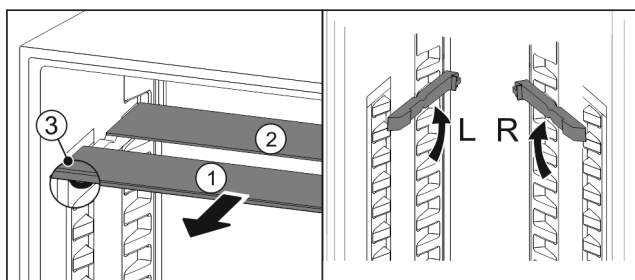


Fig. 100

#### Adjusting the height:

- Pull the glass panels out Fig. 100 (1) from the front, one at a time.
- Release the support rails and click in at the height you want.
- Slide in the glass panels one at a time.
- Flat pull-out stoppers at the front, right behind the support rails.
- High pull-out stoppers at the back.

#### Using both shelves:

- Hold the glass panel with one hand and pull it to the front.
- The glass panel Fig. 100 (1) and trim strip are at the front.
- The stops Fig. 100 (3) point down.

## 8.4 VarioSafe

The VarioSafe offers space in the refrigerator compartment for small groceries, packages, tubes and jars, for example.

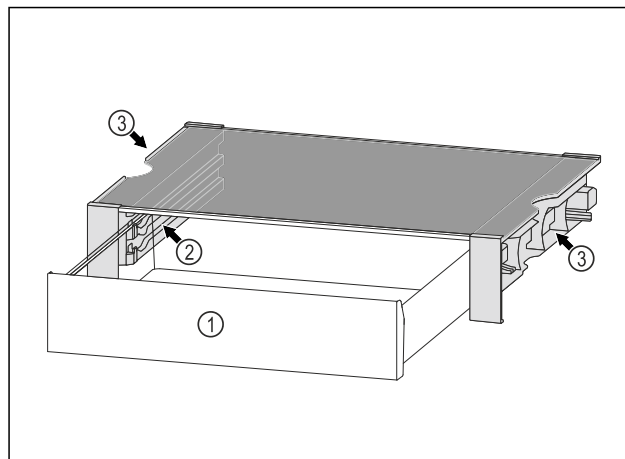


Fig. 101

- (1) VarioSafe drawer
- (2) Side panels with ribs for VarioSafe drawer
- (3) Recesses on the left and right side panel

### 8.4.1 Inserting the VarioSafe

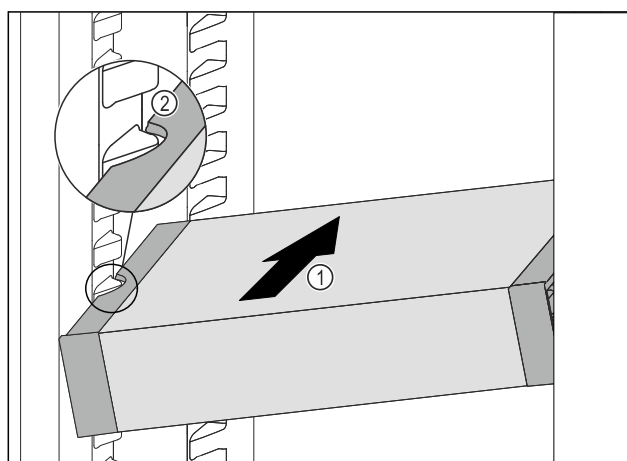


Fig. 102

- Insert the VarioSafe into the fridge section at an angle Fig. 102 (1) until the recesses in the side Fig. 102 (2) of the VarioSafe are at the level of the support rib in the fridge section.

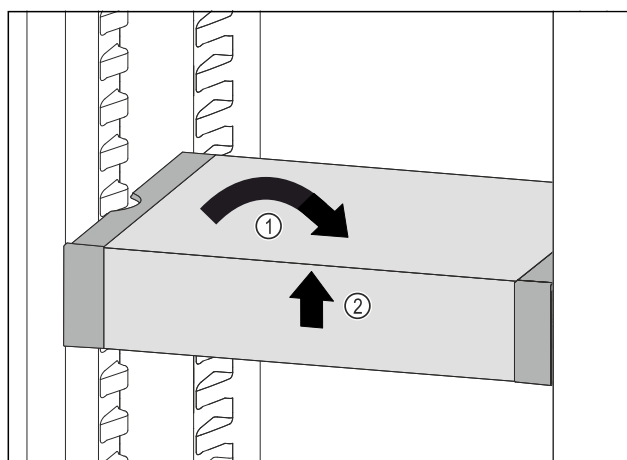


Fig. 103

- Set VarioSafe straight. Fig. 103 (1)
- Lift VarioSafe at the front. Fig. 103 (2)

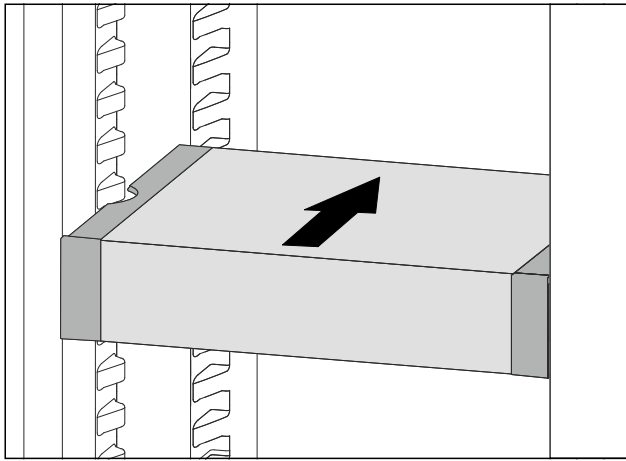


Fig. 104

- Lift VarioSafe up toward the front.
- Push VarioSafe in to the rear.
- Lower VarioSafe.
- VarioSafe audibly engages.
- VarioSafe is inserted.

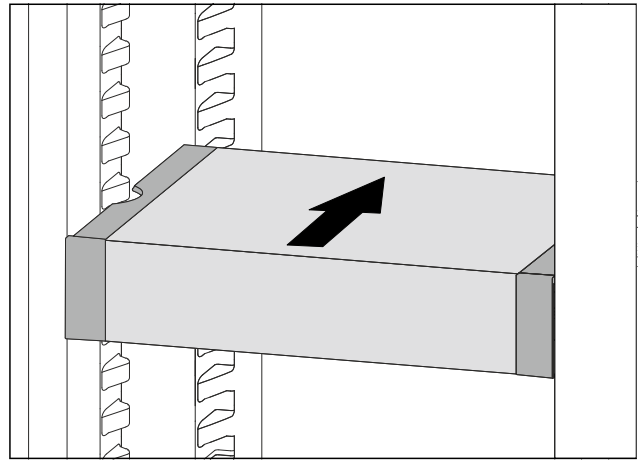


Fig. 107

- Lift VarioSafe at the front.
- Push VarioSafe in to the rear.
- VarioSafe audibly engages.
- VarioSafe is offset in height.

## 8.4.2 Repositioning the VarioSafe

You can move the VarioSafe as a whole in the refrigerator compartment.

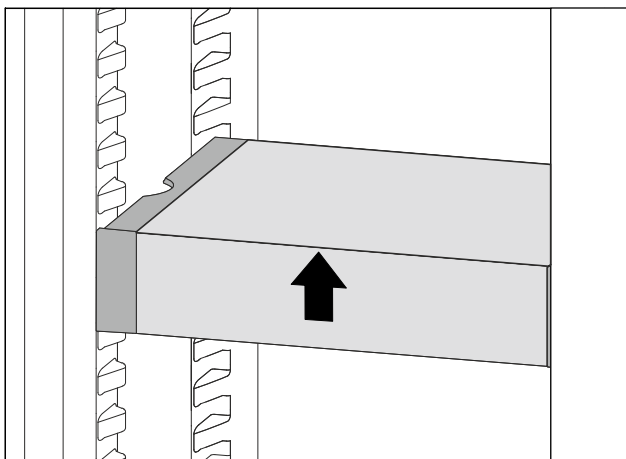


Fig. 105

- Lift VarioSafe at the front.

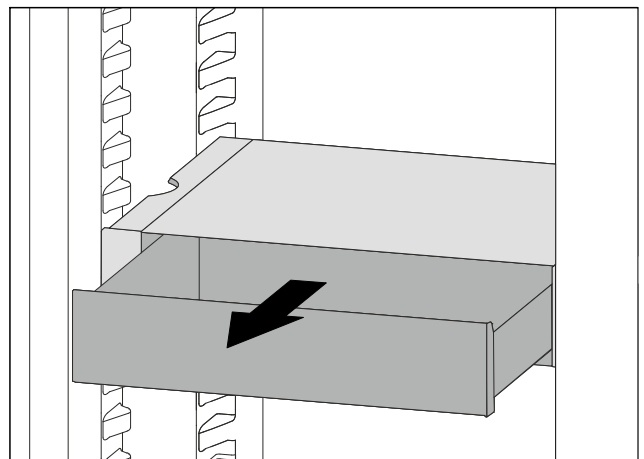


Fig. 108

- Pull out the VarioSafe drawer as far as it will go.
- Lift the VarioSafe drawer up at the front.
- Remove the VarioSafe drawer to the front.

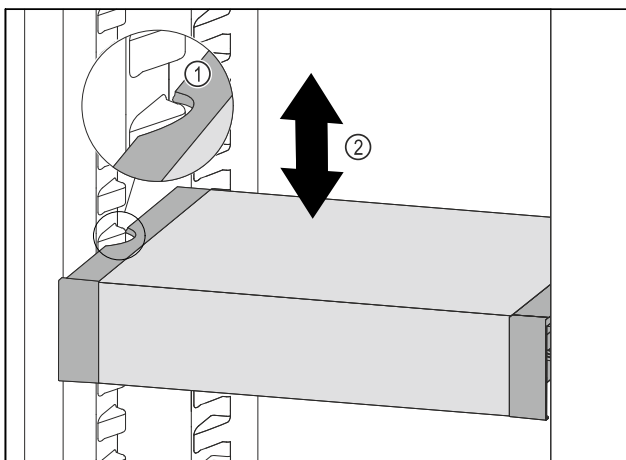


Fig. 106

- Pull VarioSafe forwards until the recesses in the side of the VarioSafe are at the level of the support rib in the refrigerator compartment. Fig. 106 (1)
- Move VarioSafe up or down in the refrigerator compartment until the desired height is reached. Fig. 106 (2)

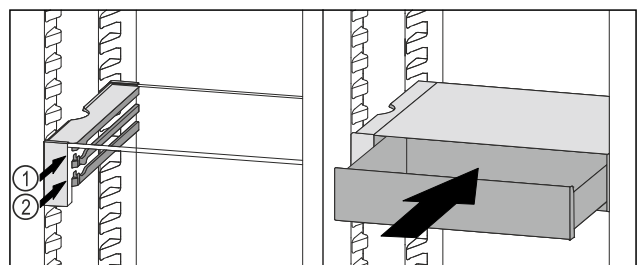


Fig. 109

- Lift the VarioSafe drawer up at the front.
- Place the VarioSafe drawer behind the stoppers on desired rib Fig. 109 (1) or Fig. 109 (2).
- VarioSafe drawer is offset in height.

## 8.4.4 Removing the VarioSafe

You can remove the VarioSafe as a whole.

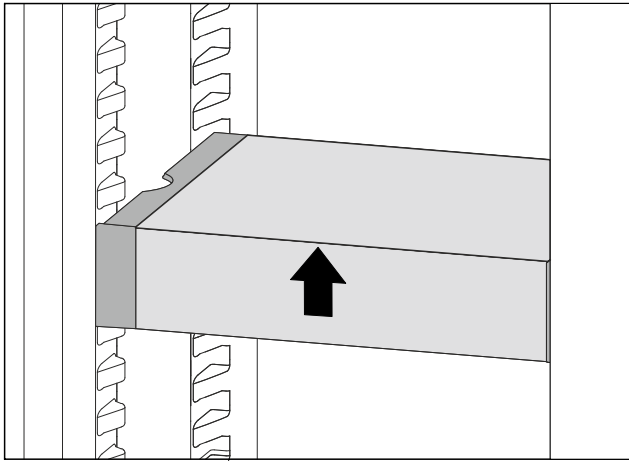


Fig. 110

- Lift VarioSafe at the front.

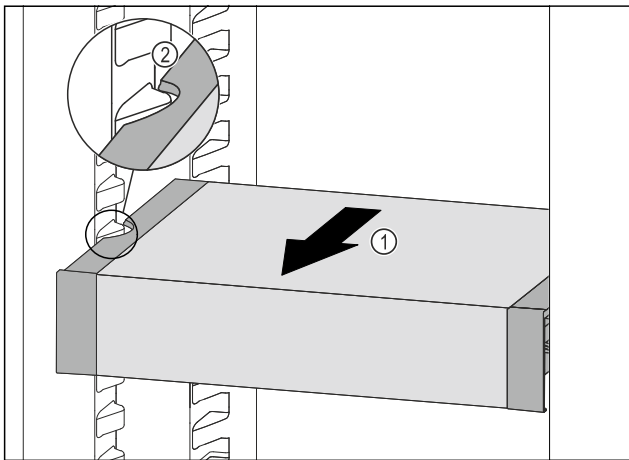


Fig. 111

- Pull VarioSafe forwards Fig. 111 (1) until the recesses in the side of the VarioSafe are at the level of the support rib in the fridge section. Fig. 111 (2)

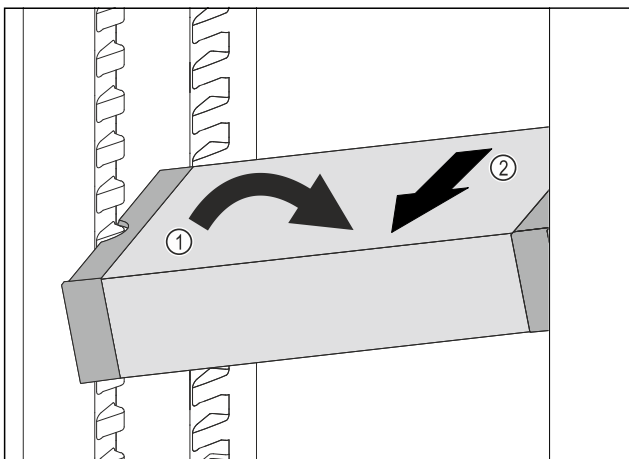


Fig. 112

- Set VarioSafe in refrigerator compartment at an angle. Fig. 112 (1)
- Take VarioSafe out to the front. Fig. 112 (2)
- VarioSafe is removed.

## 8.4.5 Disassembling the VarioSafe

You can disassemble the VarioSafe into its individual parts if you want to clean the VarioSafe or if you need to install or remove parts.

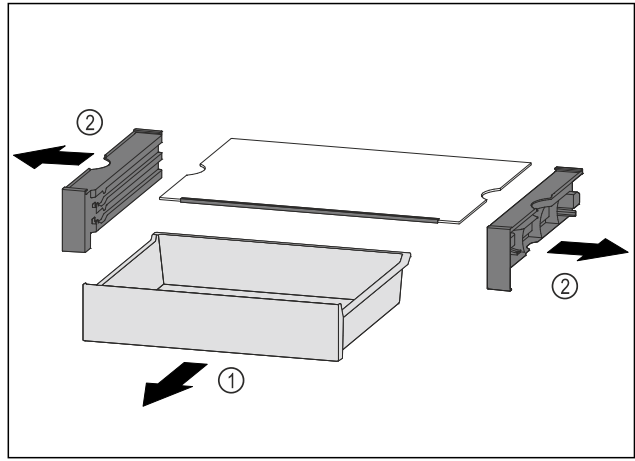


Fig. 113

- Remove VarioSafe as a whole. (see 8.4.4 Removing the VarioSafe )
- Disassemble VarioSafe according to the illustration.

## 8.5 InfinitySpring\*

The built-in water dispenser is great for drinking water. The water temperature depends on the temperature in the fridge.

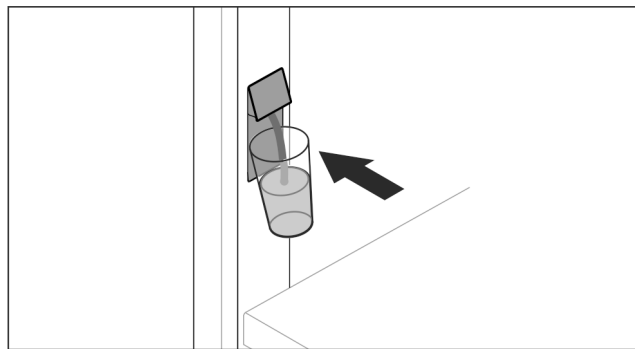


Fig. 114

- Push the glass against the bottom pushbutton of the dispenser.
- Pouring unit moves out: Water flows into the glass.
- Avoid spillages: Remove your cup slowly.
- For more water:
- If the water flow stops, remove the water tank and push your container against the bottom pushbutton of the dispenser again.

## 8.6 Adjustable bottle shelf

Either the glass shelf or the variable bottle rack can be used in the bottom section of the refrigerator. The glass shelf is inserted at delivery.

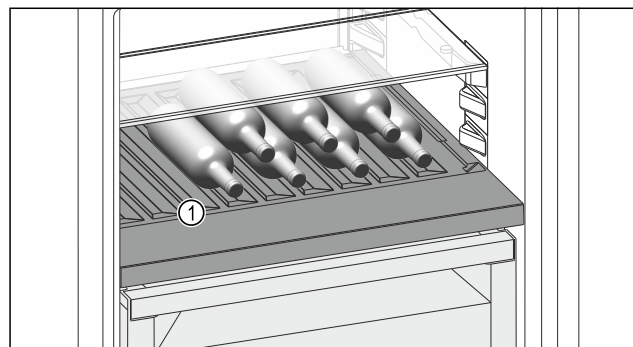


Fig. 115 Example illustration

- (1) Variable bottle rack

## Features

### 8.6.1 Using the variable bottle rack

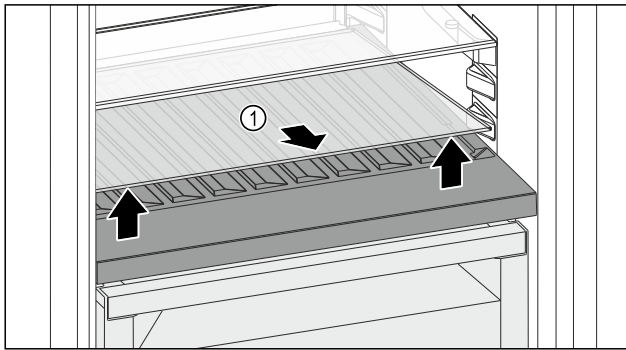


Fig. 116

- Lift the glass shelf Fig. 116 (1) at the front and remove.
- Store the glass shelf Fig. 116 (1) in a safe place outside the appliance.

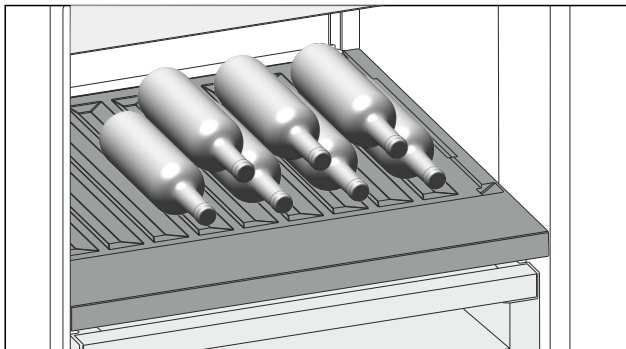


Fig. 117

- Place bottles in the back row with their bases against the back wall. (see Fig. 117)

#### Note

When the bottles protrude over the variable bottle rack at the front:

- Set the lower door rack one position higher.

### 8.6.2 Using the glass shelf

Ensure that the following requirements are met:

- ☐ Bottles have been removed.
- ☐ Variable bottle rack has been cleaned.  
(see 9.5 Removing / inserting the variable bottle rack)  
(see 9.8.4 Clean the components)

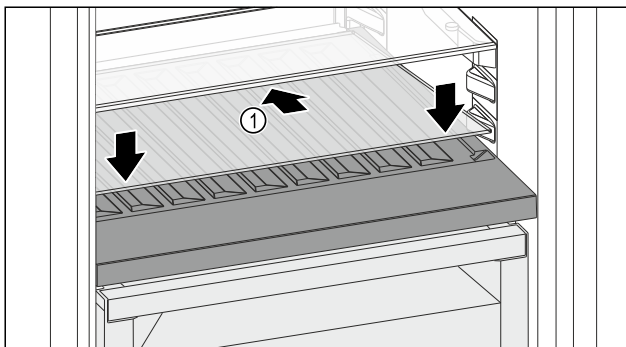


Fig. 118

- Place the glass shelf Fig. 118 (1) at an angle, sloping it downwards and backwards.
- Lower the glass shelf Fig. 118 (1) at the front.

## 8.7 Drawers

You can remove the drawers for cleaning.

The way to remove/insert the drawers varies depending on the pull-out system. Your appliance can contain various pull-out systems.

#### Note

The energy consumption increases and the cooling power goes down if ventilation is not sufficient.

- Always leave the fan air vents clear on the back wall!

### 8.7.1 Drawer on telescopic rails

The drawer runs on extendible rails (telescopic rails). There are fully extendible telescopic rails and telescopic rails with partial pull-out. Drawers which are fully extendible can be pulled out fully from the appliance. Drawers with partial pull-out cannot be removed fully from the appliance. The system in your appliance depends on the type of appliance.

#### Fully extendible

If you have fully extendible rails, there is a clamp located at the back on the left and right of the rail.

#### Removing drawer

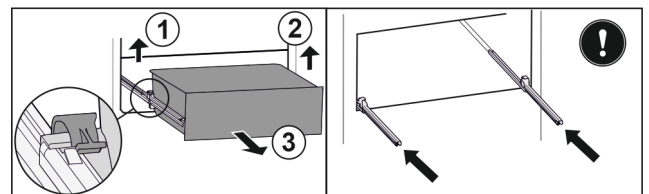


Fig. 119

- Pull out drawer as far as it will go.
- Lift left clamp and simultaneously pull drawer forwards on the left. Fig. 119 (1)
- Lift right clamp and simultaneously pull drawer forwards on the right. Fig. 119 (2)
- Remove drawer to the front. Fig. 119 (3)
- Slide rails in.

#### Inserting drawer

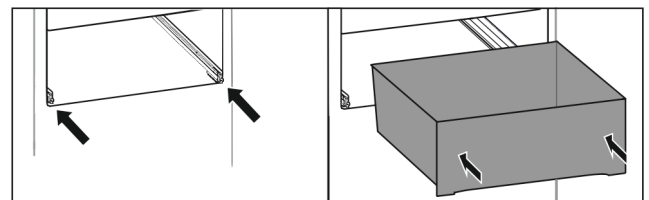


Fig. 120

- Slide rails in.
- Place drawer on rails.
- Slide in drawer to the back.
- Drawer latches in audibly at the back.

## 8.8 Compartment lid for Fruit & Vegetable Safe

The compartment lid ensures constant levels of humidity.

The compartment lid is directly on the drawer and can be covered by shelves or additional drawers.

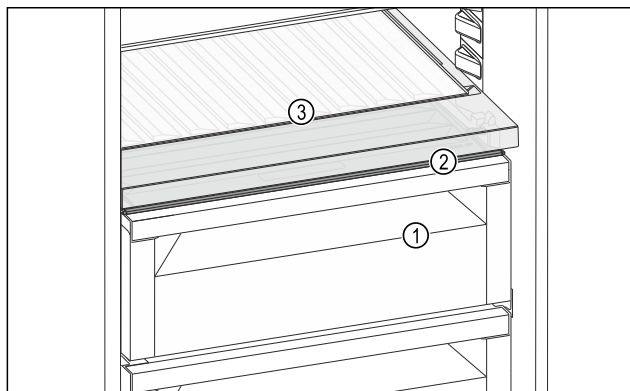


Fig. 121 Example illustration, compartment lid for Fruit & Vegetable Safe

- (1) Fruit & Vegetable Safe
- (2) Compartment lid for Fruit & Vegetable Safe
- (3) Variable bottle rack

## 8.8.1 Reducing the air humidity in the drawer

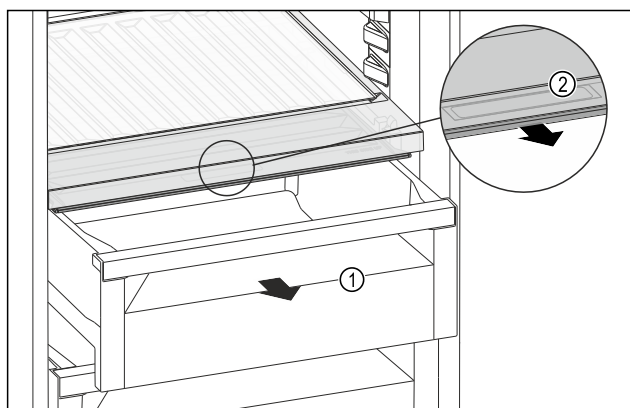


Fig. 122

- Pull out the drawer Fig. 122 (1).
- Grasp the recessed grip Fig. 122 (2) on the compartment lid and pull the compartment lid forwards at the same time.
- When the drawer is closed, there is a small gap between the compartment lid and the drawer.
- Using HydroBreeze is not possible. (see 8.9 HydroBreeze\*) \*

## 8.8.2 Increasing the air humidity in the drawer

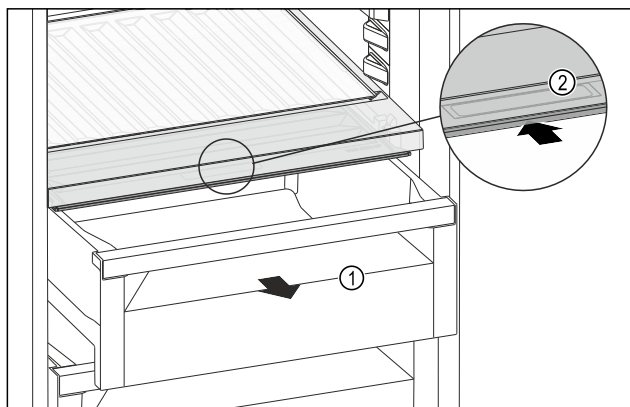


Fig. 123

- Pull out the drawer Fig. 123 (1).
- Grasp the recessed grip Fig. 123 (2) on the compartment lid and push the compartment lid backwards at the same time.

- When the drawer is closed, the compartment lid seals with the drawer.
- Using HydroBreeze is possible. (see 8.9 HydroBreeze\*) \*

## 8.8.3 Using Fruit & Vegetable Safe as Meat & Dairy Safe

You can use the Fruit & Vegetable Safe as Meat & Dairy Safe. To do this, you must reduce the humidity in the drawer. (see 8.8.1 Reducing the air humidity in the drawer)

## 8.8.4 Using Fruit & Vegetable Safe with HydroBreeze\*

You can use the Fruit & Vegetable Safe with HydroBreeze. To do this, you must increase the humidity in the drawer. (see 8.8.2 Increasing the air humidity in the drawer)

## 8.9 HydroBreeze\*

HydroBreeze emits a mist over the refrigerated goods to provide moisture every time the door is opened.

The HydroBreeze and its water tank are located in the adjustable bottle shelf.

Ensure that the following conditions are met:

- The water tank is clean. (see 9.8.4 Clean the components)
- The water tank is properly engaged.
- The humidity in the drawer is set to high air humidity. (see 8.8.2 Increasing the air humidity in the drawer)
- HydroBreeze is activated. (see HydroBreeze\*)

### 8.9.1 Fill the water tank



#### WARNING

Unclean water!  
Contaminants.

- Only fill with drinking water.
- The HydroBreeze is off: empty water tank.
- The HydroBreeze is no longer in use: empty water tank.

#### NOTICE

Sugar-content liquids!  
Damage to HydroBreeze.

- Only fill with drinking water.

#### Note

Only use filtered, decarbonised water for the best quality drinking water and to make the HydroBreeze, work smoothly.

This water quality can be achieved using a table water filter of the kind available in trade retail outlets.

- Only ever fill the water tank with filtered, decarbonised drinking water.

The water tank is built into the adjustable bottle shelf (see 2.2 Overview of the appliance and equipment) .

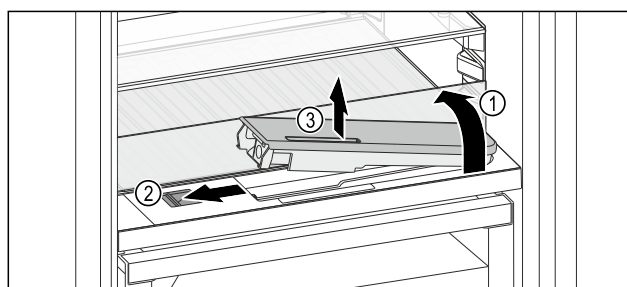


Fig. 124


- Press on the back-left corner of the front glass plate.

## Features

- ▶ The glass panel folds up at the front.
- ▶ Lift the glass panel and fold towards the rear until it clicks into place *Fig. 124 (1)*.
- ▶ Glass panel stands upright.
- ▶ Slide the slider *Fig. 124 (2)* to the left.
- ▶ The water tank jumps out of its recess.
- ▶ Remove the water tank *Fig. 124 (3)*.
- ▶ Cleaning the water tank (see 9.8.4 Clean the components).
- Square opening:
  - ▶ Fill with drinking water up to the marker.
  - ▶ Insert the water tank into the recess, bottom first.
  - ▶ Slowly lower the front part and push the tank in.
- ▶ The water tank is clicked into place.


### 8.9.2 Dismantling the water tank

You can remove the HydroBreeze water tank for cleaning.

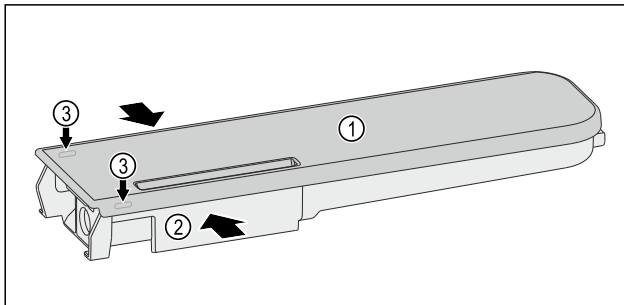

*Fig. 125*

- ▶ Push the water tanks *Fig. 125 (2)* together, leverage the cover *Fig. 125 (1)* carefully over the latching tabs *Fig. 125 (3)* and lift it up.
- ▶ The cover is released.

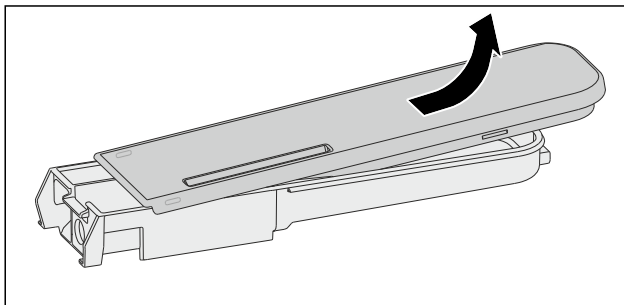


*Fig. 126*

- ▶ Move the cover *Fig. 125 (1)* slightly forwards and back, and remove to the top.
- ▶ The water tank has been dismantled.

## 8.10 Butter dish


### 8.10.1 Opening/closing the butter dish

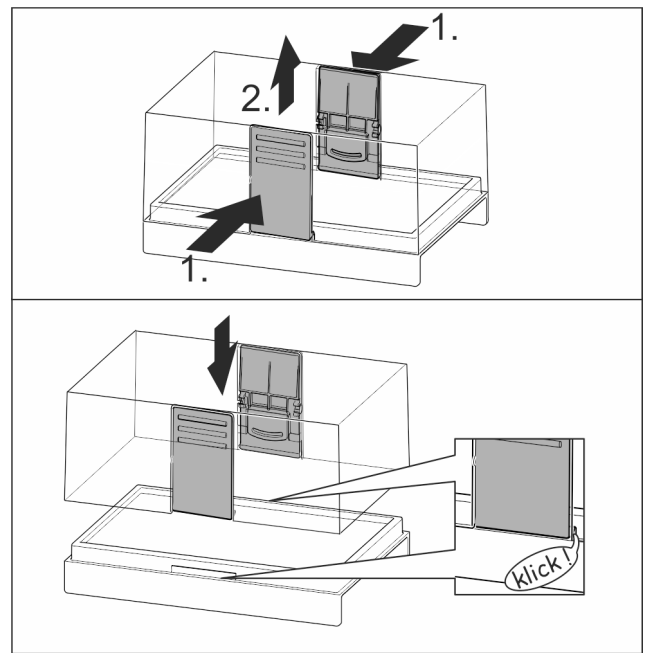

*Fig. 127*

### 8.10.2 Dismantling the butter dish

You can take the butter dish apart for cleaning.

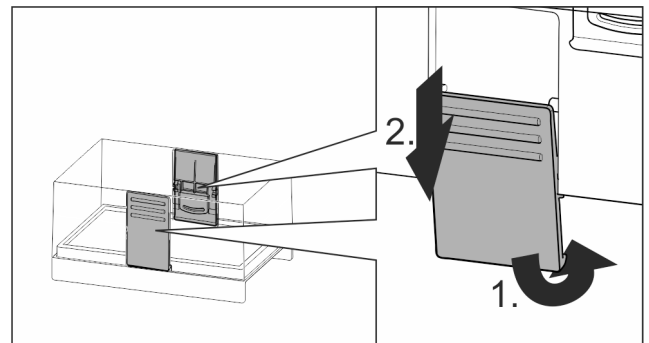

*Fig. 128*

- ▶ Disassembling the butter dish.

## 8.11 Egg rack

You can pull out and turn the egg rack. You can use both sides of the egg rack so you can label specifics like the purchase date.

## 8.11.1 Using the egg rack

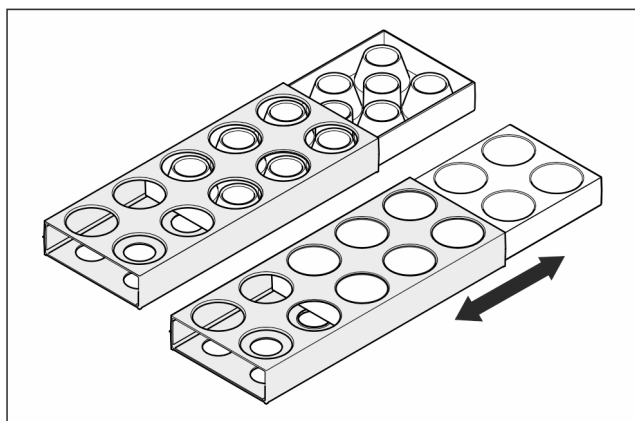


Fig. 129

- Top layer: for storing hen eggs.
- Bottom layer: for storing quail eggs.

## 8.12 Bottle holder

### 8.12.1 Using the bottle holder

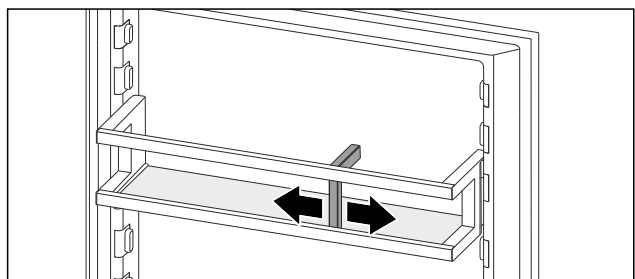


Fig. 130

- Push the bottle holder onto the bottles.
- The bottles are prevented from falling over.

## 8.13 FlexSystem\*

### 8.13.1 Using the FlexSystem

The FlexSystem helps you store and organise your food in a clear and flexible way. It lets you clearly divide your food into fruit, vegetables or by use-by dates, for example.

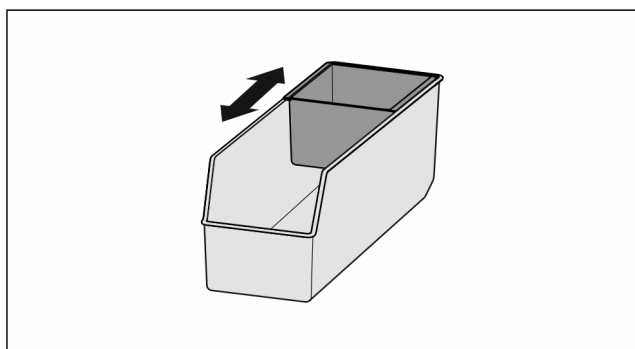


Fig. 131

- Move the inner shell.

### 8.13.2 Removing the FlexSystem

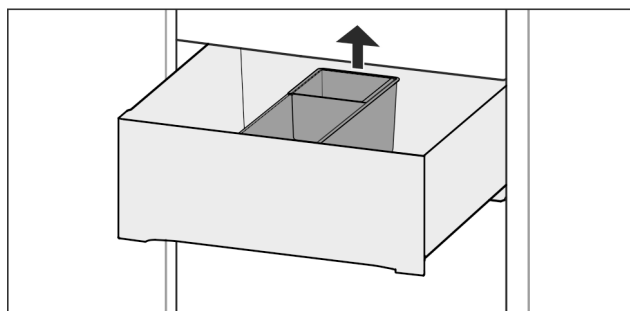


Fig. 132

- Lift the FlexSystem from the back.
- Pull up and out.

### 8.13.3 Inserting the FlexSystem

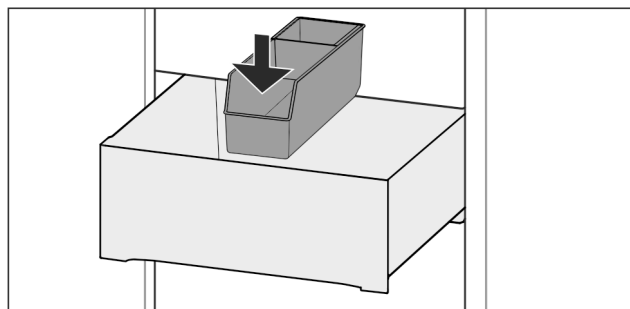


Fig. 133

- Insert the FlexSystem front-first.
- Lower the rear part.

### 8.13.4 Disassembling the FlexSystem

You can take the FlexSystem apart for cleaning.

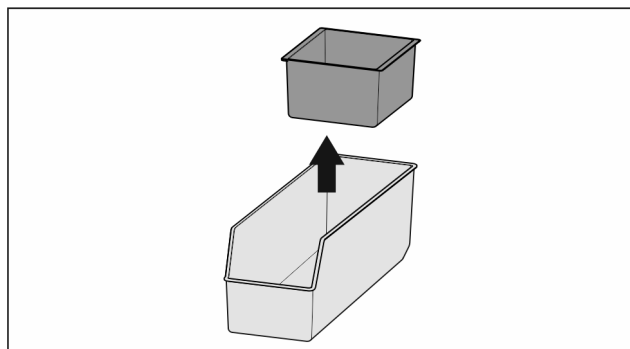


Fig. 134

- Disassembling the FlexSystem

## 8.14 FlexCube\*

The FlexCube has different sized openings, so you can store small items such as tubes, open yoghurt pots or quail eggs in it. The FlexCube fits into all Liebherr door racks, for example. If necessary, you can also set up several FlexCubes next to each other.

# Maintenance

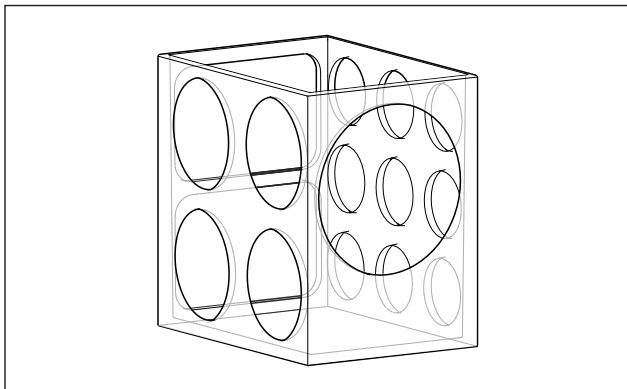


Fig. 135 Example illustration

## Note

These accessories can be purchased from the Liebherr-Hausgeräte shop at [home.liebherr.com/shop/de/deu/zubehor.html](http://home.liebherr.com/shop/de/deu/zubehor.html).

### 8.14.1 Using the FlexCube

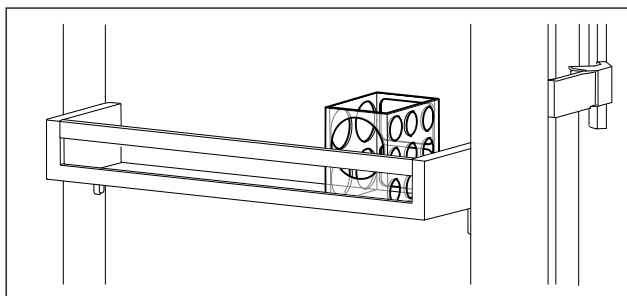


Fig. 136 Example illustration

- Insert the FlexCube in the door rack.

-or-

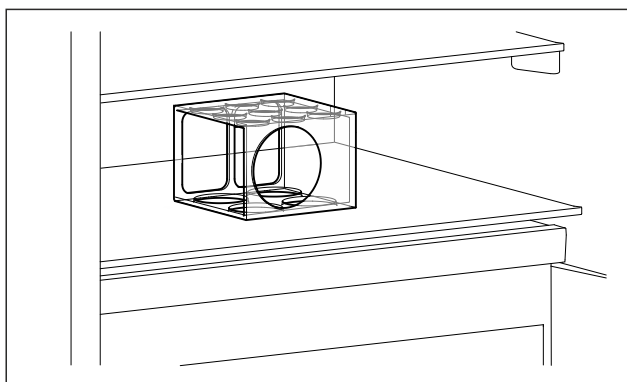


Fig. 137 Example illustration

- Place FlexCube on shelf.
- Sort small parts into the FlexCube for storage.

## 9 Maintenance

### 9.1 FreshAir carbon filter

The FreshAir carbon filter is in the compartment above the fan.

It guarantees the best air quality.

- ❑ Replace the carbon filter every 6 months.  
When the reminder is set, a message on the display prompts you to change it.
- ❑ The carbon filter can be disposed of with the regular household waste.

## Note

FreshAir activated charcoal filters can be purchased from the Liebherr-Hausgeräte store at [home.liebherr.com/shop/de/deu/zubehor.html](http://home.liebherr.com/shop/de/deu/zubehor.html).

#### 9.1.1 Removing the FreshAir carbon filter

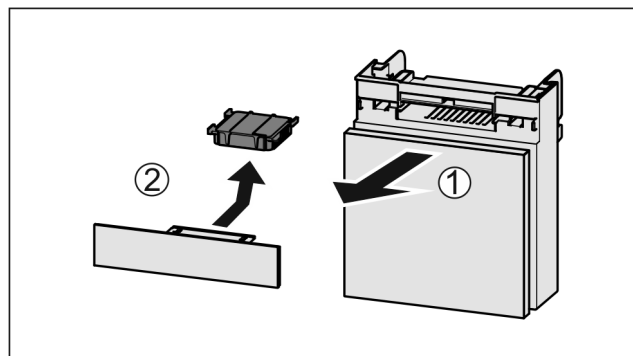


Fig. 138

- Pull out the compartment Fig. 138 (1).
- Remove the carbon filter Fig. 138 (2).

#### 9.1.2 Inserting the FreshAir carbon filter

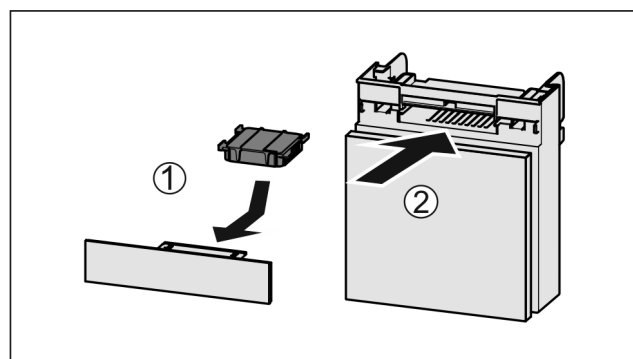


Fig. 139

- Insert the carbon filter as shown in the diagram Fig. 139 (1).
- The carbon filter clicks into place.  
If the carbon filter is pointing downwards:
  - Push the compartment in Fig. 139 (2).
- The carbon filter is now ready for use.

### 9.2 Water tank\*

The InfinitySpring water tank is located behind the lowest drawer.\*

#### 9.2.1 Removing the water tank

- Turn off the tap.
- Drain the InfinitySpring for 30 seconds and collect remaining water using a glass.\*
- Remove the drawer compartment.
- Turn the water tank all the way anti-clockwise and pull it out.
- Water dripping out is collected in the drip tray.
- Empty out the water from the drip tray.\*
- Clean the drip tray with a cloth or in the dishwasher.\*

## 9.2.2 Inserting the water tank

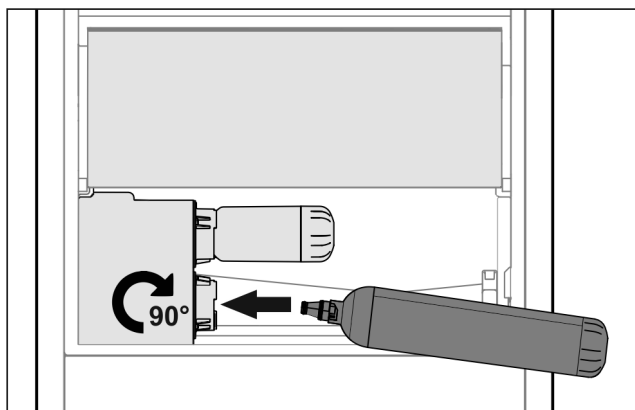


Fig. 140

- Remove the drawer compartment.
- Insert the water tank and rotate approx. 90° clockwise until it clicks in.
- Check that the tank is sealed and no water leaks out.
- Insert the drawer compartment.
- Turn on the tap.
- Bleed the water system. (see 4.2.1 Bleeding the water system) \*

Instead of the water filter you can insert an additional water tank.\*

### Note

You can purchase this water tank as an optional extra.

## 9.2.3 Removing / inserting the drip tray\*

You can remove the drip tray for cleaning.

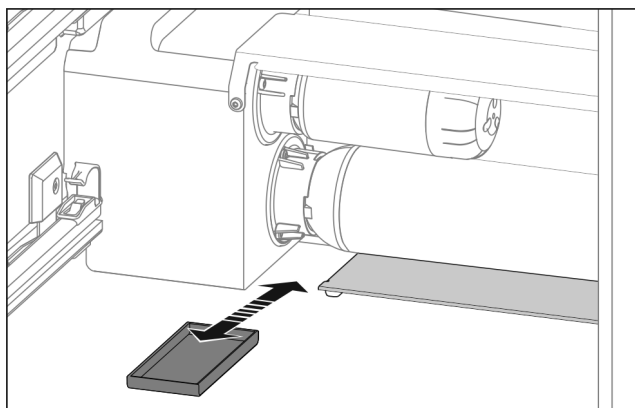


Fig. 141

- Pull out the drip tray to the front.

## 9.3 Water filter\*

The water filter is located behind the lowest drawer. It filters out deposits in the water and reduces the taste of chlorine.

- Replace the water filter at least every 6 months, or if there is a significant reduction in the flow rate.
- The water filter contains carbon and can be disposed of with the regular household waste.

### Note

Water filters are available from the Liebherr-Hausgeräte store at [home.liebherr.com/shop/de/deu/zubehor.html](http://home.liebherr.com/shop/de/deu/zubehor.html).

### 9.3.1 Removing the water filter

- Remove the drawer compartment.

- Turn the water filter all the way anti-clockwise and pull it out.
- Water dripping out is collected in the drip tray.
- Clean the drip tray with a cloth or in the dishwasher.\*

## 9.3.2 Inserting the water filter

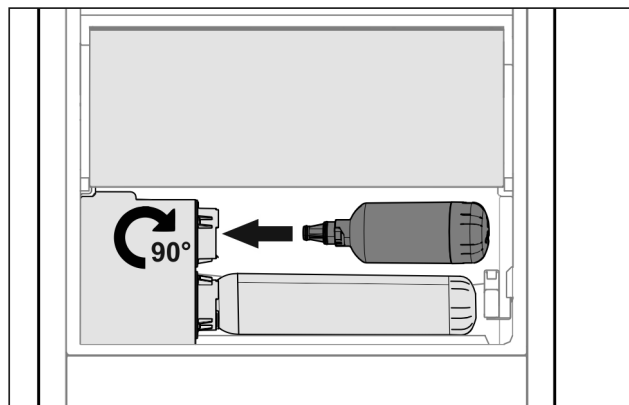


Fig. 142

- Remove the drawer compartment.
- Insert the water filter and rotate approx. 90° clockwise until it clicks in.
- Check that the filter is sealed and no water leaks out.
- Insert the drawer compartment.

### Note

New water filters may contain suspended particles.\*

- After replacing the filter: Draw and dispose of 3 l water at the InfinitySpring.

- The water filter is now ready for use.

## 9.4 Disassembling / assembling pull-out systems

### 9.4.1 Notes on disassembly

You can disassemble some of the pull-out systems for cleaning. Your appliance can contain a variety of pull-out systems.

The following pull-out systems can be disassembled or cannot be disassembled:

| Pull-out system  | can be disassembled / cannot be disassembled |
|------------------|----------------------------------------------|
| Fully extendible | cannot be disassembled                       |

## 9.5 Removing / inserting the variable bottle rack

The variable bottle rack can be removed for cleaning.

### 9.5.1 Removing the variable bottle rack

Ensure that the following requirements are met:

- Bottles have been removed.
- Glass shelf has been removed. (see 8.6.1 Using the variable bottle rack)

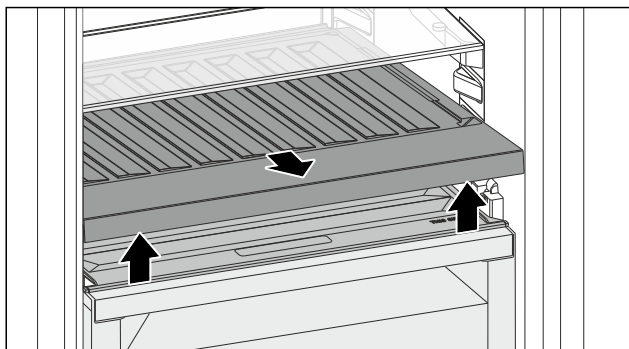


Fig. 143

- Lift the variable bottle rack at the front and pull it out.
- The compartment lid is visible.

## Note

Liebherr recommends:

Do not place any items on the compartment lid below.

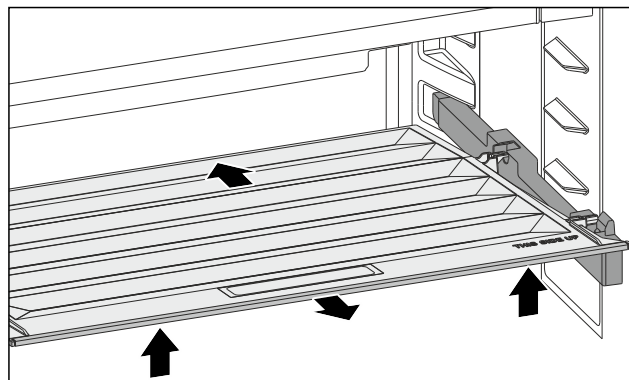


Fig. 145

- Push the compartment lid backwards.
- Lift the compartment lid forwards.
- Remove the compartment lid forwards and upwards at an angle.

## 9.5.2 Inserting the variable bottle rack

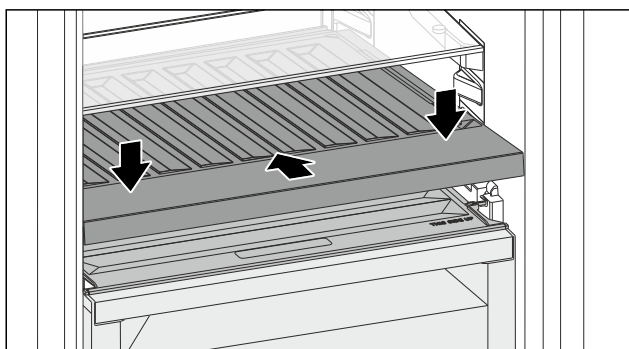


Fig. 144

- Push the variable bottle rack in to the end stop and press it down.
- The connectors at the back of the variable bottle rack are connected via automated processes.
- LED lights up.
- Insert the glass shelf. (see 8.6.2 Using the glass shelf)
- or-
- Use the variable bottle rack for bottles.

## 9.6 Compartment lid for Fruit & Vegetable Safe

You can remove the compartment lid for cleaning.

### 9.6.1 Removing the compartment lid

Ensure that the following requirements are met:

- ☐ The glass shelf directly above the variable bottle rack has been removed.
- ☐ The variable bottle rack has been removed.
- ☐ The drawer directly below the compartment lid has been removed. (see 8.7 Drawers)

### 9.6.2 Inserting the compartment lid

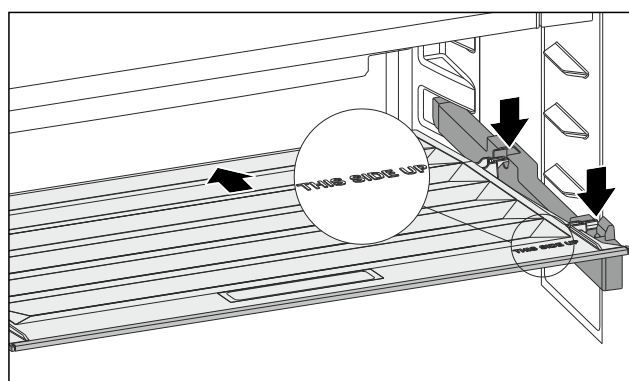


Fig. 146

- If the THIS SIDE UP lettering is at the top:
- Insert the rear retaining parts into the relevant rear openings.
- Push the compartment lid backwards.
- Lower the compartment lid forwards and engage the front retaining parts into the openings.
- Move the compartment lid into the required position.

## 9.7 Defrosting the appliance



### WARNING

Improper defrosting of the appliance!  
Injuries and damage.

- Do not use mechanical equipment or other methods to speed up the defrosting process other than those recommended by the manufacturer.
- Do not use electrical heating or steam-cleaning appliances, naked flames or defroster sprays to defrost.
- Do not use sharp objects to remove ice.

Defrosting is performed automatically. The water from the thawing process drains through the outlet and evaporates.

- Clean the drain opening at regular intervals. (see 9.8 Cleaning the appliance)

## 9.8 Cleaning the appliance

### 9.8.1 Ready



#### WARNING

Danger of electric shock!

- Remove the refrigerator connector or interrupt the power supply.



#### WARNING

Risk of fire

- Do not damage the refrigeration circuit.

- Empty the appliance.
- Remove mains connector.

-or-

- Activate CleaningMode. (see CleaningMode)

### 9.8.2 Clean the housing

#### NOTICE

Improper cleaning!

Damage to the appliance.

- Only use soft cleaning cloths and ph-neutral all-purpose cleaners.
- Do not use abrasive sponges or steel wool which may cause scratches.
- Do not use any sharp or abrasive cleaning agents, nor any that contain sand, chloride or acid.



#### WARNING

Risk of injury and damage as a result of hot steam!

Hot steam can lead to burns and can damage the surfaces.

- Do not use any steam cleaners!

- Wipe the housing down with soft, clean cloth. If very dirty, use lukewarm water with a neutral cleaner. Glass surfaces can also be cleaned with glass cleaner.

### 9.8.3 Cleaning the interior

#### NOTICE

Improper cleaning!

Damage to the appliance.

- Only use soft cleaning cloths and ph-neutral all-purpose cleaners.
- Do not use abrasive sponges or steel wool which may cause scratches.
- Do not use any sharp or abrasive cleaning agents, nor any that contain sand, chloride or acid.

- Plastic surfaces: clean by hand with a soft clean cloth, lukewarm water and a little detergent.
- Metal surfaces: clean by hand with a soft clean cloth, lukewarm water and a little detergent.
- Drain hole: remove deposits using a thin item (for example a cotton bud).

### 9.8.4 Clean the components

#### NOTICE

Improper cleaning!

Damage to the appliance.

- Only use soft cleaning cloths and ph-neutral all-purpose cleaners.
- Do not use abrasive sponges or steel wool which may cause scratches.
- Do not use any sharp or abrasive cleaning agents, nor any that contain sand, chloride or acid.

#### Clean with a soft, clean cloth, lukewarm water and some detergent:

- Shelf
- Dividing shelf
- VarioSafe
- Compartment lid for Fruit & Vegetable Safe
- Drawer
- Adjustable bottle shelf
- FlexSystem\*

#### Clean with a damp cloth:

- Retractable rails
- Please note: The grease in the tracks is used for lubrication and must not be removed!

#### Wash in the dishwasher up to 60 °C:

- Door rack
- VarioBox
- Bottle rack
- Holder of the dividing shelf
- HydroBreeze water tank and water tank lid\*
- Drip tray\*
- Egg rack
- Butter dish
- FlexCube\*

- To disassemble components: see the relevant section.
- Clean the components.

### 9.8.5 Cleaning the InfinitySpring \*

You can clean the InfinitySpring outlet and around it without disconnecting the appliance from the mains.

Cleaning is required in the following cases:

- ☐ Initial operation
- ☐ If out of use for more than 5 days.
- Press the bottom pushbutton of the dispenser.
- The outlet unit moves out.
- Clean the water outlet and around it with a soft, clean cloth, lukewarm water and some detergent.
- Release the bottom pushbutton.
- Draw and dispose of 2 l water at the InfinitySpring.

### 9.8.6 Cleaning the HydroBreeze\*

Cleaning is required in the following cases:

- ☐ Initial operation
- ☐ HydroBreeze is off for more than 48 hours.
- ☐ Refill the water tank.

Ensure that the following conditions are met:

- ☐ HydroBreeze is off (see HydroBreeze\*) .
- ☐ Water tank has been removed and cleaned in the dishwasher.
- Wipe out the recess with a damp cloth.
- Insert the water tank.
- Activate the HydroBreeze.

# Customer help

## 9.8.7 After cleaning

- ▶ Wipe the appliance and the components dry.
- ▶ Connect and switch on the appliance.  
The temperature is cold enough:
- ▶ Place the food inside.
- ▶ Repeat cleaning regularly.

## 10 Customer help

### 10.1 Technical specifications

| Temperature range |                                                                                           |
|-------------------|-------------------------------------------------------------------------------------------|
| Cooling           | 3 °C to 9 °C                                                                              |
| BioFresh          | 0 °C to 3 °C                                                                              |
| Fish & SeaFood*   | -2 °C to 0 °C*<br>Possible settings :*<br>0 °C   0 °C*<br>-2 °C   0 °C*<br>-2 °C   -2 °C* |

| Lighting                                                                   |              |
|----------------------------------------------------------------------------|--------------|
| Class <sup>1</sup>                                                         | Light source |
| This product contains one or more energy efficiency class G light sources. | LED          |

<sup>1</sup> The appliance may contain light sources with different energy efficiency classes. The lowest energy efficiency class is indicated.

For appliances with a WiFi connection:

| Frequency specification           |                                                              |
|-----------------------------------|--------------------------------------------------------------|
| Frequency band                    | 2.4 GHz                                                      |
| Maximum radiated power            | < 100 mW                                                     |
| Purpose of the wireless equipment | Integration in the local WiFi network for data communication |

### 10.2 Operating noises

The appliance makes different noises when it is on.

- At **higher temperatures** the appliance uses less energy but works for longer. It is **quieter**.
- At **lower temperatures** the food is cooled faster. It is **louder**.

Examples:

- Functions on (see 7.2 Appliance functions)
- Fan running
- Food recently added

- High ambient temperature
- Door open for a while

| Noise                  | Possible cause                                                      | Type of noise          |
|------------------------|---------------------------------------------------------------------|------------------------|
| Bubbling and splashing | Coolant flowing into the cooling circuit.                           | Normal operating noise |
| Hissing                | Coolant sprays into the cooling circuit.                            | Normal operating noise |
| Humming                | The appliance is cooling. The volume depends on the cooling output. | Normal operating noise |
| Suction noises         | Soft-closing door is being opened and closed.                       | Normal operating noise |
| Humming and rustling   | The fan is running.                                                 | Normal operating noise |
| Clicking               | Components are switched on and off.                                 | Normal switching noise |
| Rattling or humming    | Valves or flaps are working.                                        | Normal switching noise |

| Noise     | Possible cause                         | Type of noise   | Lifting                                                  |
|-----------|----------------------------------------|-----------------|----------------------------------------------------------|
| Vibration | Improper setup                         | Defective noise | Level the appliance using the adjustable feet.           |
| Rattling  | Components, items inside the appliance | Defective noise | Secure components. Leave enough space between the items. |

### 10.3 Technical fault

Your appliance is designed and built to ensure it works reliably and has a long service life. In the unlikely event that a fault occurs during operation, please check whether it is due to an operating error. If so, you will be charged for the callout and repair costs even if it falls within the warranty period.

You can fix the following faults yourself.

#### 10.3.1 Appliance function

| Defect                               | Cause                                                     | Remedy                       |
|--------------------------------------|-----------------------------------------------------------|------------------------------|
| <b>The appliance is not working.</b> | → The appliance is not switched on.                       | ▶ Switch the appliance on.   |
|                                      | → The power plug is not properly plugged into the socket. | ▶ Check the power plug.      |
|                                      | → There is something wrong with the power outlet fuse.    | ▶ Check the fuse.            |
|                                      | → Power cut                                               | ▶ Keep the appliance closed. |

| Defect                                                                        | Cause                                                                                   | Remedy                                                                                                                   |
|-------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------|
|                                                                               | → The IEC socket is not plugged into the appliance correctly.                           | ► Check the IEC socket.                                                                                                  |
| <b>Temperature is not cold enough.</b>                                        | → The appliance door is not closed properly.                                            | ► Close the appliance door.                                                                                              |
|                                                                               | → The ambient temperature is too high.                                                  | ► Problem solution: (see 2.4 Appliance range of use)                                                                     |
|                                                                               | → The appliance was opened too many times or for too long.                              | ► Wait to see if the required temperature corrects itself. If not, contact Customer Service. (see 10.4 Customer Service) |
|                                                                               | → The temperature is set incorrectly.                                                   | ► Turn down the temperature and check after 24 hours.                                                                    |
|                                                                               | → The appliance is too close to a heat source (oven, radiator, etc).                    | ► Move the appliance or the heat source.                                                                                 |
| <b>The door seal is defective or needs to be replaced for another reason.</b> | → The door seal can be replaced. It can be replaced without the need for special tools. | ► Contact Customer Service. (see 10.4 Customer Service)                                                                  |
| <b>The appliance builds up too much ice or condensation.</b>                  | → The door seal may have slipped out of its groove.                                     | ► Check that the door seal is well fitted in the groove.                                                                 |
| <b>The exterior surfaces of the appliance are warm.*</b>                      | → The heat of the refrigeration circuit is used to avoid condensation.                  | ► This is normal.                                                                                                        |

### 10.3.2 Features

| Defect                                                          | Cause                                                                           | Remedy                                                                                       |
|-----------------------------------------------------------------|---------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|
| <b>The InfinitySpring is not working.*</b>                      | → There is air in the water system.                                             | ► Bleed the water system. (see 4.2 Putting InfinitySpring into operation*)                   |
|                                                                 | → The water connection is not open.                                             | ► Open the water connection.                                                                 |
| <b>The water flow through the InfinitySpring is irregular.*</b> | → The aerator is dirty.                                                         | ► Replace aerator. Contact Customer Service. (see 10.4 Customer Service)                     |
| <b>HydroBreeze is not keeping refrigerated goods moist.*</b>    | → The HydroBreeze is not on.                                                    | ► Activate the HydroBreeze.                                                                  |
|                                                                 | → There is not enough water in the water tank.                                  | ► Fill the water tank.                                                                       |
|                                                                 | → There is dirt in front of the concentrator.                                   | ► Clean the HydroBreeze.                                                                     |
|                                                                 | → The water tank is not clicked into place properly.                            | ► Click the water tank into place.                                                           |
|                                                                 | → The compartment cover of the Fruit & Vegetable Safe is set to "low humidity". | ► The compartment cover of the Fruit & Vegetable Safe is set to "high humidity".             |
| <b>The internal light does not come on.</b>                     | → The appliance is not switched on.                                             | ► Switch the appliance on.                                                                   |
|                                                                 | → The door was open for longer than 15 minutes.                                 | ► Interior lighting switches off automatically after about 15 minutes when the door is open. |
|                                                                 | → The LED interior light is faulty or the lid is damaged.                       | ► Contact Customer Service. (see 10.4 Customer Service)                                      |

# Shutting down

## 10.4 Customer Service

First check whether you can rectify the fault yourself (see 10 Customer help) . If you cannot rectify the problem, contact Customer Service.

You can find the address in the enclosed brochure "Liebherr-Service" or at [home.liebherr.com/service](http://home.liebherr.com/service).



### WARNING

Unprofessional repair!  
Injuries.

- ▶ Have any repairs and action - not expressly specified - on the appliance and mains cable carried out by service personnel only. (see 9 Maintenance)
- ▶ A damaged mains cable may only be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person.
- ▶ In the case of appliances with an IEC connector, the change may be made by the customer.

### 10.4.1 Contacting Customer Service

Make sure that the following appliance information is available:

- ☐ Appliance name (model and index)
- ☐ Service no. (Service)
- ☐ Serial no. (S no.)

- ▶ Call up the appliance information via the display. (see Device information)

-or-

- ▶ Refer to the type plate for appliance information. (see 10.5 Model plate)
- ▶ Note down the appliance information.
- ▶ Notify customer service: Report errors and the appliance information.
- ▶ This will help us to provide you with a faster, more accurate service.
- ▶ Follow further instructions from Customer Service.

## 10.5 Model plate

The model plate is behind the drawers on the inside of the appliance.

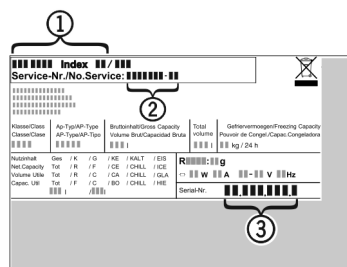


Fig. 147

- (1) Appliance description
- (2) Service no.
- (3) Serial no.

- ▶ Note the data on the model plate.

## 11 Shutting down

- ▶ Empty the appliance.
- ▶ Deactivate HydroBreeze. (see Deactivating HydroBreeze) \*
- ▶ Switch off appliance. (see Switching the appliance off and on)
- ▶ Pull the mains plug out of the socket.

- ▶ Remove the IEC socket if required: Pull the IEC socket out of the appliance plug and move it to the left and right at the same time.
- ▶ Clean appliance. (see 9.8 Cleaning the appliance)
- ▶ Leave the door open, so that no unpleasant odours arise.

## 12 Disposal

### 12.1 Preparing appliance for disposal



Li-Ion

Lamps

Liebherr uses batteries in some of its appliances. In the EU, for environmental reasons, legislation obliges the end user to remove these batteries before disposing of old appliances. If your appliance contains batteries, a corresponding notice is attached.

If you can remove the lamps yourself without destroying them, also remove these before disposal.

- ▶ Take the appliance out of operation.
- ▶ If possible: remove lamps without destroying them.

### 12.2 Disposing of the appliance in an environmentally friendly manner



Li-Ion



Li-Ion

Lamps

The appliance still contains valuable materials and must be disposed of separately from unsorted municipal waste.

Dispose of batteries separately from the old appliance. To do this, you can return the batteries free of charge to retailers as well as recycling centres and collection centres for recyclable materials.

Dispose of removed lamps via the respective collection systems.

For Germany:

You can dispose of the appliance free of charge via the class 1 collection containers at the local recycling and recyclable material collection centres. When purchasing a new fridge/freezer, if the sales area > 400 m<sup>2</sup>, retailers will also take back the old appliance free of charge.



### WARNING


Leaking coolant and oil!

Fire. The coolant contained in the appliance is eco-friendly, but also flammable. The oil contained in the appliance is flammable. Escaping coolant and oil can ignite if the concentration is high enough and in contact with an external heat source.

- ▶ Do not damage the pipelines of the coolant circuit and the compressor.

- ▶ Observe the notes on transporting the appliance.
- ▶ Transport the appliance without damaging it.
- ▶ Dispose of batteries, lamps and the appliance according to the above specifications.



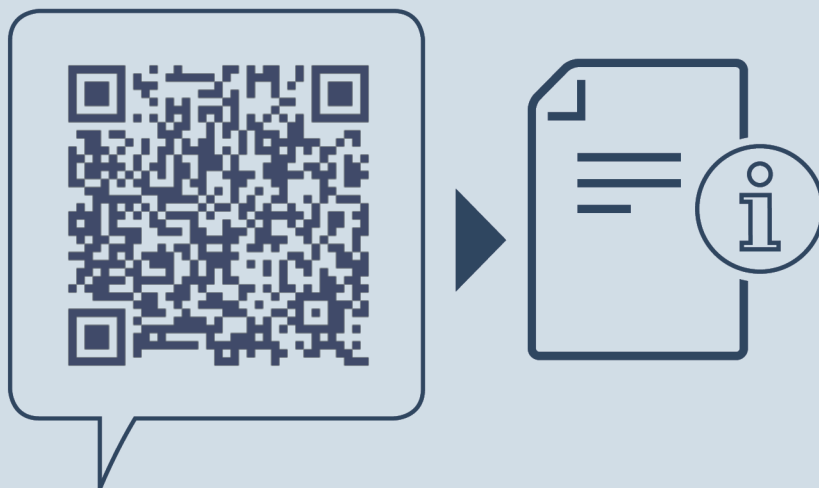

[home.liebherr.com/fridge-manuals](https://home.liebherr.com/fridge-manuals)

EN

Issue date: 20251008

**Part number index: 7083566-00**

Liebherr-Hausgeräte Marica EOOD  
Bezirk Plovdiv  
4202 Radinovo  
Bulgarien