SC5781 and SCB5790IM

Freestanding Semi Built-in

LIEBHERR

Refrigeration and Freezing







home.liebherr.com

	SC5781 and SCB5790IM
Energy consumption	
In 365 days kWh	670
Estimated Yearly Energy Cost in US \$	94
Capacity	
Total capacity cu.ft. (l)	25.5 (723)
Refrigerator comp. cu.ft. (l)	18.1 (515)
NoFrost Freezer comp. cu.ft. (l)	7.4 (208)
Sound rating dB(A)	33*
Ice cube output lbs. (kg) / 24h	2.6 (1.2)
Ice cube stock lbs. (kg)	11.9 (5.4)
Door hinges	Left reversible / right reversible
Product dimensions	
in inch (H / W / D)	79 5/16 / 47 3/8 / 26 9/16
in cm (H/W/D)	201.5 / 120.4 / 67.5
Cut out dimensions	
in inch (H/W/D)	80 / 48 / 24
in cm (H/W/D)	203.2 / 121.9 / 60.9
Energy supply	
Voltage V / Hz	115/60
Net weight lbs. (kg)	354 (160)
Ventilation requirements for installation per unit included with cut-out dimension	71111cm ² / 51 Inc ²



Accessories	
Side-by-side kit	9903573
Top Ventilation grill for 84" niche	9900368
Door opening limitation	9096414

Features



Lengthen the shelf life and preserve the flavor of your foods with a dual refrigeration system that creates ideal conditions in both the refrigerator and freezer.



The Fish & Seafood Safe stores fish and seafood at the optimum temperature of 28° F (-2°C) zone as much as you want - and store the remaining meat and dairy products at the optimum 32° F (0 °C). An LED display indicates that the 28° F (-2°C) zone is currently active.



VarioTemp means you have plenty of scope when storing food in your fridge freezer. This is because you can also set the accurate temperature in the freezer compartment in a range between 28°F to 57°F (-2°C to 14°C) – and therefore also use this compartment as a further cooling zone.



Do you want to cool fruit and vegetables like professionals? The cold mist combined with a temperature in the safe of just over 32°F (0°C) gives food that extra boost for longer shelf life.





Enjoy an optimally illuminated interior: the LightTower shows off the food in its best light and is positioned so that all of your filled fridge is illuminated at all times. The flush mounting of the LightTower in the side walls means there is also more space for your food.

^{*} Sound rating dB(A) based on a controlled environment reading.

Diagrams


Product Dimensions

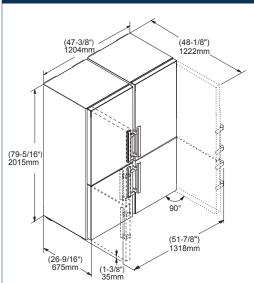

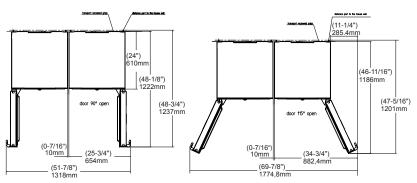

Allow door swing clearance at locations next to a wall. If the appliance is installed with the hinges next to a wall, the distance between the appliance and the wall must be at least $1\,\%$ " (40 mm). This is how far the handle protrudes when the door is open. The refrigerator door must open to a minimum of 90° to allow the crispers to open and the shelves to be removed. A 90° door limiter is available for this model as accessory. Height can be increased by 3/8" (10mm) by turning the levelling feet at the front and the height adjustable rollers at the appliance rear.

Semi built-in look - Cutout Dimensions

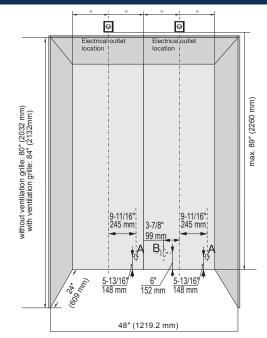


The appliances can be used freestanding or semi built-in. If semi built-in, consider the minimum cabinet opening dimensions specified on this image.

The power cord exists the rear of the appliances (A) right side and has a length of 6.5 ft (2m). We suggest the electrical outlet not to be located behind the appliance, so it is easily accessible. This can be located on top of the niche like shown on the image.

Do not install the shut-off valve for the water supply behind the appliance, to allow access to shut off without having to pull out the appliance. The water line lead out position is according to graphic (B).

Ventilation Requirements

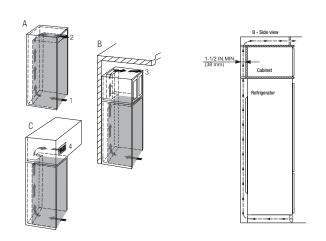

If the appliance is integrated in a fitted kitchen, the following ventilation requirements must be met: - The spacing fins on the back of the appliance are used to ensure sufficient ventilation. These must not lie in cavities or recesses in their final installation position. - Basically, the larger the ventilation gap, the more energy the appliance saves during operation. Do not restrict the air flow.

A cross-sectional air flow of at least 31 in2 (200cm2) per appliance at the airflow inlet (1) and at the airflow outlet (2).

The top ventilation space can be directed in one of the following ways:

- A. Directly over the appliance (2) with a gap between the ceiling of the unit and the cabinet
- B. Above the cabinet and below the ceiling (3).
- C. Through a vent installed in a soffit (4).

Be sure to consider the possibility of having to raise some of the leveling legs in order to level the appliance when installing. If you adjust the height of the appliance – it will effectively reduce air flow. Therefore leave yourself some room for adjustment. The appliance is designed to allow proper air flow when installed up against the wall.