

Contents

1 1.1 1.2 1.3 1.4 1.5 1.6	The appliance at a glance Delivered contents Overview of appliances and equipment SmartDevice Range of appliance use Conformity Spare parts	3 3 3 4 4 5 5
2	General safety instructions	5
3	Functionality of the Touch & Swipe display.	7
3.1 3.2	Navigation and symbol explanation Menus	7 8
3.3	Sleep mode	9
4	Start-up	9
4.1 4.2	Switching on appliance (first use) Putting InfinitySpring into operation	9 9
5 5.1	Storage Information regarding storage	10 10
5.2	Fridge compartment	10
5.3	BioFresh	10
5.4	Storage times	10
6	Energy saving	12
7	Use	12
7.1 7.1.1	Controls and displays	12
7.1.1	Status display Display symbols	
7.2	Appliance functions	
7.2.1	Notes on the appliance functions	13
()	Switching appliance off and on	13
•))	WiFi	13
5 rc	Temperature	14
℃∕ℯ₣	Temperature unit	15
B5	BioFresh B-Value	15
D1	D-Value	. 15
*	SuperCool	15
ŴĨ	PartyMode	16
\mathcal{A}	HolidayMode	17
\mathbb{Y}	SabbathMode	17
\bigcirc	EnergySaver	18
$\langle 0 \rangle$	CleaningMode	18

	Display Brightness	.19
	Door alarm	.19
×ſŀŋ	Input lock	.19
(f)	Language	20
Service No: Nodel Inder:	Appliance information	20
Serant: LI San XXXXXIIIXX Plu San IXXXXXXXIII	Software	20
Software	Reminder	21
∽ <u>∽</u>	Demo mode	. 21
(5)	Resetting to factory settings	.22
7.3 7.3.1 7.3.2 7.3.3 7.3.4	Messages Overview of warnings Ending warnings Overview of reminders Ending reminders	22 22 23
8	Equipment	24
8.1 8.2	Door racks Shelves	24 26
8.3	Split shelf	27
8.4 8.5	VarioSafe InfinitySpring	27 30
8.6	Space for baking tray	30
8.7	Variable bottle shelf	30
8.8 8.9	Drawers Lid for Fruit & Vegetable-safe	31 32
8.10	Butter dish	33
8.11	Egg rack	33
8.12 8.13	Bottle rack FlexSystem	33 34
9	Maintenance	34
9.1	FreshAir carbon filter	34
9.2	Water tank	35
9.3 9.4	Water filter Disassembling / assembling pull-out	35
7.4	systems	36
9.5	Removing / inserting the variable bottle	
9.6	shelf Lid for Fruit & Vegetable-safe	36 37
9.7 9.8	Defrosting the appliance Cleaning the appliance	37 37
10	Customer support	38
10.1	Technical specifications	38
10.2	Operating noises	39
10.3 10.4	Technical faults Customer Service	39 40
10.4	Rating plate	40 41
11	Decommissioning	41

11

- 12 Disposal...... 41
- environmentally friendly manner...... 41

Congratulations on the purchase of your new appliance. With this purchase, you have chosen all the advantages of the latest refrigeration technology, guaranteeing you a high-quality appliance with a long life span and high operating safety.

The equipment of your appliance gives you the highest level of day-to-day ease of operation.

Together we are making an active contribution to the conservation of our environment by purchasing this appliance which is manufactured in an environmentally friendly process with the use of recyclable materials.

We hope you enjoy your new appliance.

The manufacturer is constantly working to improve all types and models. Therefore, please be aware that we reserve the right to make changes to the shape, equipment and technology.

Symbol	Explanation				
	Read instructions Please read the information in these instructions carefully to understand all of the benefits of your new appliance.				
	Additional information online The digital manual with supplemental information can be found online by scan- ning the QR code on the front page of this manual or by entering the service number at home.liebherr.com/fridge-manuals.				
	Check appliance Check all parts for transport damage. If you have any complaints, please contact your agent or customer service.				
*	Differences These instructions apply to a range of models, so there may be differences. Sections that apply to certain models only are indicated by an asterisk (*).				
\land	Instructions and results Instructions are marked with a ▶. Results are marked with a ▷.				
	Videos Videos about the appliances are available on the YouTube channel of Liebherr-Hausg- eräte.				

The appliance includes software components that make use of open-source licenses. You can find information on the open-source licenses to be used here: **home.liebherr.com/open-source-licenses** These operating instructions apply to:

IRB5160

1 The appliance at a glance

1.1 Delivered contents

Check all parts for transport damage. If you have any complaints, please contact the retailer or customer service. (see 10.4 Customer Service)

Delivery contains the following parts:

- Integrated appliance
- Equipment (depending on your model)
- Installation parts (depending on your model)
- User Guide
- Installation Guide
- Warranty documents

1.2 Overview of appliances and equipment

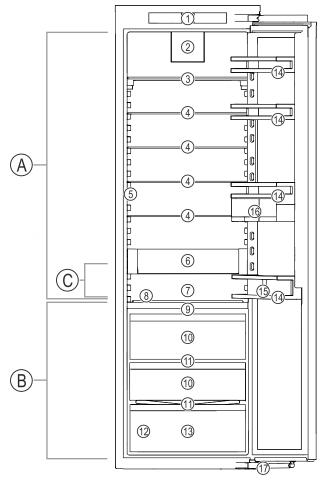


Fig. 1 Example illustration

Temperature range(A) Fridge compartment(C) Coldest zone

The appliance at a glance

(B) BioFresh

Equipment					
(1) Controls	(10) Fruit & Vegetable-Safe				
(2) Fan with FreshAir	(11) Drain hole				
activated charcoal					
filter					
(3) Separable shelf	(12) Nameplate				
(4) Storage shelf	(13) Meat & Dairy-Safe				
(5) InfinitySpring	(14) Door racks				
(6) VarioSafe	(15) Bottle holder				
(7) Space for baking	(16) VarioBoxes				
tray					
(8) Variable bottle rack	(17) Soft-closing mecha-				
	nism				
(9) Cover for					
Fruit & Vegetable-					
Safe					

Note

The shelves, drawers, and baskets are arranged for optimal energy efficiency in the factory configuration. However, changes to the arrangement within the given insertion options – for example the arrangement of shelves in the fridge compartment – have no effect on energy consumption.

1.3 SmartDevice

SmartDevice is the networking solution for your refrigerator.

If your appliance is SmartDevice-enabled or compatible, you can quickly and easily connect your appliance to your WiFi. With the SmartDevice app, you can operate your appliance from a mobile device. Additional functions and setting options are available in the SmartDevice app.

SmartDeviceenabled appli- a SmartDevice. To be able to ance: need to download the SmartDevice app.



More information **smartdevice.liebherr.com** about SmartDevice: Downloading the SmartDevice app:



After installing and configuring the SmartDevice app, you can connect your appliance to the WiFi using the SmartDevice app and the WiFi appliance function (see WiFi).

1.4 Range of appliance use

Normal use

This appliance is intended to be used in household and similar applications such as,

- staff kitchen areas in shops, offices and other working environments;
- farm houses and by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments;
- catering and similar non-retail applications.

The appliance is not suitable for freezing food;

All other types of uses are not permitted.

Foreseeable misuse

The following uses are specifically prohibited:

- Storage and cooling of medication, blood plasma, laboratory preparations or similar substances and products in accordance with the CMDCAS and FDA 510(k)
- Use outdoors
- Use in moist areas exposed to the rain
- Use in outdoor areas with very high humidity
- Use in areas at risk of explosion

Incorrect appliance use can cause damage to the stored products or cause them to spoil.

Climate ratings

The appliance is set to operate within specific ambient temperature limits according to its climate rating The climate rating for your appliance is printed on the rating plate

Note

► To guarantee trouble-free operation, comply with the indicated ambient temperatures.

Climate rating	for ambient temperatures from
SN	10 °C (50 °F) to 32 °C (90 °F)
N	16 °C (61 °F) to 32 °C (90 °F)

Climate rating	for ambient temperatures from
ST	16 °C (61 °F) to 38 °C (100 °F)
Т	16 °C (61 °F) to 43 °C (109 °F)
SN-ST	10 °C (50 °F) to 38 °C (100 °F)
SN-T	10 °C (50 °F) to 43 °C (109 °F)

1.5 Conformity

The refrigerant circuit has been tested for leaks. When installed, the appliance complies with the applicable safety regulations and with the corresponding directives.

The BioFresh compartment meets the requirements of a cold storage compartment as set out in EN ISO 8561.

1.6 Spare parts

Spare parts for functional and storable parts of the equipment are available for 15 years.

2 General safety instructions

Please keep these operating instructions in a safe place so you can refer back to them at any time.

If you pass the appliance on, please hand these operating instructions to the new owner. Read and follow these instructions. They contain safety information which is important for safe and problem-free installation and operation. Always read and follow the safety information.

Dangers for the user:

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance must not be performed by children unless they are supervised. Children between the ages of 3 and 8 may load and unload the appliance. Children under the age of 3 must be kept away from the appliance unless they are constantly supervised.

- **IMPORTANT:** The power plug must be easily accessible so that the appliance can be disconnected from the mains quickly in an emergency. It must not be behind the back of the appliance.
- The socket must be easily accessible so that the appliance can be disconnected quickly from the electricity in an emergency. It must not be located in the area behind the appliance.
- Always hold the appliance at the plug when disconnecting it from the household power.
 Do not pull on the cable.
- Disconnect the power plug or fuse if there is a malfunction.
- Do not damage the power cable. Do not operate the appliance with a faulty power cable. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. For Plug and Play connections, the change may be carried out by the customer.
- Repairs and work on the appliance may only be carried out by Customer Service or other specifically trained qualified personnel.
- Only install, connect and dispose of the appliance in accordance with the instructions.
- Only operate the appliance after it has been installed.
- The manufacturer is not liable for damage arising from a defective fixed water connection.

Risk of fire:

- The refrigerant contained within the appliance (specifications on the identification plate) is environmentally friendly, but flammable. Leaking refrigerant can ignite.
 - **WARNING**: Do not damage the refrigerant circuit.
 - Do not handle ignition sources inside the appliance.
 - WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer (e.g. steam cleaning appliances, heating appliances, ice cream makers).
 - If refrigerant leaks: Remove naked flames or ignition sources located near the area

of the leak. Ventilate the room well. Contact Customer Service.

- Do not operate the appliance near explosive gases.
- Do not store or use gasoline or other flammable gases and liquids near the appliance.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance. You can recognize such spray cans by the printed list of contents or by a flame symbol. Any leaking gases can be ignited by electrical components.
- Alcoholic beverages or other containers holding alcohol must always be tightly sealed for storage purposes. Any leaking alcohol can be ignited by electrical components.

Risk of falling or toppling over:

- **WARNING**: To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.
- Do not stand on the base, drawers, doors etc. or use them as improper supports. This applies in particular to children.

Danger of poisoning:

- Do not consume spoiled food.
- **WARNING**: Connect to potable water supply only.
- Do not use any old or already premounted water supply lines.

Danger of frostbite, feeling of numbness and pain:

- Avoid prolonged skin contact with cold surfaces or chilled/frozen food or take protective measures, e.g. wear gloves.

Risk of injury and damage:

- Hot steam may cause injuries. Do not use any electrical heating or steam cleaning equipment, naked flames or defrosting sprays for defrosting measures.
- **WARNING**: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not remove ice using sharp objects.

- **WARNING**: Keep clear of obstruction all ventilation openings in the appliance enclosure or in the structure for building-in.
- **WARNING**: Risk of child entrapment. Before you throw away your old refrigerator or freezer:
 - Take off the doors.
 - Leave the shelves in place so that children may not easily climb inside.

Risk of crushing:

- Do not hold onto the hinge when opening and closing the door. Fingers may become trapped.

California Proposition 65

- **WARNING**: This product can expose you to chemicals including Diisononyl Phthalate (DINP), which is known to the State of California to cause cancer, and Di-isodecyl Phthalate (DIDP), which is known to the State of California to cause birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov

FCC Warning

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC information

- This appliance has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference from an installation in residential areas. This appliance generates, uses and can radiate radio-frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this appliance does cause harmful interference to radio or television reception, which can be determined by switching the appliance on and off, the user should try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.

- Increase the distance between the appliance and receiver.
- Connect the appliance to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radio Frequency Exposure Statement

- This appliance is found to comply with FCC radio frequency (RF) exposure limits set for an uncontrolled environment. This transmitter must not be set up or operated in conjunction with another antenna or another transmitter.
- This appliance should be installed and operated with a minimum space of 200 mm (7 7/8 in) between the antenna and your body. The user must follow the specific operating instructions to ensure compliance with RF exposure.

IC information

- This appliance has license-exempt transmitters/receivers, which comply with the license-exempt Radio Standards Specification (RSS) of Innovation, Science and Economic Development Canada. Operation is subject to the following two conditions:
 - This appliance may not cause interference.
 - This device must accept any interference, including interference that may cause undesired operation of the device.

IC Radio Frequency Exposure Statement

- This appliance meets the IC RSS-102 limits for radiation exposure, which were defined for an uncontrolled environment. This appliance should be installed and operated so that there is a minimum space of 200 mm (7 7/8 in) between the antenna and your body.

Symbols on the device:



The symbol may be located on the compressor. It refers to the oil in the compressor and refers to the following danger: Can be fatal if swallowed or inhaled. This notice only applies for recycling. There is no danger during normal operation.



WARNING: Risk of fire / flammable materials. The symbol is located on the compressor and indicates the danger from flammable materials. Do not remove the label.



This label or a similar one may be located on the rear of the appliance. This label indicates that there are vacuum insulation panels (VIP) or perlite panels in the door and/or housing. This notice only applies for recycling. Do not remove the label.

Observe the warning messages and other detailed information in the other sections:

Â	DANGER	Indicates an immediately hazardous situation, which if not avoided, will result in death or serious injury.
Â	WARNING	Indicates a hazardous situa- tion, which if not avoided, could result in death or serious injury.
Â	CAUTION	Indicates a hazardous situa- tion, which if not avoided, could result in minor or moderate injury.
	NOTICE	Indicates a hazardous situa- tion, which if not avoided, could result in damage to prop- erty.
	Note	Indicates useful advice and tips.

3 Functionality of the Touch & Swipe display

You operate your appliance using the Touch & Swipe display. You select appliance functions in the Touch & Swipe display (hereafter referred to as display) by tapping them. If you do not perform any action on the display for 10 seconds, the display either jumps back to the higher-level menu or directly to the status display.

3.1 Navigation and symbol explanation

In the illustrations, different symbols are used to navigate the display. The following table describes these symbols.

Functionality of the Touch & Swipe display

Symbol	Description			
	Briefly touch the display: Activates/deactivates function. Confirms selection. Opens submenu.			
(35)	Touch the display for a specified time (e.g. 3 seconds): Activates/deactivates function or value.			
-5	Swipe left or right: Navigate in the menu.			
Back	Briefly touch the Back symbol: Jumps back one menu level.			
Back (35)	Press and hold the Back symbol for 3 seconds: Jumps back to the status display.			
 ➡ ○ 	Arrow with clock: It takes more than 10 seconds for the following message to appear in the display.			
➡ ➡ ➡ 2s 5s 10s	Arrow with a time indication: It takes the specified amount of time until the following message appears in the display.			
	"Open Settings menu" symbol: Navigates to the Settings menu and opens the settings menu. If necessary: Navigate to the desired function in the Settings menu. (see 3.2.1 Opening the Settings menu)			
	"Open Advanced menu" symbol: Navigates to the Advanced menu and opens the advanced menu.			
	If necessary: Navigate to the desired function in the Advanced menu. (see 3.2.2 Opening expanded menu)			
No action for 10 seconds	If you do not perform any action on the display for 10 seconds, the display either jumps back to the higher-level menu or directly to the status display.			

Symbol	Description		
Open door and close it again.	If you open the door and immedi- ately close it again, the display jumps directly back to the status display.		
Note: Illustrations of the display are shown in the English version.			

3.2 Menus

The appliance functions are distributed over various menus:

Menu	Description			
Main menu	When you switch the appliance on, you are automatically in the main menu.			
	From here you can navigate to the most important appliance functions, to the Settings menu and to the Advanced menu.			
کن Settings	The Settings menu contains addi- tional appliance functions for setting up your appliance.			
Settings menu				
Advanced menu	The advanced menu contains special appliance functions for setting up your appliance. Access to the Advanced menu is protected by the numerical code 151 .			

3.2.1 Opening the Settings menu

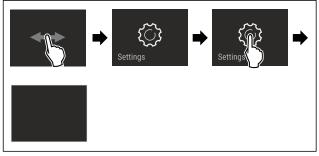


Fig. 2 Example illustration

• Carry out action steps according to the illustration.

Settings menu is open.

▶ If necessary: Navigate to the desired function.

3.2.2 Opening expanded menu



Fig. 3

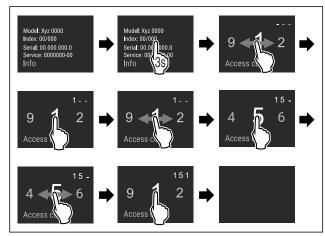


Fig. 4 Example illustration, access with numerical code 151

- Carry out action steps according to the illustration.
- ▶ Expanded menu is open.
- ▶ If necessary: Navigate to the desired function.

3.3 Sleep mode

If you do not touch the display for 1 minute, the display switches to sleep mode. In sleep mode, the display brightness is dimmed.

3.3.1 Ending sleep mode

Touch the display briefly with your finger.
 Sleep mode is ended.

4 Start-up

4.1 Switching on appliance (first use)

Make sure that the following requirements are fulfilled:

- □ The appliance is properly installed and connected according to the installation instructions.
- All adhesive strips, adhesive and protective films and transport locks are removed from inside and on the appliance.
- $\hfill \ensuremath{\square}$ All marketing leaflets are removed from the drawers.
- □ You are familiar with the functionality of the Touch & Swipe display. (see 3 Functionality of the Touch & Swipe display)

Switch on the appliance using the Touch & Swipe display.

- ▶ If the display is in sleep mode: Briefly touch the display.
- Carry out action steps according to the illustration.

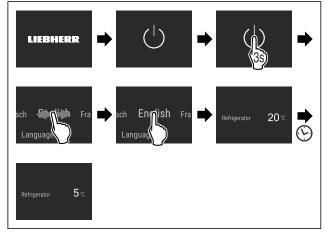


Fig. 5 Example illustration

- ▶ Status display appears.
- The appliance cools to the temperature set at the factory.
- The appliance starts in demo mode (status display with DEMO appears): If the appliance starts in demo mode, you can deactivate demo mode within the next 5 minutes. (see Demo mode)

More information:

- Start the InfinitySpring for the first time. (see 4.2 Putting InfinitySpring into operation)
- Start the SmartDevice for the first time. (see 1.3 SmartDevice) and (see WiFi)

Note

The manufacturer recommends:

- Stock with food: Wait for around 6 hours until the set temperature is reached.
- Observe the notes on storing food. (see 5.1 Information regarding storage)

Note

Accessories can be purchased from the Liebherr Service Center. The address for your respective country can be found on the back of the instructions.

4.2 Putting InfinitySpring into opera-tion

If your appliance is equipped with an InfinitySpring, **before the first use** you must bleed the water system for the InfinitySpring and clean the InfinitySpring.

Make sure that the following requirements are fulfilled:

- □ The water supply is connected. See the Installation Guide or installation instructions.
- The water tank is fitted. See the Installation Guide or installation instructions.
- The water filter is fitted. See the Installation Guide or installation instructions.
- □ Appliance is fully installed and connected.

4.2.1 Vent the water system

- ▶ Open the appliance door.
- ▶ Push a glass against the lower part of the Infinity-Spring dispenser.
- The upper part moves out and air escapes or water flows into the glass.
- Continue until the water flows evenly into the glass.
- ▶ The water system is now bled.

4.2.2 Cleaning the InfinitySpring

(see 9.8.4 Cleaning the InfinitySpring)

5 Storage

5.1 Information regarding storage

Danger of fire

Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

Note

Insufficient ventilation results in an increase in energy consumption and reduction of the refrigerating performance

Always keep the air slots unobstructed.

Observe the following specifications for storage:

- Keep the air vents on the fan free.
- Package or cover foods that readily take on or give off odors or taste in closed containers.
- Package raw meat or fish in clean, closed containers. This will prevent meat or fish from touching or dripping onto other food.
- Keep liquids in closed containers.
- Leave space between goods to ensure good air circulation.
- Store food according to the instructions on the packaging.
- Always observe the best-before date indicated on the packaging.

Note

Failure to follow these guidelines can lead to foodstuffs spoiling.

5.2 Fridge compartment

The air circulation in the appliance creates different temperature zones. You will find the different temperature zones in the appliance and equipment overview. (see 1.2 Overview of appliances and equipment)

5.2.1 Arranging your food properly

- Upper area and door: Store butter, cheese, canned food and tubes.
- Coldest temperature zone: Store perishable foods such as pre-cooked meals.

5.3 BioFresh

BioFresh will extend the storage time for some fresh foods compared to traditional refrigeration.

Taste, freshness and nutritional value (vitamin groups B and C) are largely retained. Less spoilage and shriveling of fruit and vegetables. The food keeps fresher and retains its natural goodness.

Note

The temperature can drop to 0 °C (32 °F) which means foods could easily freeze.

Store cold-sensitive produce such as cucumbers, eggplants, zucchinis and tropical fruit in the fridge compartment.

5.3.1 Fruit & Vegetable safe 🗇 🥖 🚳

This safe creates a climate of close to 0 °C (32 °F). The compartment lid ensures constant levels of humidity. This storage climate is suitable for storing unpackaged food with high intrinsic moisture (for example, lettuce, vegetables, fruit).

The humidity in the compartment depends on the moisture content of the chilled goods placed in it, and also depends on how often the compartment is opened. You can regulate the humidity level.

Arranging your food properly

- Store unpackaged fruit and vegetables.
- If the humidity is too high:
- Regulate the humidity.

5.3.2 Meat & Dairy safe 🖉 🔎 🗇

This safe creates a storage climate of close to 0 °C (32 °F). This storage climate is suitable for more sensitive foods (e.g. dairy products, meat, fish, sausage).

Arranging your food properly

Store dry or packaged food.

5.4 Storage times

The storage times given are guidelines

Food with a "use by" date must still be consumed by the date indicated on the package

5.4.1 Fridge

The best-before date stated on the packaging applies.

5.4.2 BioFresh

Guideline storage times for the Meat & Dairy-Safe			
Butter	at 1 (34 °F)	°C	up to 90 days
Hard cheese	at 1 (34 °F)	°C	up to 110 days
Milk	at 1 (34 °F)	°C	up to 12 days
Sausage, cold cuts	at 1 (34 °F)	°C	up to 8 days
Poultry	at 1 (34 °F)	°C	up to 6 days
Pork	at 1 (34 °F)	°C	up to 6 days
Beef	at 1 (34 °F)	°C	up to 6 days
Game	at 1 (34 °F)	°C	up to 6 days

Note

Note that higher-protein foods spoil more quickly So, shellfish and crustaceans perish faster than fish, and fish perishes faster than meat.

Guideline storage times for the Fruit & Vegetable- Safe				
Vegetables, lettuce				
Artichokes	at 1 (34 °F)	°C	up to 14 days	
Celery	at 1 (34 °F)	°C	up to 28 days	
Cauliflower	at 1 (34 °F)	°C	up to 21 days	
Broccoli	at 1 (34 °F)	°C	up to 13 days	
Endives	at 1 (34 °F)	°C	up to 27 days	

Mâche	ot		up to 10 dovo
Mache	at 1 (34 °F)	°C	up to 19 days
Peas	at 1 (34 °F)	°C	up to 14 days
Kale	at 1 (34 °F)	°C	up to 14 days
Carrots	at 1 (34 °F)	°C	up to 80 days
Garlic	at 1 (34 °F)	°C	up to 160 days
Cabbage turnip	at 1 (34 °F)	°C	up to 14 days
Iceberg lettuce	at 1 (34 °F)	°C	up to 13 days
Herbs	at 1 (34 °F)	°C	up to 13 days
Leeks	at 1 (34 °F)	°C	up to 29 days
Mushrooms	at 1 (34 °F)	°C	up to 7 days
Radishes	at 1 (34 °F)	°C	up to 10 days
Brussels sprouts	at 1 (34 °F)	°C	up to 20 days
Asparagus	at 1 (34 °F)	°C	up to 18 days
Spinach	at 1 (34 °F)	°C	up to 13 days
Savoy cabbage	at 1 (34 °F)	°C	up to 20 days

Guideline storage tir Safe	nes for t	he I	Fruit & Vegetable-
Apricots	at 1 (34 °F)	°C	up to 13 days
Apples	at 1 (34 °F)	°C	up to 80 days
Pears	at 1 (34 °F)	°C	up to 55 days
Blackberries	at 1 (34 °F)	°C	up to 3 days
Dates	at 1 (34 °F)	°C	up to 180 days
Strawberries	at 1 (34 °F)	°C	up to 7 days
Figs	at 1 (34 °F)	°C	up to 7 days
Blueberries	at 1 (34 °F)	°C	up to 9 days
Raspberries	at 1 (34 °F)	°C	up to 3 days
Red currants	at 1 (34 °F)	°C	up to 7 days
Cherries, sweet	at 1 (34 °F)	°C	up to 14 days
Kiwi	at 1 (34 °F)	°C	up to 80 days
Peaches	at 1 (34 °F)	°C	up to 13 days
Plums	at 1 (34 °F)	°C	up to 20 days
Cranberries	at 1 (34 °F)	°C	up to 60 days
Rhubarb	at 1 (34 °F)	°C	up to 13 days

Guideline storage times for the Fruit & Vegetable-Safe			
Gooseberries	at 1 (34 °F)	°C	up to 13 days
Grapes	at 1 (34 °F)	°C	up to 29 days

6 Energy saving

- Always ensure good ventilation. Keep clear of obstruction all ventilation openings in the appliance enclosure or in the structure for building-in.
- Never block air slits in the fan.
- Do no install the appliance in an area with direct sunlight, next to a heating unit or similar.
- If you install the appliance directly next to an oven, its energy consumption may increase slightly. This depends on the service life and how often the oven is used.
- Energy consumption depends on installation conditions such as the ambient temperature (see 1.4 Range of appliance use). A warmer ambient temperature can increase the energy consumption.
- Avoid opening the appliance door for any longer then necessary
- The lower the temperature is set the higher the energy consumption.
- Sort your food items: home.liebherr.com/food.
- All food stored in the appliance should be well wrapped and covered. This prevents frost buildup.
- Only take food out for as long as necessary so that it does not get too warm.
- Insertion of warm foods: first let the food cool down to room temperature.
- For longer periods of absence, use HolidayMode (see HolidayMode).

7 Use

7.1 Controls and displays

7.1.1 Status display




Fig. 6 Status display shows the actual temperature.

- (1) Fridge compartment temperature display
- (2) Temperature display BioFresh

The status display shows the actual temperature and is the initial display. You can navigate from there to the functions and settings.

7.1.2 Display symbols

The display symbols provide information about the current appliance status.

Symbol	Appliance status
Ċ	Standby The appliance or temperature zone is turned off.
	Flashing number Appliance is working. Tempera- ture flashes until the set temperature is reached.
	Flashing symbol Appliance is working. Setting is made.

7.2 Appliance functions

7.2.1 Notes on the appliance functions

The appliance functions are set at the factory so that your appliance is fully functional.

Before you alter, activate or deactivate the appliance functions, make sure that the following requirements are met:

- □ You have read and understood the descriptions of how the display works. (see 3 Functionality of the Touch & Swipe display)
- □ You have familiarized yourself with the operating and display elements of your appliance.

Switching appliance off and on

This function switches the entire appliance on and off.

Switching off the appliance

If you switch off the appliance, the settings that were made before remain stored.

Make sure that the following requirements are fulfilled:

□ Handling instructions (see 11 Decommissioning) have been completed.

|--|

Fig. 7

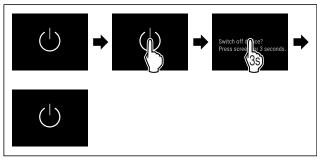


Fig. 8

- Carry out action steps according to the illustration.
- ▶ Appliance is switched off.
- Standby symbol appears in the display.
- ▶ Display turns black.

Switching on the appliance

- If the display is in sleep mode:
- Briefly touch the display.

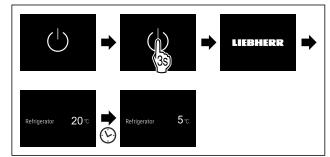


Fig. 9 Example illustration

- Carry out action steps according to the illustration. If the appliance starts in demo mode:
- ▶ Deactivate demo mode. (see Deactivating demo mode)
- ▶ Appliance is switched on.
- Previously made settings are re-established.
- > The appliance cools to the set target temperature.



Use this function to connect your appliance to WiFi. You can then operate it via the SmartDevice app on a mobile device. You can also use this function to disconnect or reset the WiFi connection.

More information on the SmartDevice: (see 1.3 Smart-Device)

Note

The SmartDevice function is not available in the following countries: Russia, Belarus, Kazakhstan.

Establishing the WiFi connection for the first time

Make sure that the following requirements are fulfilled:

- □ You have installed the SmartDevice app (see apps.home.liebherr.com).
- □ Registration in the SmartDevice app is completed.



Fig. 10

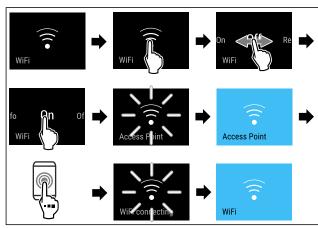


Fig. 11

Carry out action steps according to the illustration.
 Connection is established.

Disconnecting from the WiFi



Fig. 12

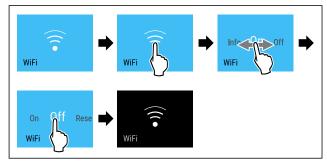


Fig. 13

Carry out action steps according to the illustration.
 There is no connection.

Resetting the WiFi connection



Fig. 14

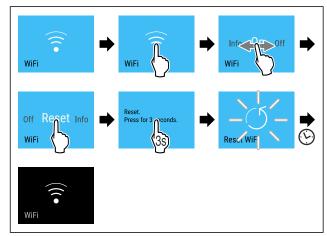


Fig. 15

- Carry out action steps according to the illustration.
- WiFi connection and other WiFi settings are reset to factory settings.

Showing information about the WiFi connection



Fig. 16

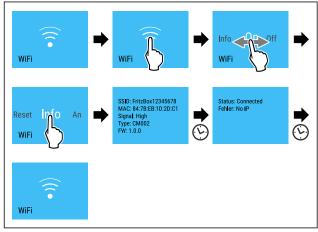


Fig. 17

• Carry out action steps according to the illustration.

⁵ [°] Temperature

Use this function to set the temperature.

The temperature depends on the following factors:

- How often the door is opened
- How long the door is open
- The room temperature of the installation site
- Type, temperature and amount of food

Temperature zone	Factory-set temperature	Recommended setting
5 ° Fridge section	5 °C (41 °F)	4 °C (39 °F)
0 ^{°C} BioFresh	0 °C (32 °F)	B-Value (see BioFresh B- Value)

Setting the temperature in the fridge section

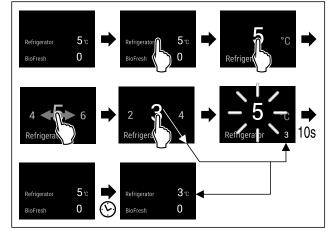


Fig. 18 Example illustration

• Carry out action steps according to the illustration.

▶ Temperature is set.

Setting the temperature in BioFresh

You set the temperature using the **BioFresh B-Value**. (see BioFresh B-Value)

℃ ✓ F Temperature unit

Use this function to set the temperature unit. You can set the temperature unit in either degrees Celsius or degrees Fahrenheit.

Setting the temperature unit



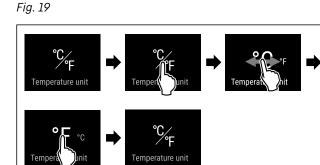


Fig. 20 Example illustration: Switching between degrees Celsius or degrees Fahrenheit.

- Carry out action steps according to the illustration.
- ► Temperature unit is set.

BioFresh B-Value

Use this function to set the BioFresh B-Value. Use the BioFresh B-Value to adjust BioFresh slightly warmer or colder if a higher or lower ambient temperature makes it necessary. Upon delivery, the BioFresh B-Value is set to the value B5. If you adjust the B-Value, please observe the following table:

Value	Description	
B1	Lowest temperature	
B1-B4	The temperature can drop to 0 °C (32 °F) which means foods could easily freeze.	
B5	Pre-set temperature	
B9	Highest temperature	
Satting the BieFreeh B Value		

Setting the BioFresh B-Value



Fig. 21

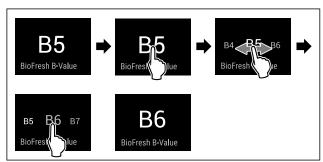


Fig. 22 Example illustration: Switching from B5 to B6.

- Carry out action steps according to the illustration.
- ▶ The BioFresh B-Value is set.

Status display shows the target temperature.

D1 _{D-Value}

The D-Value is preset for your appliance and must not be changed.

K SuperCool

This function activates or deactivates SuperCool. If you activate SuperCool the appliance increases the cooling capacity. This allows you to achieve lower cooling temperatures. You can activate SuperCool if you want to quickly cool large volumes of food.

Use

If the function is active, the appliance operates at a higher output. As a result, the operating noise of the appliance may be temporarily louder, while energy consumption increases.

Activating SuperCool

Time for activating the function:

- If you want to store fresh food in the fridge section: Activate the function when storing food.



Fig. 23




Fig. 24

Carry out action steps according to the illustration. -or-

Activating with the SmartDevice app.

SuperCool is activated.

> Temperature display turns blue.

Deactivating SuperCool

SuperCool is automatically deactivated after 18 hours. However, you can also manually deactivate SuperCool at any time:



Fig. 25



Fig. 26

► Carry out action steps according to the illustration. -or-

Deactivating with the SmartDevice app.

- ▶ SuperCool is deactivated.
- > Appliance continues to run in normal operation.
- > The appliance first cools to the set temperature.



PartyMode

This function activates and deactivates PartyMode. PartyMode activates different functions that are useful for a party.

PartyMode activates the following functions:

- SuperCool (see SuperCool)

You can set all listed functions individually and flexibly. By deactivating PartyMode all changes are discarded.

If the function is active, the appliance operates at a higher output. As a result, the operating noise of the appliance may be temporarily louder, while energy consumption increases.

Activating PartyMode



Fig. 27




Fig. 28

- Carry out action steps according to the illustration.
- PartyMode and the corresponding functions are activated.
- ▶ Temperature display turns blue.
- The current temperature flashes until the target temperature is reached.

Deactivating PartyMode

PartyMode is automatically deactivated after 24 hours. However, you can also manually deactivate PartyMode at any time:








Fig. 30

- Carry out action steps according to the illustration.
- ▶ PartyMode is deactivated.
- The appliance first cools to the set temperature: The current temperature flashes until the target temperature is reached.

HolidayMode

Use this function to activate or deactivate Holiday-Mode. If you activate HolidayMode the fridge section is set to 15 °C (59 °F). This helps you save energy if you are away for a longer period of time and avoid bad smells and mold formation.

Appliance status	with active	HolidayMode
------------------	-------------	-------------

Fridge section cools to 15 °C (59 °F).

BioFresh cools down to 15 °C (59 °F).

PartyMode is deactivated.

SuperCool is deactivated.

Activating HolidayMode

- Empty the fridge section completely.
- Empty BioFresh completely.



Fig. 31



Fig. 32

- Carry out action steps according to the illustration.
- ▶ HolidayMode is activated.
- > Temperature display turns blue and shows the HolidayMode symbol.

Deactivating HolidayMode



Fig. 33



Fig. 34

- Carry out action steps according to the illustration.
- ▶ HolidayMode is deactivated.

> The appliance first cools to the set temperature.



SabbathMode

This function activates and deactivates SabbathMode. If you activate this function, some electronic functions are switched off. Your appliance thereby meets the religious requirements of Jewish holidays such as the Sabbath and complies with STAR-K Kosher certification

Appliance status with active SabbathMode

The status display continuously shows SabbathMode.

All functions in the display except the **Deactivating** SabbathMode function are disabled.

Active functions remain active.

The display remains bright when you close the door.

The interior lighting is deactivated.

Memories are not listed. The set time interval is stopped.

Memories and warnings are not displayed.

There is no door alarm.

There is no temperature alarm.

The InfinitySpring is out of order.

The defrost cycle operates only for the specified time without taking into account the appliance usage.

After a power failure, the device returns to SabbathMode.

Appliance status

Note

This appliance has certification from the "Institute for Science and Halacha". (www.machonhalacha.co.il)

You can find a list of STAR-K-certified appliances at www.star-k.org/appliances.

Activating SabbathMode



Danger of poisoning from spoiled food!

If you have SabbathMode activated and a power failure occurs, no message appears in the status display about the power failure. Once the power is restored, the appliance continues to operate in SabbathMode. The power failure may mean that food spoils and the consumption of this food could lead to food poisoning. After a power failure:

▶ Do not consume food that has been frozen and thawed.







Fig. 36

- Carry out action steps according to the illustration.
- SabbathMode is activated.
- ▶ Status display continuously shows SabbathMode.

Deactivating SabbathMode

SabbathMode is automatically deactivated after 80 hours. However, you can also manually deactivate SabbathMode at any time:



Fig. 37

Carry out action steps according to the illustration.

SabbathMode is deactivated.

EnergySaver

Use this function to activate or deactivate energy saving mode. If you activate energy saving mode, energy consumption drops and the temperature in the appliance increases. Food remains fresh, but shelf life is reduced.

Temperature zone		Recommended setting (see Setting temperature in fridge section)	
5 . section	Fridge	4 °C (39 °F)	7 °C (45 °F)

Temperatures

Activating EnergySaver



Fig. 38



Fig. 39

• Carry out action steps according to the illustration.

▶ Energy saving mode is activated.

Deactivating EnergySaver



Fig. 40




Fig. 41

- Carry out action steps according to the illustration.
- Energy saving mode is deactivated.

CleaningMode

This function activates and deactivates CleaningMode. CleaningMode enables you to comfortably clean the appliance.

This setting relates to the fridge compartment.

Application:

- Clean the fridge compartment. (see 9.8 Cleaning the appliance)
- Clean the InfinitySpring. (see 9.8.4 Cleaning the InfinitySpring)

Appliance status with active CleaningMode
The status display continuously shows CleaningMode.
The fridge section is switched off.
The interior lighting is activated.
Reminders and warnings are not displayed. No signal tone is sounded.
The InfinitySpring is out of order.

Appliance status

Activating CleaningMode



Fig. 42



Fig. 43

Carry out action steps according to the illustration.

CleaningMode is activated.

Status display continuously shows CleaningMode.

Deactivating CleaningMode

CleaningMode is automatically deactivated after 60 minutes. However, you can also manually deactivate CleaningMode at any time:



Fig. 44

- Carry out action steps according to the illustration.
- CleaningMode is deactivated.
- ▶ The appliance first cools to the set temperature.

Display Brightness

Use this function to set the brightness of the display gradually.

You can set the following brightness levels:

- 40 %
- 60 %
- 80 %
- 100% (default setting)

Setting the brightness



Fig. 45

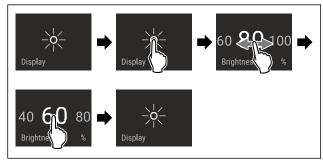


Fig. 46 Example illustration: Switching from 80 % to 60 %.
▶ Carry out action steps according to the illustration.
▶ Brightness is set.

Door alarm

Use this function to activate or deactivate the door alarm. The door alarm sounds if the door is open for too long. The door alarm is activated upon delivery. You can set how long to door can remain open until the door alarm sounds.

You can set the following values:

- 1 minute

- 2 minutes
- 3 minutes
- Off

Setting the door alarm



Fig. 47

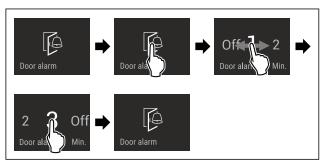


Fig. 48 Example illustration: Changing the door alarm from 1 minute to 3 minutes.

- Carry out action steps according to the illustration.
 Door alarm is set.

Deactivating door alarm



Fig. 50

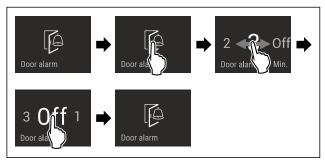


Fig. 51

- ▶ Carry out action steps according to the illustration.
- ▶ Door alarm is deactivated.

Input lock

This function activates and deactivates the input lock. The input lock prevents the appliance from being operated accidentally, e. g. by children.

Application:

- Prevent unintentional changes of functions.
- Prevent switching off of the appliance.
- Prevent unintentional temperature setting.

Use

Activating the input lock

If you activate the input lock, you can continue to navigate in the menus, however you cannot select or modify other functions.



Fig. 52



Fig. 53

- Carry out action steps according to the illustration.
- ▶ Input lock is activated.

Deactivating the input lock



Fig. 54



Fig. 55

Carry out action steps according to the illustration.
 Input lock is deactivated.

⊕ Language

Use this function to set the display language.

You can set the following languages:

- German
- English
- French
- Spanish
- Italian
- Dutch
- Czech
- Polish
- Portuguese
- Bulgarian - Russian
- Chinese

Setting the language



Fig. 56

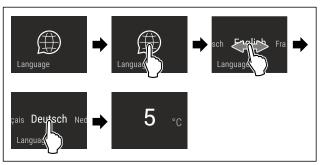


Fig. 57 Example illustration depending on the language and temperature

- Carry out action steps according to the illustration.
- ▶ Language is set.
- Display jumps back to the status display.

Appliance information

Use this function to display the model name, index, serial number and service number of your appliance. You will need the appliance information when you contact customer service. (see 10.4 Customer Service)

You also use this function to open the expanded menu. (see 3 Functionality of the Touch & Swipe display)

Display appliance information



Fig. 58



Fig. 59

- Carry out action steps according to the illustration.
- ▶ Display shows the appliance information.

rtware Sof

Software

Use this function to display the software version of your appliance.

Display software version



Fig. 60

UI SW: XXXXXXXX PB SW: XXXXXXXX Software

Fig. 61

- Carry out action steps according to the illustration.
- Display indicates the software version.

Reminder

Use this function to activate or deactivate reminder. This function is activated upon delivery.

The following reminders will then appear if the function is activated:

- Replace water filter (see Replace water filter)
- Replace the FreshAir activated charcoal filter (see Replace FreshAir activated charcoal filter)

Activating reminder



Fig. 62



Fig. 63

• Carry out action steps according to the illustration. ▶ Reminder is activated.

Deactivating reminder



Fig. 64



Fig. 65

Carry out action steps according to the illustration. Reminder is deactivated.

Demo mode

Demo mode is a special feature for dealers who want to demonstrate appliance features. If you activate demo mode, all refrigeration functions are deactivated.

If you switch on your appliance and "Demo" appears in the status display, then demo mode is already activated.

If you activate and then deactivate demo mode, the appliance will be reset to factory defaults. (see Resetting to factory settings)

Activating demo mode



Fig. 66

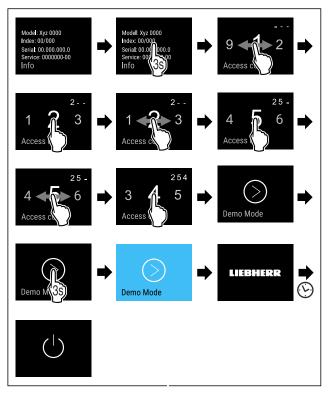


Fig. 67

- Carry out action steps according to the illustration.
- ▶ Demo mode is activated.
- ▶ Appliance is switched off.
- Switch on the appliance. (see 4.1 Switching on appliance (first use))
- \triangleright "DEMO" appears in the status display.

Deactivating demo mode



Fig. 68

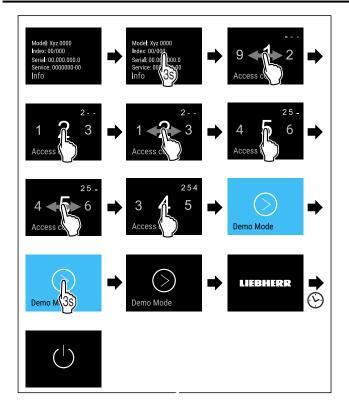


Fig. 69

- Carry out action steps according to the illustration.
- Demo mode is deactivated.
- ► Appliance is switched off.
- Switch on the appliance. (see 4.1 Switching on appliance (first use))
- ▶ Appliance is reset to factory settings.

Resetting to factory settings

Use this function to reset all settings to factory settings. All settings you have made so far are reset to their original settings.

Performing a reset



Fig. 70

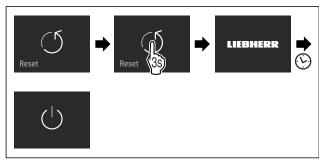


Fig. 71

Carry out action steps according to the illustration.

- ▶ Appliance is reset.
- ▶ Appliance is switched off.
- Restart the appliance. (see 4.1 Switching on appliance (first use))

7.3 Messages

There are two categories of messages:

Category	Meaning		
Warning	Warnings are displayed if there is a door alarm or a malfunction.		
	You can easily end warnings yourself. For any major malfunction, you must contact Customer Service. (see 10.4 Customer Service)		
Reminder	Reminders remind you of general processes. You can perform these processes and end the message doing so.		

7.3.1 Overview of warnings

The appliance's behavior in the event of a warning:

- Warning appears in the display in red.
- Alarm sounds in increasing volume.
- For some warnings the interior lighting pulses.

Message	Cause	Ending the message
Close the door.	The message appears if the door is open for too long.	
Error	This message appears if there is an appliance error. An appliance module indicates an	action steps
Error (() x WiFi Error	error. This message appears if the appliance could not be connected to the WLAN. (see Establishing	action steps (see WLAN
WLAN error	the WiFi connection for the first time)	

7.3.2 Ending warnings

Door alarm




Fig. 72 Example illustration

Carry out action steps according to the illustration.

-or-

Close the door.

▶ Display skips to status display.

You can set how long to door may remain open until the door alarm sounds. (see Setting the door alarm)

Error

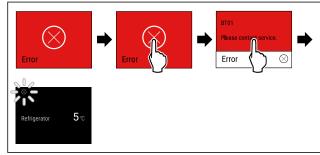


Fig. 73 Example illustration

- Briefly touch the display.
- Error code is displayed.
- Make a note of the error code.
- Briefly touch the display.
- Display skips to status display.
- Contact Customer Service. (see 10.4 Customer Service)

WLAN error

- ► Check the WLAN connection.
- ► Connect the appliance to the WLAN again. (see WiFi)

7.3.3 Overview of reminders

The appliance's behavior in the event of a reminders:

- Reminder appears in the display in yellow.
- Alarm tone sounds.
- For some reminders the interior lighting pulses.

Message	Cause	Ending the message
Water filter Replace water filter	This message appears if you have to replace the water filter.	steps (see Replace
FreshAir filter Replace the Fres- hAir activated charcoal filter	This message appears if you have to replace the activated charcoal filter.	steps (see Replace FreshAir acti-

7.3.4 Ending reminders

Replace water filter

Liebherr recommends: Replace water filter of the InfinitySpring every 6 months.

Note

The water filter can be purchased from the Liebherr Service Center. The address for your respective country can be found on the back of the instructions.

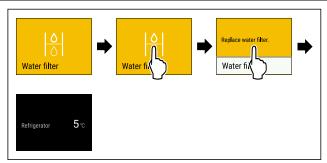


Fig. 74 Example illustration

- Briefly touch the display.
- > Display shows information about the reminder.
- ▶ Briefly touch the display.
- ▶ Replace water filter. (see 9.3 Water filter)
- ▶ Water filter ensures optimum water quality.
- ▶ Reminder appears again after 6 months.

If you no longer want to keep this reminder, you can deactivate the reminder. (see Deactivating reminder)

Replace FreshAir activated charcoal filter

Liebherr recommends: Replace the FreshAir activated charcoal filter every 6 months.

Note

FreshAir activated charcoal filters can be purchased from the Liebherr Service Center. The address for your respective country can be found on the back of the instructions.

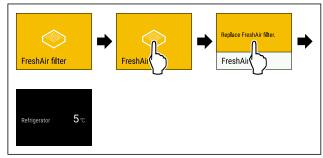


Fig. 75 Example illustration

- ▶ Briefly touch the display.
- Display shows information about the reminder.
- ▶ Briefly touch the display.
- Replace activated charcoal filter. (see 9.1 FreshAir carbon filter)
- The activated charcoal filter ensures optimum air quality in the refrigerator.
- ▶ Reminder appears again after 6 months.

If you no longer want to keep this reminder, you can deactivate the reminder. (see Deactivating reminder)

8 Equipment

8.1 Door racks

Door racks are suitable for storing beverages and food. You can move door racks for use as individually needed and disassemble them for cleaning. However, Liebherr recommends using the door racks in the position they are in when delivered from the plant.

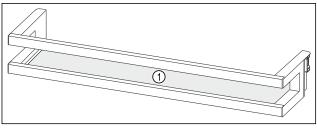


Fig. 76 Example illustration of the door racks **(1)** Shelf

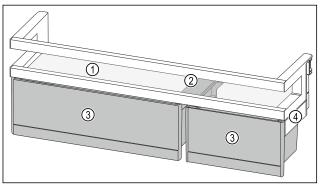


Fig. 77 Example illustration of door racks with VarioBoxes(1) Shelf(3) VarioBoxes

- (2) Retaining part for VarioBoxes
- (3) VarioBoxes(4) Side section

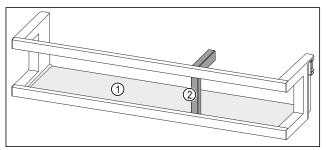


Fig. 78 Example illustration of the door racks with bottle holder(1) Shelf(2) Bottle holder

The following table shows examples of what you can store in each door rack. Here, make sure that you do not exceed the maximum loading weight for the door.

Door racks	Food	
Door racks (see Fig. 76)	Butter, cheese, canned food, tubes	
Door racks with bottle holder (see Fig. 78)	Bottles Use the movable bottle holder to secure the bottles in the door rack.	
Door racks with Vario- Boxes (see Fig. 77)	small food items	

8.1.1 Removing the VarioBoxes

You can use either one or both VarioBoxes. If you want to place especially high bottles in the door rack below the door rack with VarioBoxes, you can remove one or both VarioBoxes.

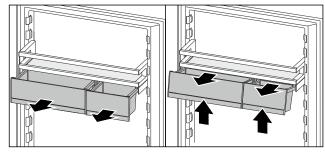


Fig. 79

- ▶ Pull out the VarioBoxes as far as they go.
- ▶ Lift VarioBoxes at the front.
- ► Take the VarioBoxes out to the front.

8.1.2 Removing the door rack

Make sure that the following requirements are fulfilled:

VarioBoxes are removed. (see 8.1.1 Removing the VarioBoxes)

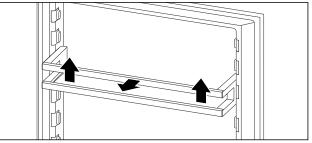


Fig. 80 Example illustration

- ► Move the door rack up.
- Move the door rack to the front.

8.1.3 Inserting the door rack

Make sure that the following requirements are fulfilled: VarioBoxes are removed. (see 8.1.1 Removing the VarioBoxes)

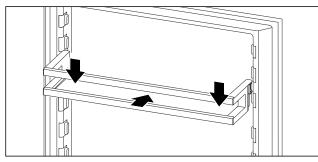


Fig. 81 Example illustration

- Insert the door rack.
- ▶ Press the door rack down.

8.1.4 Inserting the VarioBoxes

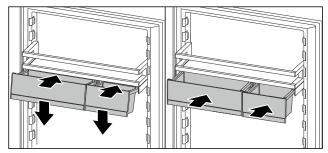


Fig. 82

- Place the VarioBoxes at an angle on the ridge of the door rack.
- Lower the VarioBoxes.
- Push in the VarioBoxes.

8.1.5 Repositioning the VarioBoxes

Make sure that the following requirements are fulfilled:

- □ VarioBoxes are removed. (see 8.1.1 Removing the VarioBoxes)
- Door rack is removed. (see 8.1.2 Removing the door rack)

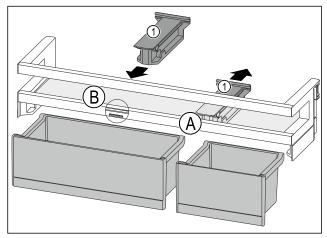


Fig. 83

- ▶ Pull off the retaining part *Fig. 83 (1)* in position *Fig. 83 (A)* downward.
- ▶ Insert the retaining part *Fig. 83 (1)* in position *Fig. 83 (B)*.

Insert the door rack. (see 8.1.3 Inserting the door rack)

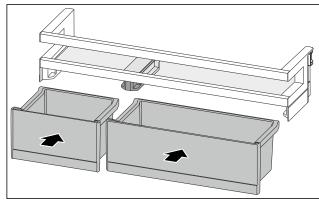


Fig. 84

▶ Insert the VarioBoxes opposite order. (see Fig. 84)

8.1.6 Disassembling the door rack

You can disassemble some of the door racks if you want to clean the door rack or if you'd like to insert or remove replacement parts.

Disassembling the door rack

Make sure that the following requirements are fulfilled:

Door rack is removed. (see 8.1.2 Removing the door rack)

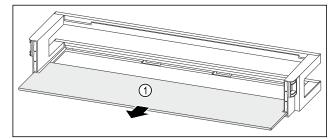


Fig. 85 Door racks with shelf

▶ Remove the shelf *Fig. 85 (1)*.

Disassembling the shelf with VarioBoxes

Make sure that the following requirements are fulfilled:Door rack is removed. (see 8.1.2 Removing the door rack)

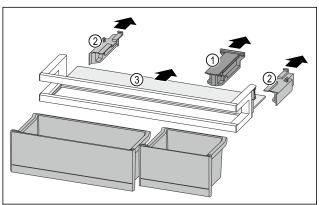


Fig. 86

- ▶ Remove theVarioBoxes. (see 8.1.1 Removing the VarioBoxes)
- ▶ Pull off the retaining part *Fig. 86 (1)*.
- ▶ Pull off the side part Fig. 86 (2).
- Remove the shelf Fig. 86 (3).

Disassembling the door racks with bottle holder

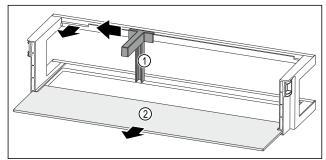


Fig. 87 Door racks with bottle holder and shelf

- ▶ Push the bottle holder *Fig. 87 (1)* to the side up to the recess.
- Remove the bottle holder *Fig. 87 (1)*.
- Remove the shelf Fig. 87 (2).

8.1.7 Assembling the door rack

Assembling the door rack

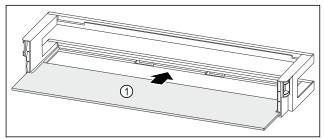


Fig. 88 Door racks with shelf

▶ Push the shelf *Fig. 88 (1)* into the side cutouts.

Assembling the door rack with VarioBoxes

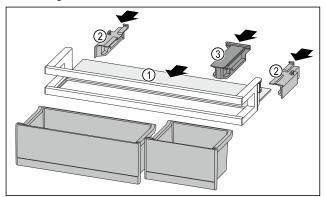


Fig. 89

- ▶ Push the shelf *Fig. 89 (1)* into the side cutouts.
- ▶ Insert the side parts *Fig. 89 (2)*.
- ▶ Insert the retaining part *Fig. 89 (3)*.
- ▶ Insert the VarioBoxes. (see 8.1.4 Inserting the Vario-Boxes)

Assembling the door racks with bottle holder

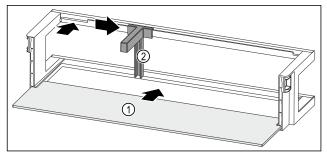


Fig. 90 Door racks with shelf

- ▶ Push the shelf *Fig. 90 (1)* into the side cutouts.
- ▶ Insert the bottle holder *Fig. 90 (2)* into the recess.
- ▶ Push the bottle holder *Fig. 90 (2)* to the side into the desired position.

8.2 Shelves

8.2.1 Moving/removing shelves



CAUTION Broken shelves!

Danger of cuts.

Only remove storage shelves when there is nothing on them

Extension stops secure the shelves against being accidentally pulled out

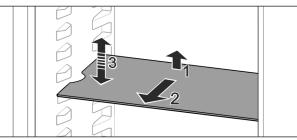


Fig. 91

- Lift the shelf and pull to the front.
- Side recess to shelf position.
- Reposition the shelf: Lift up or lower to the desired height and insert.

-or-





- ▶ Take out the shelf completely: Pull out to the front.
- Easier removal: Set the shelf at an angle.
- Reinsert the shelf: Push it in to its stop limit.
- ▶ Pull-out stoppers are pointing down.

▶ Pull-out stoppers are behind the front shelf.

8.3 Split shelf

8.3.1 Using the split shelf

Broken shelves!

- Danger of cuts.
- Only remove storage shelves when there is nothing on them

Extension stops secure the shelves against being accidentally pulled out

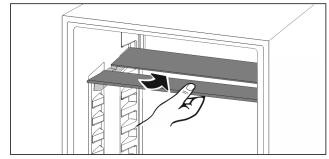


Fig. 93

Push the split shelf underneath as in the illustration

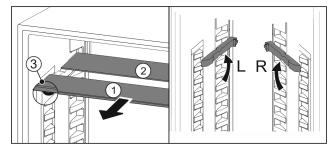


Fig. 94

Adjusting heights:

- ▶ Pull the glass panels out *Fig. 94 (1)* from the front, one at a time.
- Pull the support rails out of their retainers and snap into place at the height you want them.
- Slide in the glass panels one at a time.
- Flat pull-out stoppers at the front, right behind the support rail.
- ▶ Taller pull-out stoppers at the back.

Using both shelves:

- ► Hold the bottom glass panel with one hand and pull it to the front.
- ▶ The glass panel *Fig. 94 (1)* with the trim strip is at the front.
- ▶ The stops *Fig. 94 (3)* point downward.

8.4 VarioSafe

The VarioSafe offers space in the refrigerator compartment for small groceries, packages, tubes and jars, for example.

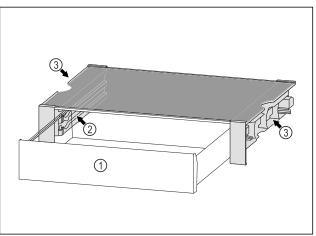


Fig. 95

- (1) VarioSafe drawer
- (3) Recesses on the left and right side panel
- (2) Side panels with ribs for VarioSafe drawer

8.4.1 Inserting the VarioSafe

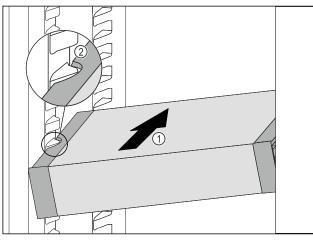


Fig. 96

▶ Insert the VarioSafe into the refrigerator compartment at an angle *Fig. 96 (1)* until the recesses in the side *Fig. 96 (2)* of the VarioSafe are at the level of the support rib in the refrigerator compartment.

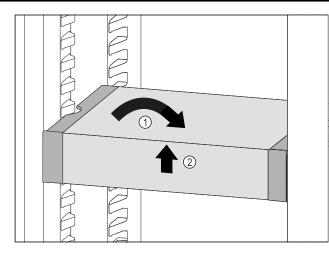


Fig. 97

- Set VarioSafe straight. *Fig. 97 (1)*
- Lift VarioSafe at the front. Fig. 97 (2)

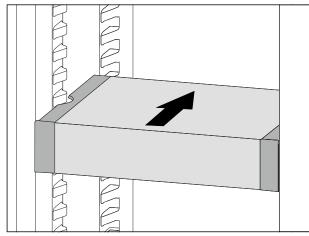


Fig. 98

- ► Lift VarioSafe up toward the front.
- Push VarioSafe in to the rear.
- Lower VarioSafe.
- ► VarioSafe audibly engages.
- ▶ VarioSafe is inserted.

8.4.2 Repositioning the VarioSafe

You can move the VarioSafe as a whole in the refrigerator compartment.

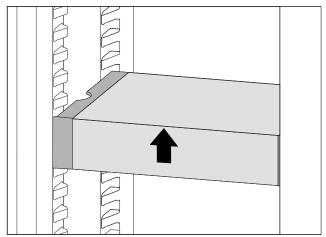


Fig. 99

► Lift VarioSafe at the front.


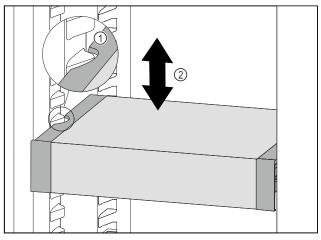


Fig. 100

- Pull VarioSafe forwards until the recesses in the side of the VarioSafe are at the level of the support rib in the refrigerator compartment. *Fig. 100 (1)*
- Move VarioSafe up or down in the refrigerator compartment until the desired height is reached. Fig. 100 (2)



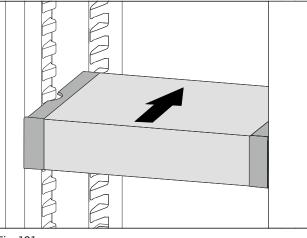

► Lift VarioSafe at the front.

▶ Push VarioSafe in to the rear.

- ➤ VarioSafe audibly engages.
- VarioSafe is offset in height.

8.4.3 Moving the VarioSafe drawer

You can use the VarioSafe drawer at two different heights. If you would like to store taller foodstuffs in the VarioSafe drawer, slide the VarioSafe drawer in on the bottom rib. If you would like to store smaller foodstuffs in the VarioSafe drawer, slide the VarioSafe drawer in on the top rib.

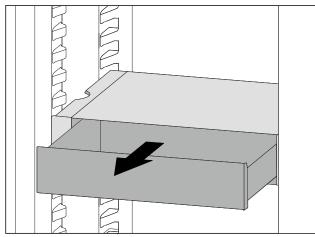


Fig. 102

- ▶ Pull out the VarioSafe drawer as far as it will go.
- ► Lift the VarioSafe drawer up at the front.
- Remove the VarioSafe drawer to the front.

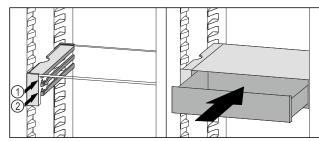


Fig. 103

- ▶ Lift the VarioSafe drawer up at the front.
- ▶ Place the VarioSafe drawer behind the stoppers on desired rib *Fig. 103 (1)* or *Fig. 103 (2)*.
- VarioSafe drawer is offset in height.

8.4.4 Removing the VarioSafe

You can remove the VarioSafe as a whole.

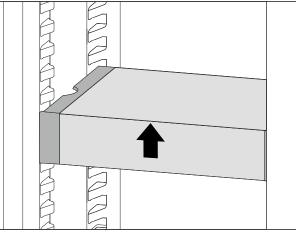


Fig. 104

▶ Lift VarioSafe at the front.

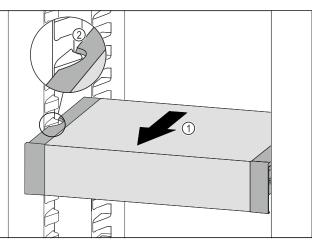


Fig. 105

▶ Pull VarioSafe forward *Fig. 105 (1)* until the recesses in the side of the VarioSafe are at the level of the support rib in the refrigerator compartment. *Fig. 105 (2)*

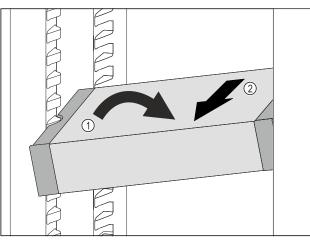


Fig. 106

- Set VarioSafe in refrigerator compartment at an angle. *Fig. 106 (1)*
- Take VarioSafe out to the front. Fig. 106 (2)
- ▶ VarioSafe is removed.

8.4.5 Disassembling the VarioSafe

You can disassemble the VarioSafe into its individual parts if you want to clean the VarioSafe or if you need to install or remove parts.

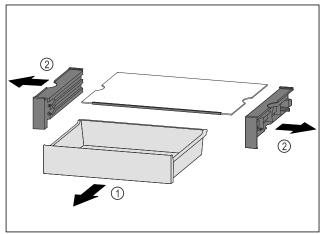


Fig. 107

- Remove VarioSafe as a whole. (see 8.4.4 Removing the VarioSafe)
- ▶ Disassemble VarioSafe according to the illustration.

8.5 InfinitySpring

The built-in water dispenser provides convenient drinking water. The water temperature depends on the temperature in the fridge.

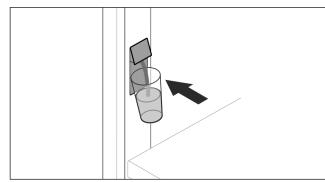


Fig. 108

- Push the glass against the button pushbutton of the dispenser.
- The outlet unit moves out: water pours into the glass.
- Avoid splashes: Remove the glass slowly. If dispensing larger quantities of water:
- If the water flow stops, remove the water tank and push your container against the button push button of the dispenser again.

8.6 Space for baking tray

There is space for a baking tray *Fig. 1 (7)* above the drawers.

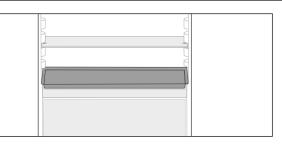


Fig. 109

Make sure that the following requirements are fulfilled

- □ Max. baking tray dimensions are adhered to (see 10.1 Technical specifications).
- Baking tray has cooled to room temperature.
- The bottom door stopper is set at least one position up.

When door 90° is open:

- Slide the baking tray onto the lower side runs.
- -or-
 - If baking tray is uneven:
- Use the supplied support rails.




Fig. 110

- Snap support rails into the lowest runs. When door 90° is open:
- Slide the baking tray in on the support rails.

8.7 Variable bottle shelf

You can use either the glass shelf or the variable bottle shelf on the floor of the fridge section. The glass shelf is inserted upon delivery.

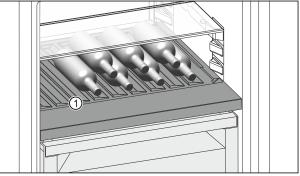


Fig. 111 Example illustration (1) Variable bottle rack

8.7.1 Using the variable bottle shelf

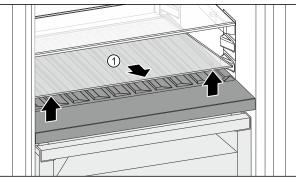


Fig. 112

- ▶ Lift the glass shelf *Fig. 112 (1)* in the front at the recess and pull it out.
- Store the glass shelf *Fig. 112 (1)* somewhere safe outside of the appliance.

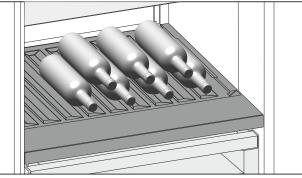


Fig. 113

 Insert the bottles facing backwards towards the rear wall. (see Fig. 113)

Note

If the bottles protrude towards the front over the variable bottle shelf:

Set the lower door rack one position higher.

8.7.2 Using the glass shelf

Make sure that the following requirements are fulfilled:

- □ Bottles are removed.
- $\hfill\square$ The variable bottle shelf has been cleaned.

(see 9.5 Removing / inserting the variable bottle shelf)

(see 9.8.3 Cleaning the equipment)

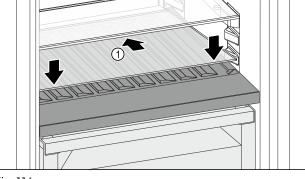


Fig. 114

- ▶ Place the glass shelf *Fig. 114 (1)* at an angle, tilted back and down.
- ► Lower the glass shelf *Fig. 114 (1)* at the front.

8.8 Drawers

You can remove the drawers for cleaning.

The way to remove/insert the drawers varies depending on the pull-out system. Your appliance can contain a variety of pull-out systems.

Note

Insufficient ventilation results in an increase in energy consumption and reduction of the refrigerating performance.

• Never obstruct the vents on the interior rear wall!

8.8.1 Drawer on telescopic rails

The drawer runs on full-extension rails (telescopic rails). There are full-extension telescopic rails and telescopic rails with partial pull-out. Drawers which are full extension can be pulled out fully from the appliance. Drawers with partial pull-out cannot be pulled out fully from the appliance. The system in your appliance depends on the type of appliance.

Full extension*

If you have full-extension rails, there is a clamp located at the back on the left and right of the rail.

Removing drawer




Fig. 115

- Pull out drawer as far as it will go.
- ► Lift left clamp and simultaneously pull drawer forwards on the left. *Fig. 115 (1)*
- Lift right clamp and simultaneously pull drawer forwards on the right. Fig. 115 (2)
- Remove drawer to the front. *Fig. 115 (3)*
- Slide rails in.

Inserting drawer




Fig. 116

- Slide rails in.
- Place drawer on rails.
- ▶ Slide in drawer to the back.
- > Drawer latches in audibly at the back.

Partial pull-out fridge compartment*

Removing drawer

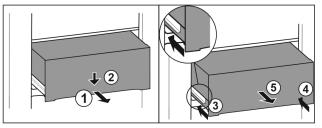


Fig. 117

- Pull out the drawer halfway. Fig. 117 (1)
- Press down the drawer on the front. Fig. 117 (2)
- Push in the left rail approximately 2 cm (13/16 in). Fig. 117 (3)
- Push in the right rail approximately 2 cm (13/16 in). Fig. 117 (4)
- Remove drawer to the front. *Fig. 117 (5)*

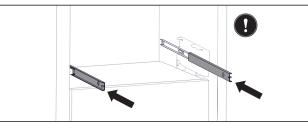


Fig. 118

If the rails are not yet fully pushed in after removing the drawer:

Push the rails in completely.

Inserting drawer




Fig. 119

- Slide rails in.
- Place drawer on rails.
- Slide in drawer to the back.

8.9 Lid for Fruit & Vegetable-safe

The lid ensures constant levels of humidity.

The lid is located directly on the drawer and can be covered by shelves or additional drawers.

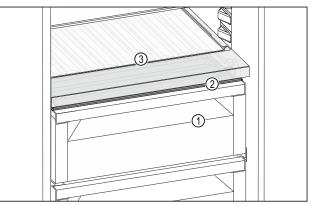


Fig. 120 Example illustration of the lid for Fruit & Vegetablesafe

- (1) Fruit & Vegetable-
- safe (2) Lid for Fruit & Vege-
- table-safe
- (3) Variable bottle rack

8.9.1 Reducing humidity in the drawer

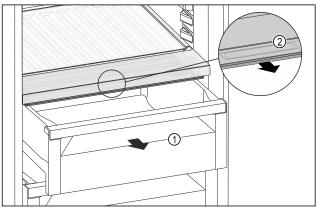


Fig. 121

- ▶ Pull out the drawer *Fig. 121 (1)*.
- ► Grip the handle recess *Fig. 121 (2)* on the lid while pulling the lid forward at the same time.
- ▶ When the drawer is closed, there is a small gap between the lid and the drawer.

8.9.2 Increasing humidity in the drawer

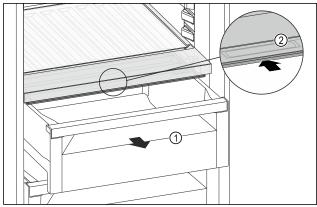


Fig. 122

- ▶ Pull out the drawer *Fig. 122 (1)*.
- ► Grip the handle recess *Fig. 122 (2)* on the lid while pulling the lid backward at the same time.
- ▶ When the drawer is closed, the lid closes tightly with the drawer.

8.9.3 Using Fruit & Vegetable-safe as a Meat & Dairy-safe

You can use the Fruit & Vegetable-safe as a Meat & Dairy-safe. To do so, you must reduce the moisture in the drawer. (see 8.9.1 Reducing humidity in the drawer)

8.10 Butter dish

8.10.1 Opening/closing the butter dish

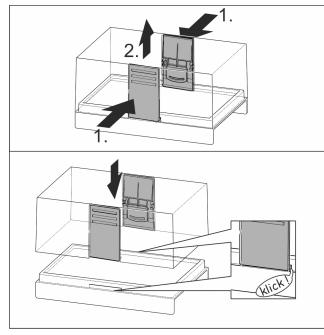


Fig. 123

8.10.2 Dismantling the butter dish

You can disassemble the butter dish for cleaning.

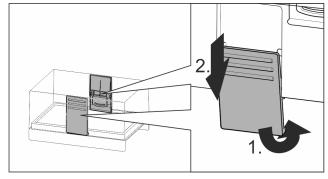


Fig. 124

▶ Disassemble the butter dish.

8.11 Egg rack

You can pull out and turn the egg rack. You can use both sides of the egg rack so you can label specifics like the purchase date.

8.11.1 Using the egg rack


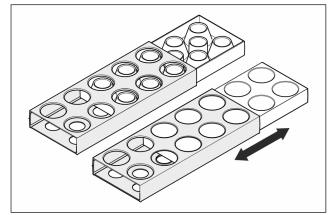


Fig. 125

- ▶ Top section: store hen eggs.
- Bottom section: store quail eggs.

8.12 Bottle rack

8.12.1 Using the bottle rack

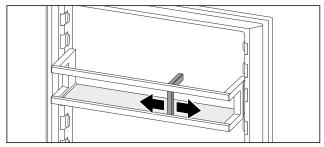




► Slide the bottle rack at the edges.

Stops bottles from tipping over.

8.13 FlexSystem

8.13.1 Using the FlexSystem

The FlexSystem helps you store and arrange food clearly and in the way you want. It lets you clearly divide your food into fruit, vegetables or by use-by dates, for example.

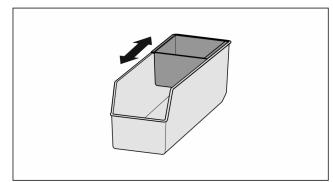



Move the inside tray.

8.13.2 Removing the FlexSystem

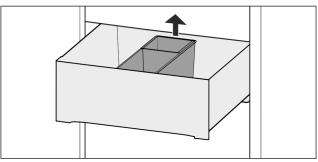


Fig. 128

- ▶ Lift the FlexSystem at the back.
- Pull up and out.

8.13.3 Inserting the FlexSystem

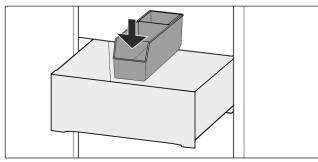


Fig. 129

- ▶ Insert front of the FlexSystem first.
- ► Lower the back part.

8.13.4 Disassembling the FlexSystem

The FlexSystem can be dismantled for cleaning.

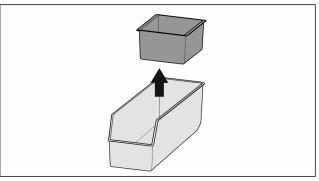


Fig. 130

Dismantling the FlexSystem.

9 Maintenance

9.1 FreshAir carbon filter

The FreshAir carbon filter is located in the compartment above the fan.

It guarantees the best air quality.

- Change the carbon filter every 6 months. When the reminder is set, a message on the display prompts you to change it.
- You can dispose of the carbon filter with the regular household waste.

Note

FreshAir activated charcoal filters can be purchased from the Liebherr Service Center. The address for your respective country can be found on the back of the instructions.

9.1.1 Removing the FreshAir carbon filter

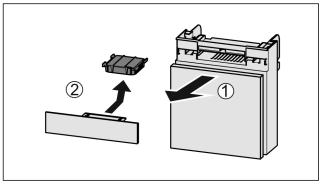


Fig. 131

- Pull out the compartment Fig. 131 (1).
- Remove the carbon filter *Fig. 131 (2)*.

9.1.2 Inserting the FreshAir carbon filter

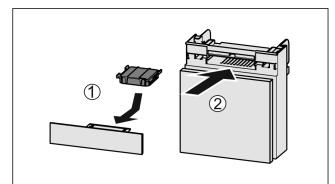


Fig. 132

- ▶ Insert the carbon filter as shown in the diagram *Fig. 132 (1).*
- The carbon filter clicks into place. If the carbon filter is pointing downwards:
- ▶ Push the compartment in *Fig. 132 (2)*.
- > The carbon filter is now ready for use.

9.2 Water tank

The InfinitySpring water tank is located behind the lowest drawer.

9.2.1 Removing the water tank

- ▶ Turn off the water tap.
- Run the InfinitySpring for 30 seconds and collect the remaining water in a glass.
- ▶ Remove the drawer.
- Turn the water tank all the way to the left and pull it out.
- ▶ Water dripping out is collected in the drip tray.
- Drain the water from the drip tray.
- Clean the drip tray with a cloth or in the dishwasher.

9.2.2 Inserting the water tank

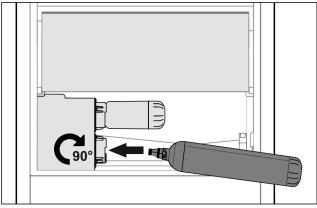


Fig. 133

Remove the drawer.

- ▶ Insert the water tank and turn approx. 90° to the right until it engages.
- Check that the water tank is sealed and no water leaks out.

- ▶ Insert the drawer.
- Turn on the water tap.
- Bleed the water system. (see 4.2.1 Vent the water system)

Instead of the water filter, you can use an additional water tank.

Note

The water tank is available as a spare part.

9.2.3 Removing / inserting the drip tray

You can remove the drip tray for cleaning.

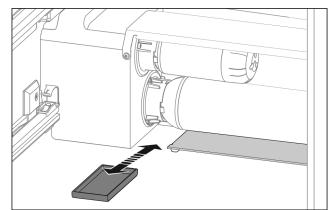


Fig. 134

Pull out the drip tray to the front.

9.3 Water filter

The water filter is located behind the lowest drawer.

It absorbs deposits in the water and reduces the taste of chlorine.

- Replace the water filter at least every 6 months under the specified usage conditions or if the flow rate drops significantly.
- □ The water filter contains carbon and can be disposed of with the regular household waste.

Note

The water filter can be purchased from the Liebherr Service Center. The address for your respective country can be found on the back of the instructions.

9.3.1 Removing the water filter

- ▶ Remove the drawer.
- Turn the water filter all the way counterclockwise and pull it out.
- ▶ Water dripping out is collected in the drip tray.
- Clean the drip tray with a cloth or in the dishwasher.

9.3.2 Installing the water filter

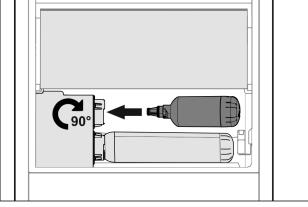


Fig. 135

Make sure that the following conditions are fulfilled

- □ Water pressure is maintained (see Installation Instructions, Water Connection).
- ► Remove the drawer.
- Insert the water filter and turn clockwise approx. 90° until it engages.
- Make sure the filter does not leak and no water is coming out.
- ► Insert the drawer.

Risk of infection due to potential suspended matter in new water filters!

Nausea and vomiting.

After changing the filter: Draw and dispose of 3 l (3 qt) water at the InfinitySpring.

▶ The water filter is now ready for use.

9.4 Disassembling / assembling pullout systems

9.4.1 Notes on disassembly

You can disassemble some of the pull-out systems for cleaning. Your appliance can contain a variety of pull-out systems.

The following pull-out systems can be disassembled or cannot be disassembled:

Pull-out system		can be disassembled / cannot be disassembled
Full extension*		cannot be disassembled*
Partial extension section*	fridge	cannot be disassembled*

9.5 Removing / inserting the variable bottle shelf

You can remove the variable bottle shelf for cleaning.

9.5.1 Removing the variable bottle shelf

Make sure that the following requirements are fulfilled: ■ Bottles are removed.

□ Glass shelf is removed. (see 8.7.1 Using the variable bottle shelf)

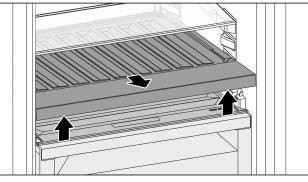


Fig. 136

- Lift the variable bottle shelf from the front and pull it out.
- ▶ The compartment lid is visible.

Note

Liebherr recommends:

Do not store any product on the compartment lid below it.

9.5.2 Inserting the variable bottle shelf

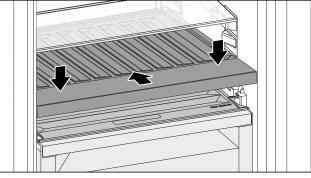


Fig. 137

- Push in the variable bottle shelf as far as it goes and press it down.
- The back plugs on the variable bottle shelf are connected automatically.
- ▶ LED light ups.
- ▶ Insert the glass shelf. (see 8.7.2 Using the glass shelf)

-or-

► Use the variable bottle shelf for bottles.

9.6 Lid for Fruit & Vegetable-safe

You can remove the lid for cleaning.

9.6.1 Removing the lid

Make sure that the following requirements are fulfilled:

- □ The glass plate directly above the variable bottle rack has been removed.
- □ The variable bottle rack has been removed.
- □ The compartment directly below the lid has been removed. (see 8.8 Drawers)

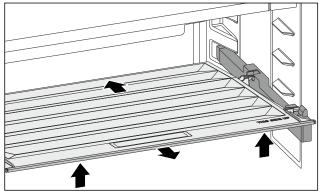


Fig. 138

- ▶ Push the lid backward.
- ► Lift up the lid forward.
- Remove the front lid by lifting it up at an angle.

9.6.2 Inserting the lid

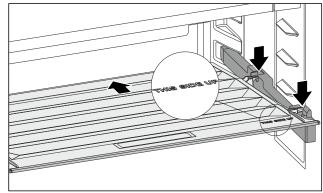


Fig. 139

If the lettering THIS SIDE UP is on top:

- Insert the rear bracket retainers in the corresponding rear openings.
- Push the lid backward.
- Lower the lid at the front and latch the front bracket retainers in the openings.
- Bring the lid to the desired position.

9.7 Defrosting the appliance



Appliance incorrectly defrosted!

Injuries and damage.

- ► Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- ► Do not use any electrical heating or steam cleaning equipment, naked flames or defrosting sprays.
- Do not remove ice with sharp objects.

Defrosting is performed automatically. The water from the thawing process runs out via the drain opening and is evaporated.

Clean the drain hole regularly. (see 9.8 Cleaning the appliance)

9.8 Cleaning the appliance

9.8.1 Preparation



Danger of electric shock.

- Unplug refrigerator or disconnect power.

Danger of fire

- ▶ Do not damage the refrigerant circuit.
- ► Empty appliance.
- Pull out the power plug.
- -or-
- Activate CleaningMode. (see CleaningMode)

9.8.2 Cleaning the interior

NOTICE

Improper cleaning!

Damage to the appliance.

- Only use soft cleaning cloths and ph-neutral allpurpose cleaners.
- Do not use steel wool or sponges that scour or scratch.
- Do not use caustic or abrasive cleaning materials or those containing sand, chloride, or acids.
- Plastic surfaces: clean by hand with a soft clean cloth, lukewarm water and a little detergent.
- Metal surfaces: clean by hand with a soft clean cloth, lukewarm water and a little detergent.
- Drain hole: remove any deposits with a thin item such as a cotton bud.

9.8.3 Cleaning the equipment

NOTICE

Improper cleaning!

Damage to the appliance.

- Only use soft cleaning cloths and ph-neutral allpurpose cleaners.
- Do not use steel wool or sponges that scour or scratch.
- Do not use caustic or abrasive cleaning materials or those containing sand, chloride, or acids.

Clean with a soft, clean cloth, lukewarm water and a little washing up liquid:

- VarioSafe
- Lid for Fruit & Vegetable-safe
- Drawer
- Variable bottle shelf
- FlexSystem

Clean with a damp cloth:

- Retracting rails

Please note: the grease in the tracks is there for lubrication purposes and must not be removed!

Clean in the dishwasher up to 60 °C (140 °F):

- Door racks
- VarioBox
- Bottle rack
- Shelf
- Split shelf
- Holder for the split shelf
- Drip tray
- Egg rack
- Butter dish
- Disassemble the equipment: see the relevant section.
- Clean the equipment.

9.8.4 Cleaning the InfinitySpring

You can clean the InfinitySpring outlet and around it without disconnecting the appliance from the mains.

We recommend cleaning in the following situations:

Initial commissioning

- $\hfill\square$ If out of use for longer than 5 days.
- Press the bottom pushbutton of the dispenser.
- > The outlet unit moves out.
- Clean the water outlet and around it with a soft, damp cloth, lukewarm water and a little washing up liquid.
- Release the bottom pushbutton.
- Draw and dispose of 2 l (2.11 qt) water at the Infinity-Spring.

9.8.5 After cleaning

- ▶ Wipe dry the appliance and items of equipment
- Connect and switch on the appliance. When the temperature is sufficiently cold
- Place the food inside.

Repeat cleaning regularly.

10 Customer support

10.1 Technical specifications

Temperature zone		
Cool: 3 °C (36 °F) to 9 °C (46 °F)		
BioFresh 0 °C (32 °F) to 3 °C (37 °F)		

Max. door capacity		
Appliance heigh (see Installation Guide, Appliance Dimensions)	1	
1022 mn (40 1/4 in)	8 kg (17.64 lb)	
1218 mn (47 15/16 in)	14 kg (30.86 lb) 1	
1395 mn (54 15/16 in)	14 kg (30.86 lb) 1	
1572 mn (61 7/8 in)	18 kg (39.68 lb)	
1770 mn (69 11/16 in)	18 kg (39.68 lb)	
1850 mn (72 13/16 in)	19 kg (41.89 lb)	

Max. size baking tray		
Width 466 mm (18 3/8 in)		
Depth	386 mm (15 3/16 in)	
Height 50 mm (1 15/16 in)		

For appliances with a WiFi connection:

Frequency specification		
Frequency band	2.4 GHz	
Maximum radi- ated power	< 100 mW	
	Integration in the local WiFi network for data communication	

10.2 Operating noises

The appliance makes noises while in operation.

- At less cooling output the appliance saves energy but takes longer to cool items. The volume is **lower**.
- At **a higher cooling output** the food cools more quickly. The volume is **higher**.

Examples:

- Activated functions (see 7.2 Appliance functions)
- Running fan
- Freshly sorted food
- High ambient temperature
- Door opened for long periods

Noise	Possible cause	Type of noise	
Bubbling and splashing	Coolant is flowing into the cooling circuit.	Normal noise	
Spitting and hissing	Coolant is spraying into the cooling circuit.	Normal noise	
Humming	The appliance cools. The volume depends on the cooling output.	Normal noise	
Sipping noises	The self-closing door is being opened and closed.	Normal noise	
Whirring and murmuring	The fan is running.	Normal oper- ating noise	

Noise		Possible cause		Type of noise	
Clicking		Components are being switched on and off.			
Rattling or humming		Valves are active.		Normal switching noise	
Noise	Pos cau	sible se	Type noise	of	How to resolve
Vibration	Unsuitable installation		Error noi	se	Check installation. Set up the appliance.
Clattering	Obj	ipment, ects de the	Error noi	se	Secure equipment parts.
	app	liance			Leave a gap between items.

10.3 Technical faults

Your appliance is designed and manufactured for reliable operation and a long service life. If a malfunction nonetheless occurs during operation, please check whether the malfunction is due to an operating error. In this case, you will have to be charged for the costs incurred, even during the warranty period.

You may be able to rectify the following faults yourself.

10.3.1 Appliance function

Defect	Cause	Remedy
The appliance	The appliance is not switched on.	 Switch on the appliance.
does not work.	The power plug is not properly inserted in the wall socket.	 Check the power plug.
	The powerfuse in the wall socket is not OK.	Check the fuse.
	Power failure.	► Keep the appliance closed.
	The IEC socket is not correctly plugged into the appliance.	Check the IEC socket.
The temperature is not cold	This means that the door of the appliance is not closed properly	 Close the appliance door
enough	Insufficient ventilation	Clear and clean the ventilation grille.
	The ambient temperature is too high	Problem solution: (see 1.4 Range of appliance use)

Defect	Cause	Remedy
	The appliance was opened too frequently or for too long	 Wait to see if the required temperature corrects itself. If not, contact Customer Service. (see 10.4 Customer Service)
	The temperature is incorrectly set	Set to a colder temperature and check after 24 hours.
	The appliance is too near to a heat source (stove, heater etc).	 Change location of appliance or the heat source.
	The appliance was not properly installed in the recess.	Make sure the appliance was installed correctly and the door closes properly.
The door seal is defective or should be replaced for other reasons.	The door seal is interchangeable. You can replace it without the use of any special tools.	 Contact Customer Service. (see 10.4 Customer Service)
The appliance is iced up or condensation is building.	The door seal may have slipped out of its groove.	Check the door seal is well placed in the groove.

10.3.2 Equipment

Defect	Cause	Remedy
The Infinity- Spring is not	There is air in the system.	 Vent the water system. (see 4.2 Putting Infinity- Spring into operation)
working.	The water connection is not open	 Open the water connection
The water flow at the Infinity- Spring is irreg- ular.	The aerator is not clean.	 Replace aerator. Contact Customer Service. (see 10.4 Customer Service)
The interior light	The appliance is not switched on.	 Switch on the appliance.
does not turn on.	The door was open for more than 15 minutes.	 If the door is open, the interior lighting switches off automatically after about 15 minutes.
	The LED interior light is faulty or the lid is damaged.	 Contact Customer Service. (see 10.4 Customer Service)

10.4 Customer Service

First check whether you can rectify the fault yourself (see 10 Customer support) . If you cannot rectify the problem, contact Customer Service.

You can find the address in the enclosed brochure "Liebherr-Service" or at home.liebherr.com/service.



Unprofessional repair! Injuries.

- ► A damaged power cable may only be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person.
- For appliances with plug and play connection cables, the change can be made by the customer.

10.4.1 Contacting Customer Service

Make sure that the following appliance information is available:

- □ Appliance name (model and index)
- Service no. (service)
- Serial no. (S no.)
- Call up the appliance information via the display. (see Appliance information)

-or-

- Refer to the type plate for appliance information. (see 10.5 Rating plate)
- ► Take note of the appliance information.
- Notify customer service: Report errors and the appliance information.
- ▶ This will help us give you fast and accurate support.
- ► Follow further instructions from Customer Service.

10.5 Rating plate

The nameplate is located behind the drawers on the inside of the appliance.

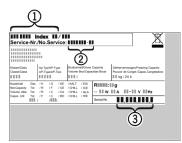


Fig. 140

- (1) Appliance name
- (2) Service no.
- Information from the nameplate.

11 Decommissioning

- Empty appliance.
- Switch off appliance. (see Switching appliance off and on)

(3) Serial no.

- Pull the power plug from the outlet.
- ▶ If necessary, remove the IEC socket: Pull the IEC socket out of the appliance plug while turning it to the left and right at the same time.
- Clean appliance. (see 9.8 Cleaning the appliance)
- Leave the door open to prevent unpleasant odors.

Lamps

12 Disposal

12.1 Preparing the appliance for disposal

Risk of child entrapment! Before you throw away your old refrigerator or freezer:

- Take off the doors.
- Leave the shelves in place so that children may not easily climb inside.



Liebherr uses batteries in some of its appliances. You should remove these before disposal of the old appliance for environmental reasons. If your appliance contains batteries, a corresponding notice is attached to the appliance.

- Lamps If you can remove the lamps yourself without destroying them, also remove these before disposal.
- ► Take the appliance out of operation.

LI-lon

▶ If possible: Remove lamps without destroying them.

12.2 Disposing of the appliance in an environmentally friendly manner



The appliance still contains valuable materials and must be collected separately from unsorted municipal waste so it can be recycled.

Dispose of batteries separately from the old appliance. Certain batteries should NOT go in household garbage or recycling bins. Waste batteries can always be recycled or taken to household hazardous waste collection points. To prevent fires from lithium-ion batteries, tape battery terminals and/or place batteries in separate plastic bags and never put these batteries in household garbage or recycling bins.

Dispose of removed lamps via the respective collection systems.

Check the Responsible Appli- ance Disposal (RAD) program to find a RAD partner near you.
Follow your local guidance about recycling and disposal capabilities near you.



Leaking refrigerant and oil!

Fire. The refrigerant contained within the appliance is environmentally friendly, but flammable. The oil contained within the appliance is flammable. Escaping refrigerant and oil can ignite if they are of high enough concentration and are exposed to an external heat source.

► Do not damage the pipelines of the coolant circuit and the compressor.

• Observe the notes on appliance transport.

- ▶ Transport the appliance away without damaging it.
- Dispose of batteries, lamps, and the appliance according to the above specifications.



home.liebherr.com/fridge-manuals

EN Built-in refrigerator with BioFresh

Issue date: 20250505

Part number index: 7088423-00

For Service in the U.S.: Liebherr Service Center Toll Free: 1-866-LIEBHER or 1-866-543-2437 Service-appliances.us@liebherr.com PlusOne Solutions, Inc. 3501 Quadrangle Blvd, Suite 120 Orlando, FL 32817

For Service in Canada: Liebherr Service Center Toll Free: 1-888-LIEBHER or 1-888-543-2437 www.euro-parts.ca EURO-PARTS CANADA 39822 Belgrave Road, Belgrave, Ontario, NOG 1E0 Phone: (519) 357-3320 | Fax: (519) 357-1326