




Installation Guide

Quality, Design and Innovation

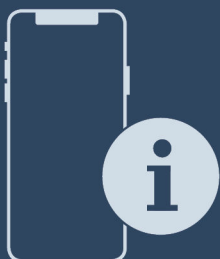

home.liebherr.com/fridge-manuals



LIEBHERR



General safety instructions

Contents

1	General safety instructions.....	2
2	Installation requirements.....	3
2.1	Installation site.....	3
2.2	Position in space.....	3
3	Integration into a kitchen unit.....	3
4	Installation dimensions.....	4
5	Ventilation requirements.....	4
6	Connection dimensions for the power supply.....	4
7	Water connection*.....	4
7.1	Dimensions for the water connection.....	5
7.2	Water pressure.....	5
8	Transporting the appliance.....	5
8.1	Transporting the appliance for initial use.....	5
8.2	Transporting the appliance after initial use.....	5
9	Unpacking the appliance.....	5
10	Mounting wall spacers*.....	5
11	Setting up the appliance.....	6
12	Setting up the appliance so that it is level.....	6
13	After setting up.....	6
14	Installing multiple appliances.....	6
15	Integrating the appliance into a kitchen unit.....	7
15.1	Niche dimensions for appliances with recessed handles*.....	7
15.2	Niche dimensions for appliances with lever handle*.....	8
16	Disposing of packaging.....	8
17	Door hinge change.....	8
17.1	Removing the soft stop mechanism.....	8
17.2	Empty door racks.....	9
17.3	Detaching the door.....	10
17.4	Relocating the upper bearing components.....	10
17.5	Moving the lower bearing parts to the other side..	11
17.6	Moving the handles to the other side*.....	12
17.7	Fitting the door.....	12
17.8	Aligning the door.....	13
17.9	Appliances with closing damper: Fitting the closing damper.....	13
18	Connecting the appliance to the water supply*..	13
18.1	Connecting the hose.....	14
18.2	Checking the water system.....	14
19	Water tank*.....	14
19.1	Inserting the water tank.....	14
20	Water filter*.....	15
20.1	Inserting the water filter.....	15
21	Connecting the appliance to the power supply....	15

The manufacturer is continually working on the further development of all types and models. Please be aware that we reserve the right to make changes to the shape, equipment and technology.

Symbol	Explanation
	Read instructions Please read the information in these instructions carefully to understand all of the benefits of your new appliance.

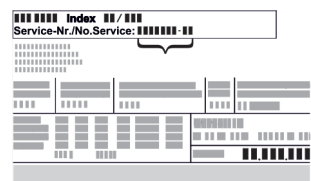Symbol	Explanation
	Additional information on the Internet The digital manual with additional information and in other languages can be found via the QR code on the front of the manual or by entering the service number at home.liebherr.com/fridge-manuals . The service number can be found on the serial tag:  <i>Fig. Example illustration</i>
	Check appliance Check all parts for transport damage. If you have any complaints, please contact your agent or customer service.
	Differences These instructions apply to a range of models, so differences are possible. Sections that apply to certain models only are marked with an asterisk (*).
	Instructions and results Instructions are marked with a ►. Results are marked with a ▷.
	Videos Videos about the appliances are available on the YouTube channels of Liebherr-Hausgeräte.


Open source licences:

The appliance contains software components that use open source licences. Information on the open source licences used can be found here: home.liebherr.com/open-source-licences

1 General safety instructions

- Please keep this assembly manual in a safe place so you can refer back to it at any time.
- If you pass the appliance on, please hand this assembly manual to the next user.
- Read this assembly manual carefully before installation and use to ensure safe and correct use of the appliance. Follow the instructions, safety instructions and warning messages included at all times. They are important for ensuring you can operate and install the appliance safely and without any problems.
- First read the general safety instructions in the "General safety instructions" section of the **operating instructions**, which accompany these installation instructions, and follow them. If you cannot find the **operating instructions**, you can download the **operating instructions** from the internet by entering the service number at home.liebherr.com/fridge-manuals.

The service number can be found on the serial tag:

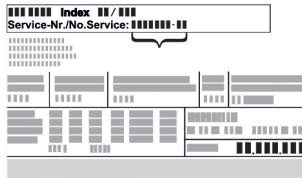

- Observe the warning messages and other detailed information in the other sections when installing the appliance:

	DANGER	identifies a situation involving direct danger which, if not obviated, may result in death or severe bodily injury.
	WARNING	identifies a dangerous situation which, if not obviated, may result in death or severe bodily injury.
	CAUTION	identifies a dangerous situation which, if not obviated, may result in minor or medium bodily injury.
	NOTICE	identifies a dangerous situation which, if not obviated, may result in damage to property.
	Note	identifies useful instructions and tips.

2 Installation requirements

The installation conditions are crucial to ensure that you can operate your appliance safely, efficiently and without problems.

- Observe all safety instructions.
- Consider the location and position in the room.



WARNING

Danger of fire due to incorrect positioning!

If the mains cable or plug touches the back of the appliance, the vibration can damage the mains cable or the plug resulting in a short circuit.

- Make sure the mains cable is not trapped under the appliance when you position the appliance.
- Stand the appliance so that it is not touched by connectors or main cables.
- Do not connect any appliances to sockets in the area of the back of the appliance.
- Do **not** place and operate multi-sockets/power distributors and other electronic devices (such as halogen transformers) at the back of the appliances.



WARNING

Fire hazard due to dampness!

If live parts or the mains lead become damp this may cause short circuits.

- The appliance is designed for use in enclosed areas. Do not operate the appliance outdoors or in areas where it is exposed to splash water or damp conditions.



WARNING

Leaking coolant and oil!

Fire. The coolant contained in the appliance is eco-friendly, but also flammable. The oil contained in the appliance is flammable. Escaping coolant and oil can ignite if the concentration is high enough and in contact with an external heat source.

- Do not damage the pipelines of the coolant circuit and the compressor.

2.1 Installation site

- Only set up and use the appliance in enclosed spaces.
- A dry and well-ventilated room is an optimum installation location.
- If the appliance is installed in a very damp environment, condensation may form on the appliance exterior. Always make sure there is good ventilation and aeration at the installation site.
- The more refrigerant there is in the appliance, the larger than room must be in which it is located. In rooms that are too small, a leak can produce a flammable gas/air mixture. For every 8 g of refrigerant, the installation room must be at least 1 m³ in size. Information on the refrigerant contained is given on the type plate inside the appliance.
- The floor on which the appliance stands must be horizontal and level.

2.2 Position in space

- Do not place the appliance in direct sunlight or near radiators or similar sources of heat.
- You can place the appliance directly next to an oven.
- If the appliance is placed directly next to an oven, the energy consumption may increase slightly. This is dependent on the service life and usage intensity of the oven.
- Always position the appliance with the rear directly against the wall, or with wall spacer brackets attached (see below) then with these directly against the wall.*
- Always position the appliance with the rear directly on the wall.*
- Use in hazardous areas is not permitted.

3 Integration into a kitchen unit

- You can convert the appliance with kitchen cabinets.

Installation dimensions

4 Installation dimensions

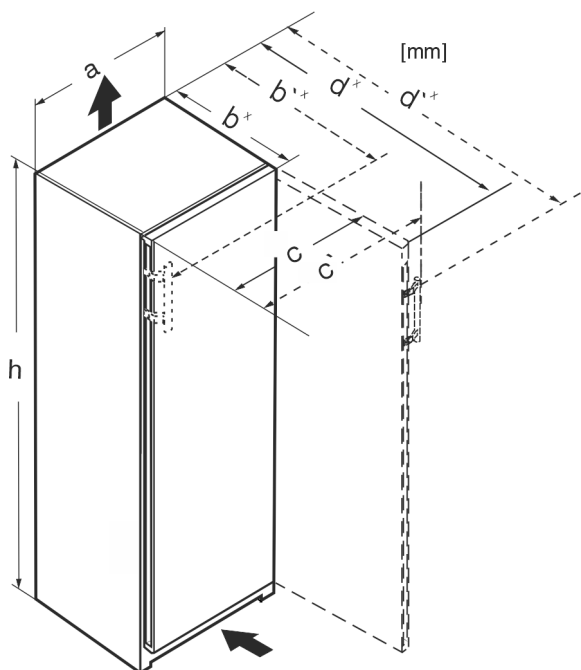


Fig. 1

	h	a	b	b'	c	c'	d	d'
RB.. 4250	1255	597	675 ^x	719 ^x	609	654	1215 ^x	1222 ^x
R.. 5250	1855	597	675 ^x	719 ^x	609	654	1215 ^x	1222 ^x
SR(B).. 525.. (i)	1855	597	675 ^x	719 ^x	609	654	1215 ^x	1222 ^x
RB.. 528..(i)	1855	597	675 ^x	—	609	—	1217 ^x	—
SRB.. 528..(i)	1855	597	675 ^x	—	609	—	1217 ^x	—
SRB.. 529i	1855	597	675 ^x	719 ^x	609	654	1215 ^x	1222 ^x
SRB.. 526..(i)	1855	597	675 ^x	719 ^x	609	654	1215 ^x	1222 ^x

^x For appliances with supplied wall spacers, the dimensions must be increased by 15 mm (see 10 Mounting wall spacers*).

5 Ventilation requirements

NOTICE

Danger of overheating due to insufficient air ventilation! The compressor may be damaged if there is insufficient air ventilation.

- Take care to ensure adequate air ventilation.
- Observe the ventilation requirements.

If the appliance is integrated into a kitchen unit, the following ventilation requirements must be observed:

- As a general rule: the larger the ventilation cross section, the more energy the appliance will be able to save.

Note

If the spacing between the rear of the appliance and the wall is less than 51 mm, energy consumption may increase.*

6 Connection dimensions for the power supply

The connection to the power supply is on the rear of the appliance. To connect your appliance safely, ensure that the following requirements are met:

- ❑ Dimensions for the connection to the power supply are known and are adhered to. See table below.
- ❑ Connection to the power supply according to the instructions. (see 21 Connecting the appliance to the power supply)

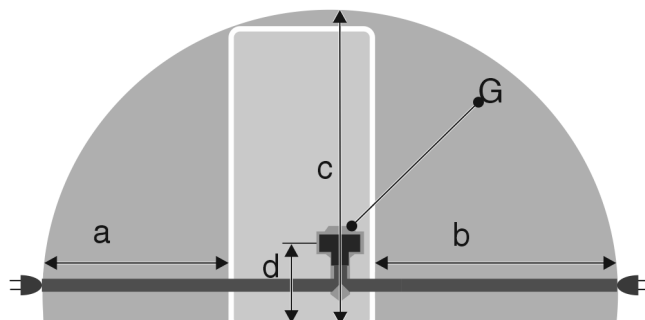


Fig. 2 Refrigerators

- (a) Maximum available length of the mains connection cable
- (b) Maximum available length of the mains connection cable
- (c) Maximum available vertical length of the mains connection cable
- (d) Gap between appliance plug and floor
- (G) Appliance plug

For 600 mm wide appliances:

a	~ 1350 mm
b	~ 1800 mm
c	~ 2050 mm
d	~ 150 mm

7 Water connection*

If your appliance has a fixed water connection, a hose is supplied with it.

Note

You can purchase a hose of a different length as an accessory.

Overview of dimensions for the water connection:	(see 7.1 Dimensions for the water connection)
Requirements for the water pressure:	(see 7.2 Water pressure)
Make the water connection:	(see 18 Connecting the appliance to the water supply*)

7.1 Dimensions for the water connection

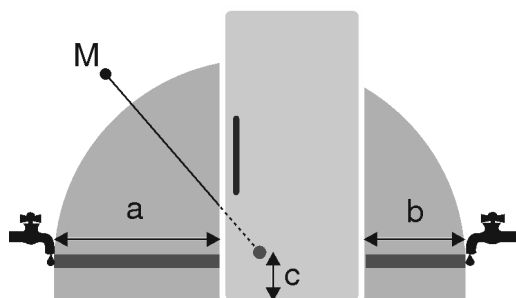


Fig. 3

- (a) Maximum available hose length
- (b) Maximum available hose length
- (c) Distance of solenoid valve to floor
- (M) Solenoid valve

For 600 mm wide appliances:

a	b	c
~ 1650 mm	~ 1500 mm	~ 150 mm

7.2 Water pressure

The water connection line and solenoid valve of the appliance are suitable for a water pressure of up to 1 MPa (10 bar).

To ensure that the appliance functions correctly (flow rate, ice cube size, noise level), maintain the following water pressure:

Water pressure:	
bar	MPa
1.5 to 6.2	0.15 to 0.62

Water pressure when using the water filter:*	
bar*	MPa*
2.8 to 6.2	0.28 to 0.62

If the pressure is higher than 6.2 bar:

- Fit a pressure reducer.
- Make the water connection. (see 18 Connecting the appliance to the water supply*)

8 Transporting the appliance

8.1 Transporting the appliance for initial use

Ensure that the following requirements are met:

- ☐ The appliance is packaged.
- ☐ The appliance is upright.

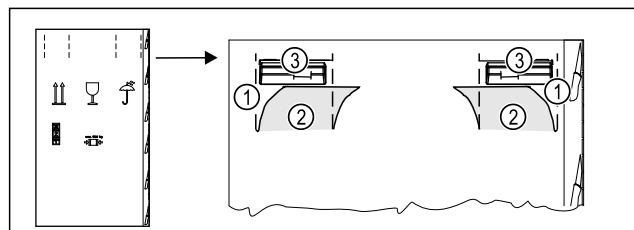


Fig. 4

- Press the packaging cardboard into the perforation Fig. 4 (1) at the top.

- Pull out any tabs Fig. 4 (2) that have been pushed in.
- Carrying handle Fig. 4 (3) visible on the right and left.
- Hold the appliance by the carrying handles Fig. 4 (3).
- Transport the appliance with the help of two people.
- Unpacking the appliance. (see 9 Unpacking the appliance)

8.2 Transporting the appliance after initial use

Observe the following instructions if you wish to transport or move the appliance again after initial use.

Ensure that the following requirements are met:

- ☐ The appliance is emptied.
- ☐ The appliance is upright.
- ☐ Appliance with door(s): Door is secured against accidental opening.
- ☐ Appliance with telescopic unit: The telescopic unit is secured against accidental opening.
- ☐ Appliance with adjustable feet: Adjustable feet are screwed in.
- Hold the appliance by the carrying handles.
- Transport the appliance with the help of two people.

After transport:

- Unscrew the adjustable feet on the appliance.
- Align the appliance. (see 12 Setting up the appliance so that it is level)

9 Unpacking the appliance


Before you connect the appliance, report any damage immediately to the delivery company.

- Check the appliance and the packaging for damage during transport. Contact the supplier immediately if you suspect any level of damage.
- Remove all materials from the back or the side walls of the appliance that may prevent proper installation or ventilation.
- Remove all protective films from the appliance. Do not use sharp or pointed objects for this.

10 Mounting wall spacers*

With wall spacers, your device achieves the declared energy consumption and no condensation forms in high ambient humidity. The device is fully functional without the spacer brackets, but its energy consumption will be slightly higher.

If you insert the wall spacers, then the device depth increases by approx. 15 mm.*

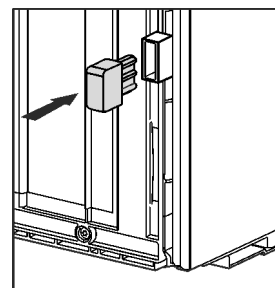

- Appliance with enclosed wall spacers: Insert the wall spacers on the rear of the appliance at the bottom left and right.

Setting up the appliance

11 Setting up the appliance



CAUTION

Risk of injury due to heavy appliance!

- ▶ Have two people transport the appliance to its installation site.



WARNING

Risk of fire due to short circuit!

- ▶ When you set the appliance up: do not kink, jam or damage the mains cable.
- ▶ The appliance must not be operated with a defective mains cable.



WARNING

Fire hazard and danger of damage!

- ▶ Do not place appliances emitting heat e.g. microwaves, toasters etc. on the appliance!

Ensure that the following conditions are met:

- ☐ Only move the device when it is not loaded.
- ☐ Only install the appliance with help.
- ▶ Remove the mains cable from the package.
- ▶ Plug the mains cable's IEC socket completely into the appliance plug on the back of the appliance. Ensure that the IEC socket is tight.
- ▶ Use a cord to lay the mains plug to a freely accessible socket if required.

12 Setting up the appliance so that it is level

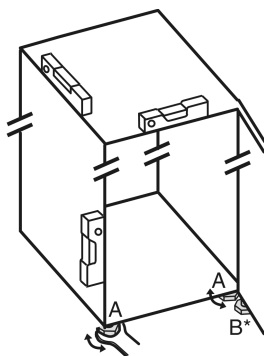


Fig. 5

- ▶ Unscrew the adjustable feet Fig. 5 (A) using the enclosed open-end spanner and a spirit level until the appliance is firmly aligned and level.



CAUTION

Risk of injury and damage due to the appliance tipping over! If the additional adjustable foot on the lower swap bearing block does not rest properly on the floor, the appliance may tip over. This can lead to property damage and injuries.

- ▶ Unscrew the additional adjustable foot on the swap bearing block as instructed.
- ▶ Unscrew the adjustable foot Fig. 5 (B) on the swap bearing block with the enclosed open-end spanner until it rests on the floor.
- ▶ Turn the adjustable foot Fig. 5 (B) 90° further.
- ▶ The appliance is aligned.

13 After setting up

- ▶ Remove all transport safety components.
- ▶ Take off the protective film from the exterior of the appliance.
- ▶ Take off the protective film from the trim panels.*
- ▶ Take off the protective film from the stainless steel rear panel.*
- ▶ Clean the appliance. (see operating instructions)
- ▶ Note the type (model, number), appliance designation, appliance/serial number, purchase date and dealer's address.

14 Installing multiple appliances



The appliances have been developed for different installation methods. If you wish to install several appliances next to each other or on top of each other, ensure that the following requirements are met:

- ☐ Only install appliances next to or on top of each other if they have been developed for this.
- ☐ Observe notices and the following table.

NOTICE

Risk of damage due to condensate!

- ▶ Do not place the appliance directly next to another cooling/refrigeration unit.

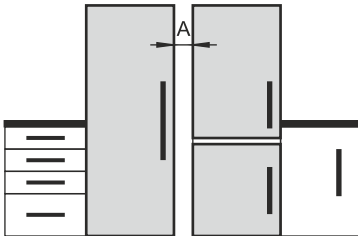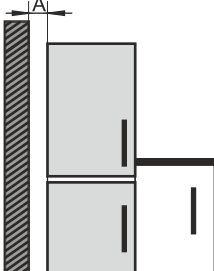Model	Installation method
All models	Standalone
Models with a model designation starting with S...	Side-by-Side (SBS)
Models without side wall heating	 Next to each other: Install with gap A of 70 mm between the appliances. If you do not comply with this gap, condensation will form on the side walls between the appliances.  On an exterior wall: Install with gap A as with installation next to each other. If you do not comply with this gap, condensation may form on the appliance's side wall.

Models and their installation method

Assemble the appliances according to the separate installation instructions.

15 Integrating the appliance into a kitchen unit

The appliance can be integrated into a kitchen unit. Please observe the following installation conditions:

- If you fit a stacking cabinet above the appliance, you must allow for a ventilation cross-section with the appropriate depth at the rear of the stacking cabinet.
- If you place the appliance with the hinges next to a wall, you must take the distance to the side of the appliance into account.
- To ensure that the door can be opened fully, the appliance must protrude beyond the front thickness. Depending on the niche depth, the appliance may protrude further.

Note

A set for limiting the door opening angle to 90° can be obtained from customer service for appliances with soft closing.



WARNING

Risk of fire due to short circuit!

- When you set the appliance up: do not kink, jam or damage the mains cable.
- The appliance must not be operated with a defective mains cable.

Ensure that the following requirements are met:

- ☐ The socket is easily accessible and is not behind the appliance.
- ☐ Ventilation requirements are met. (see 5 Ventilation requirements).
- ☐ Connection dimensions are taken into account. (see 21 Connecting the appliance to the power supply)
- ☐ Wall spacers are fitted.*

15.1 Niche dimensions for appliances with recessed handles*

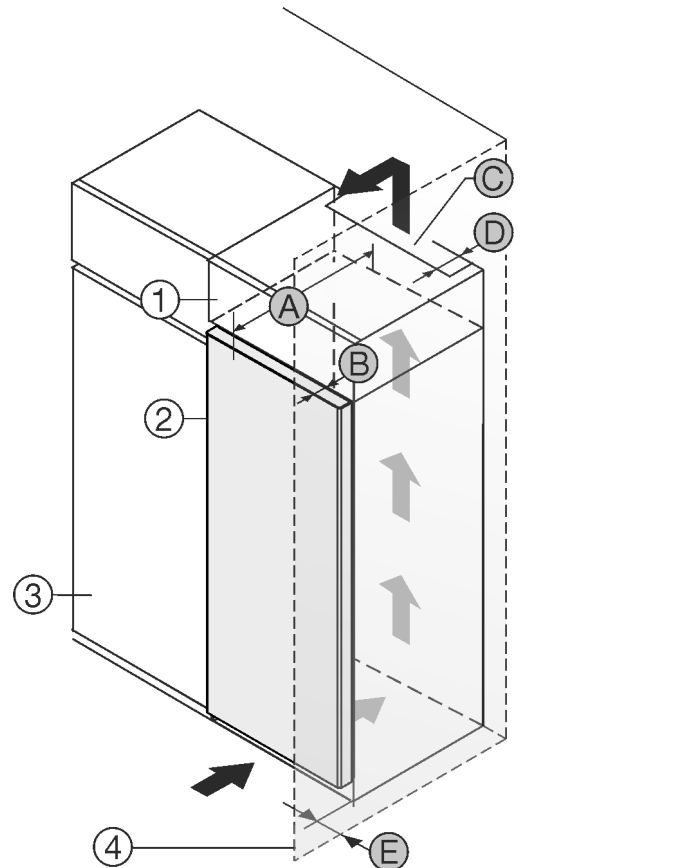


Fig. 6

- (1) Top Unit
- (2) Appliance
- (3) Kitchen cupboard

- (4) Wall

- (A) Appliance depth

- (B) Door depth
- (C) Ventilation cross-section
- (D) Distance from rear of the appliance
- (E) Distance to the side of the appliance

Appliances with a recessed grip:	
A	675 mm ^x
B	75 mm
C	min. 300 cm ²
D	min. 50 mm
E	min. 13 mm

Appliances with recessed handle and glass front / stone front:	
A	682 mm ^x
B	82 mm
C	min. 300 cm ²
D	min. 50 mm
E	min. 20 mm

^x On devices with wall spacer brackets, this dimension increases by 15 mm.*

Disposing of packaging

15.2 Niche dimensions for appliances with lever handle*

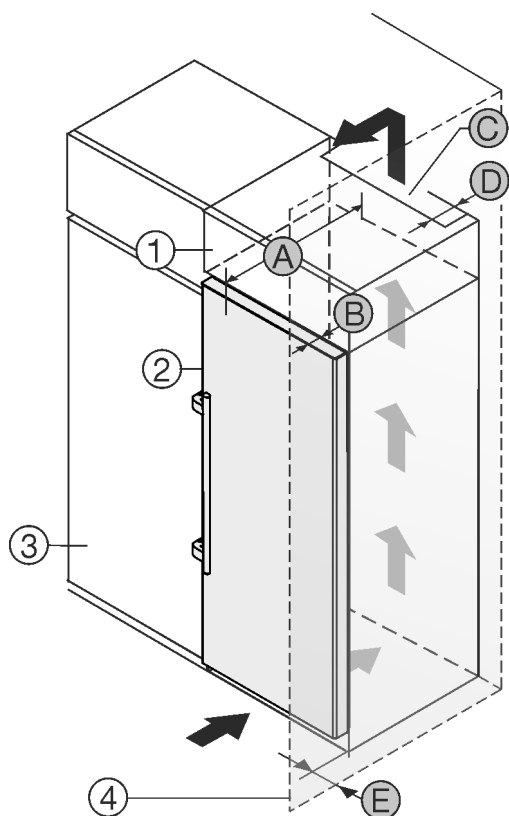


Fig. 7

- (1) Top Unit
(2) Appliance
(3) Kitchen cupboard
(4) Wall
(A) Appliance depth
(B) Door depth
(C) Ventilation cross-section
(D) Distance from rear of the appliance
(E) Distance to the side of the appliance

Dimensions with lever handle:	
A	675 mm ^x
B	75 mm
C	min. 300 cm ²
D	min. 50 mm
E	min. 57 mm

^x On devices with wall spacer brackets, this dimension increases by 15 mm.*

16 Disposing of packaging



WARNING

Danger of suffocation due to packing material and plastic film!

► Do not allow children to play with packing material.

The packaging is made of recyclable materials:

- corrugated board/cardboard
- expanded polystyrene parts
- polythene bags and sheets
- polypropylene straps
- nailed wooden frame with polyethylene panel*

► Take the packaging material to an official collecting point.

17 Door hinge change

Tools

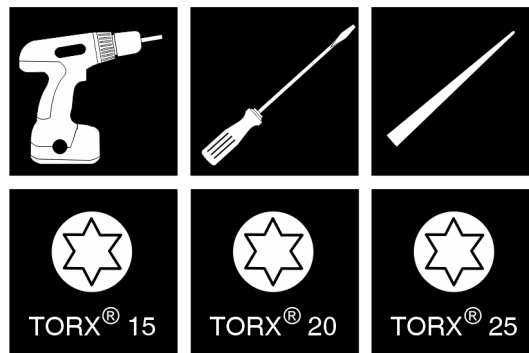


Fig. 8

NOTICE

Risk of damage due to door collision!

Damage to the appliances with Side-by-Side positioning. If you set up two appliances next to each other in a specific Side-by-Side arrangement, the door hinge of both appliances is preset at the factory.

► Side-by-Side positioning: Do not change the door hinge.

These sections apply for appliances **with a soft stop mechanism**:

- ☐ For appliances **with** a soft stop mechanism
- ☐ For all appliances

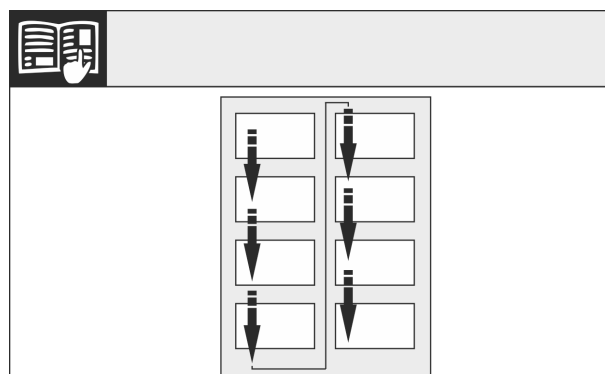


Fig. 9

Remember the reading direction.

17.1 Removing the soft stop mechanism

For appliances with a soft stop mechanism:

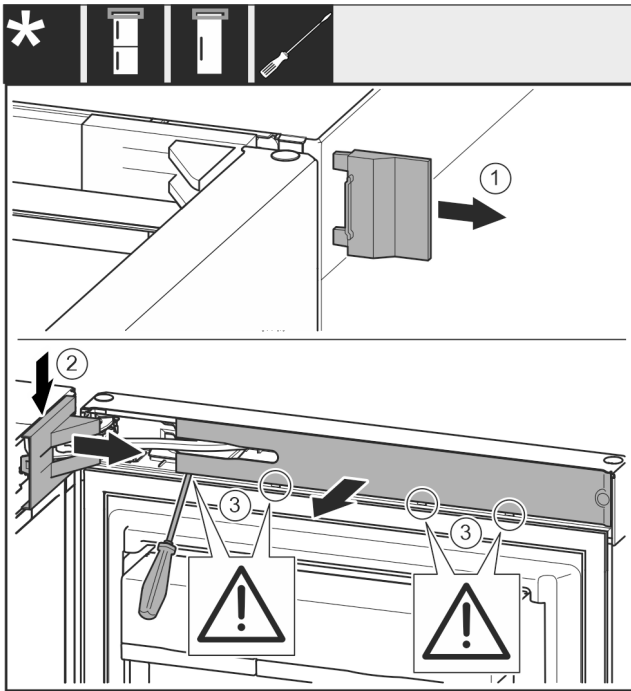


Fig. 10

- Open the door.

NOTICE

Risk of damage from screwdrivers!

If you damage the door seal, the door will not close properly resulting in inadequate cooling.

- Use a screwdriver carefully as an aid.
- Do not damage the door seal with the screwdriver.

- Remove cover Fig. 10 (1).
- Disengage and loosen the swap bearing block cover Fig. 10 (2).
- Remove the swap bearing block cover Fig. 10 (2).
- Use a slotted screwdriver to unlatch the trim Fig. 10 (3) and swing it to the side.

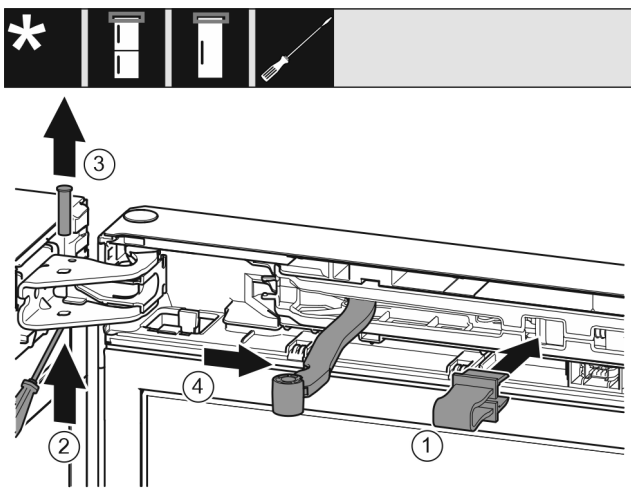


Fig. 11



CAUTION

Crushing hazard by joint folding up!

- Engage safety device.

- Latch safeguard Fig. 11 (1) into opening.
- Slide out the bolt Fig. 11 (2).
- Remove the bolt Fig. 11 (3) upwards.
- Turn the joint Fig. 11 (4) towards the door.

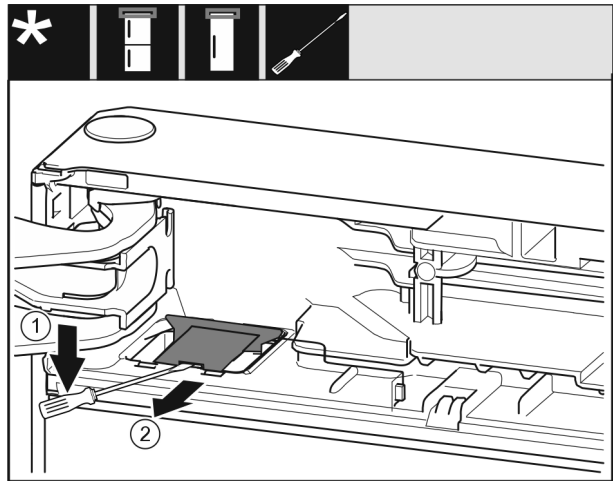


Fig. 12

- Use a flat-blade screwdriver to disengage the cover Fig. 12 (1).
- Remove the cover Fig. 12 (2).

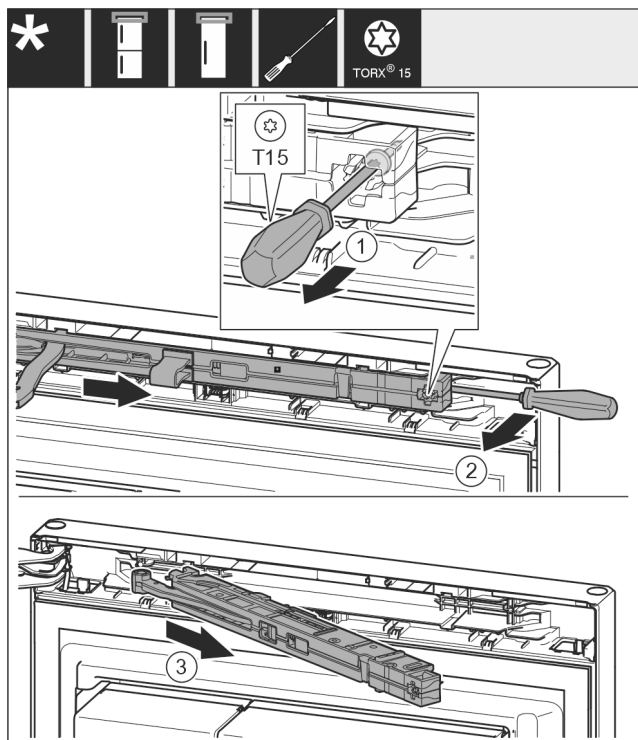


Fig. 13

- Use screwdriver to loosen the screw Fig. 13 (1) on the closing damper unit by 14 mm.
- Lever the closing damper unit Fig. 13 (2) forwards on the handle side using a screwdriver.
- Pull out the closing damper unit Fig. 13 (3).

17.2 Empty door racks

- Remove food from the door racks.
- Food does not fall out of the door when you remove the door.

Door hinge change

17.3 Detaching the door

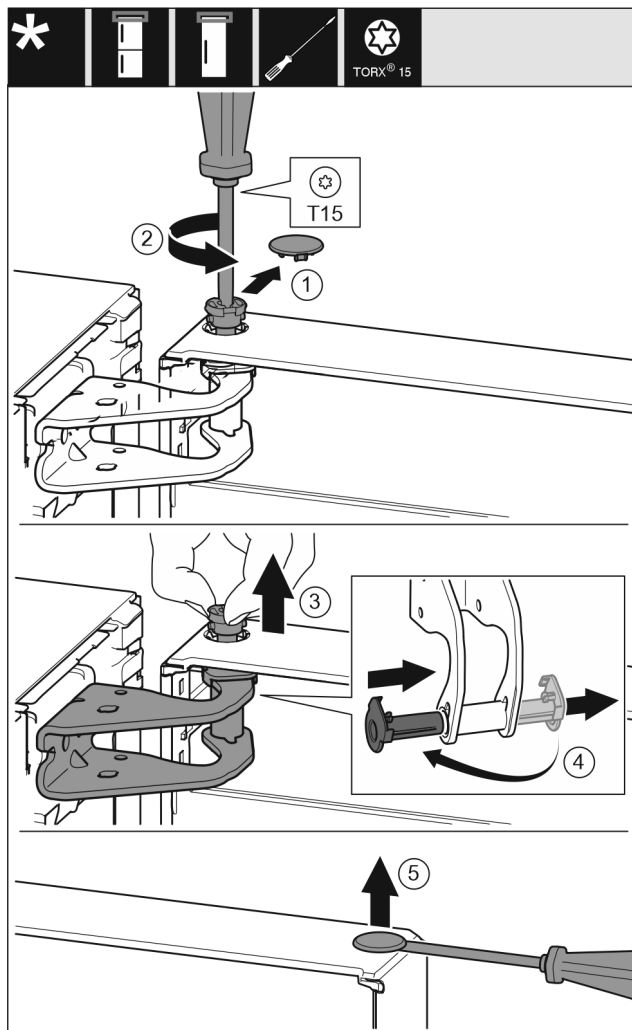


Fig. 14

- Carefully remove the cover (1).
- Use screwdriver to loosen the bolts (2) a little.



CAUTION

Danger of injury due to door tipping out!
If you remove the bolt on the door completely, the door may tilt out and you may injure yourself.

- Hold the door firmly before removing the bolt.
- Hold door in place.
- Pull out the bolt (3) with your fingers.
- Pull the bearing bush (4) out of the guide.
- Insert the bearing bush (4) on the other side and engage.
- Lift the door and put it to one side.
- Carefully lift and remove the cover (5) with a screwdriver.

17.4 Relocating the upper bearing components

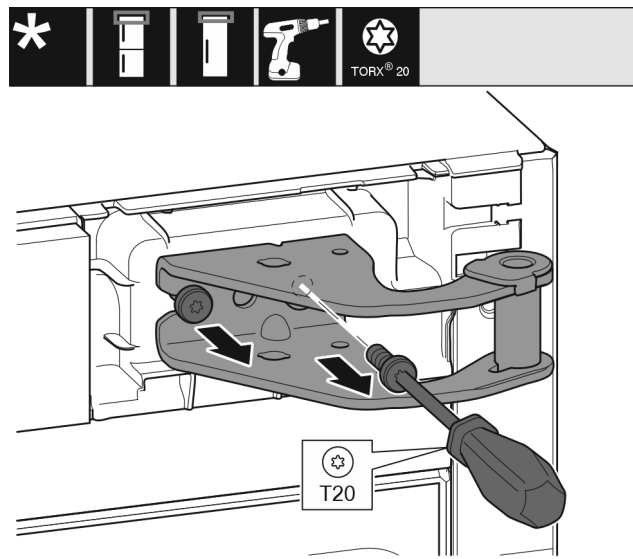


Fig. 15

- Unscrew the screws.
- Lift and remove the swap bearing block.



WARNING

Danger of injury due to door falling out!
If the bearing parts are not screwed on tightly enough, the door may fall out. This can result in serious injuries. In addition, the appliance does not close with the result that the appliance does not cool properly.

- Screw on the bearing brackets/bearing pins tightly with 4 Nm.
- Check all screws and retighten them if necessary.

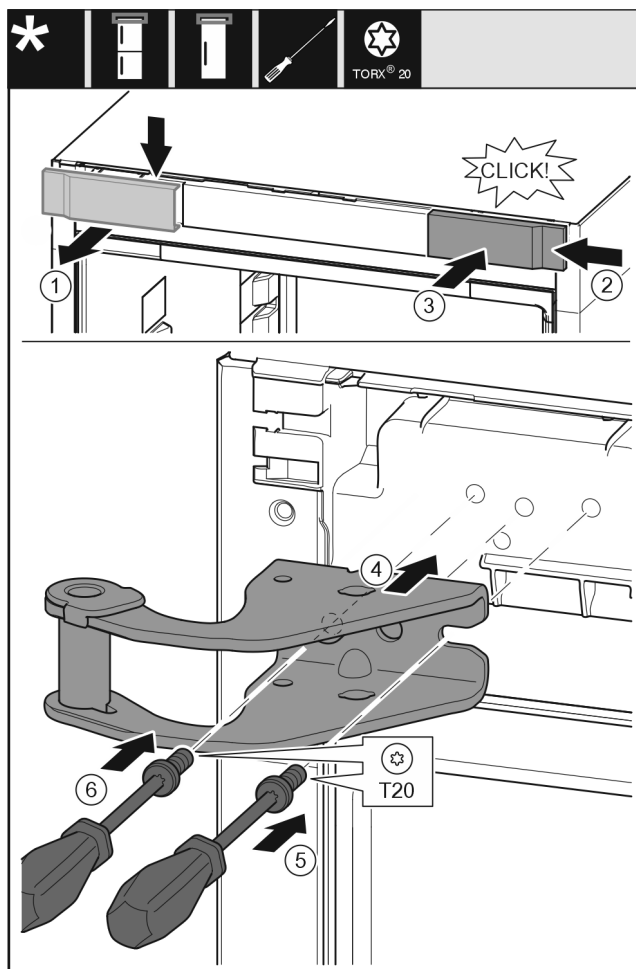


Fig. 16

- ▶ Remove the cover (1) from above towards the front.
- ▶ Turn the cover (2) by 180° and attach to the other side from the right.
- ▶ Engage the cover (3).
- ▶ Place the top swap bearing block (4).
- ▶ Screw the screw (5) tight.
- ▶ Screw the screw (6) tight.

17.5 Moving the lower bearing parts to the other side

For all appliances:



WARNING

Danger of injury due to door falling out!
If the bearing parts are not screwed on tightly enough, the door may fall out. This can result in serious injuries. In addition, the door may not close with the result that the appliance does not cool properly.

- ▶ Screw on the bearing brackets/bearing pins tightly with 4 Nm.
- ▶ Check all screws and retighten them if necessary.

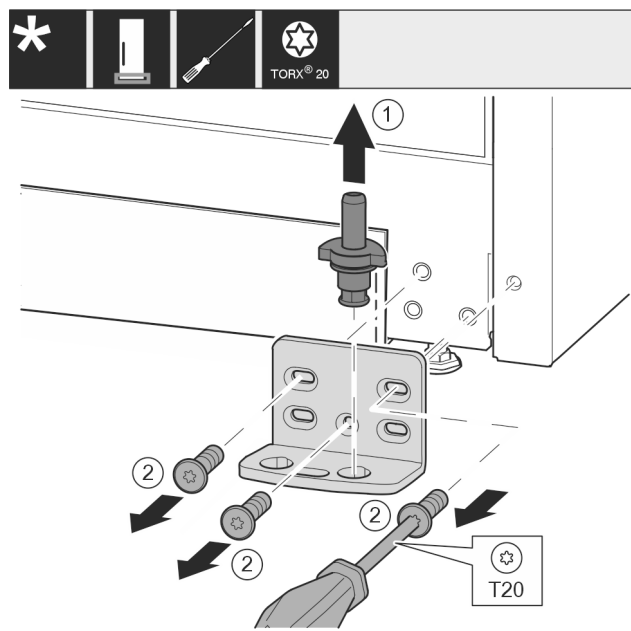


Fig. 17

- ▶ Pull the bearing bolt Fig. 17 (1) out upwards completely.
- ▶ Use screwdriver to unscrew the screws Fig. 17 (2) and remove the swap bearing block.

For all appliances:

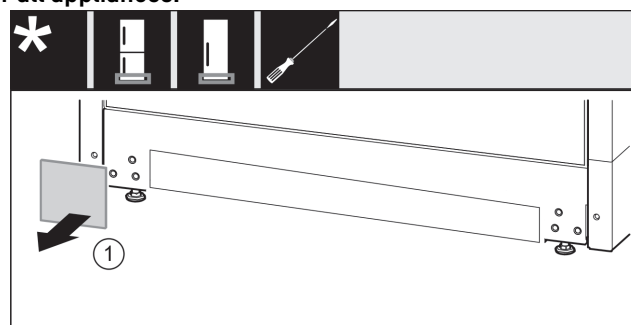


Fig. 18

- ▶ Remove cover Fig. 18 (1).

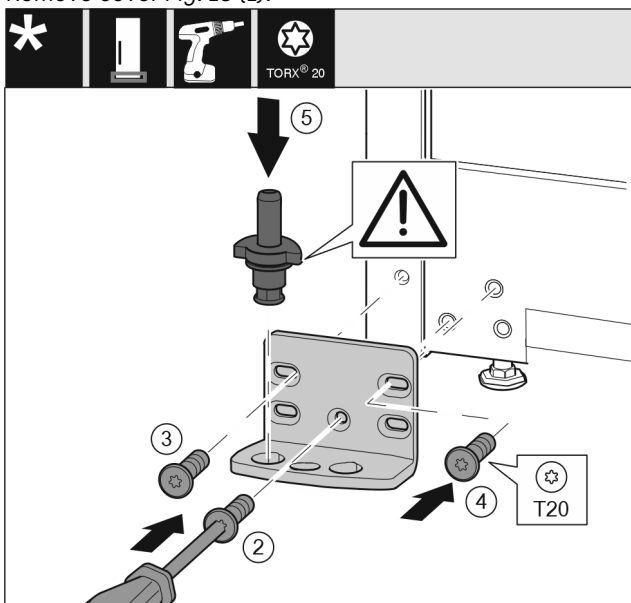


Fig. 19

- ▶ Place the swap bearing block on the other side and use a screwdriver to screw it on. Start with the screw Fig. 19 (2) at the bottom in the middle.
- ▶ Tighten screw Fig. 19 (3) and screw Fig. 19 (4).
- ▶ Insert the bearing bolt Fig. 19 (5) completely. Ensure that the latching cam is pointing towards the rear.

Door hinge change

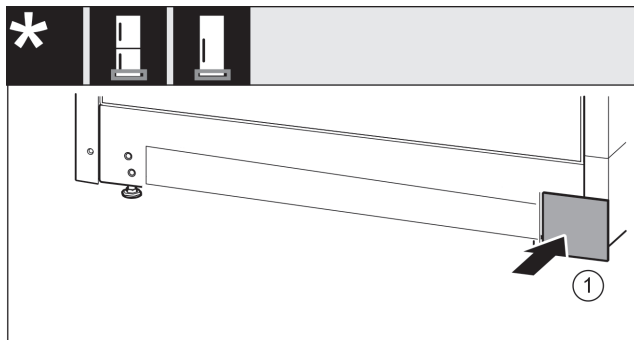


Fig. 20

- Re-attach the cover Fig. 20 (1) to the other side.

17.6 Moving the handles to the other side*

For all appliances:

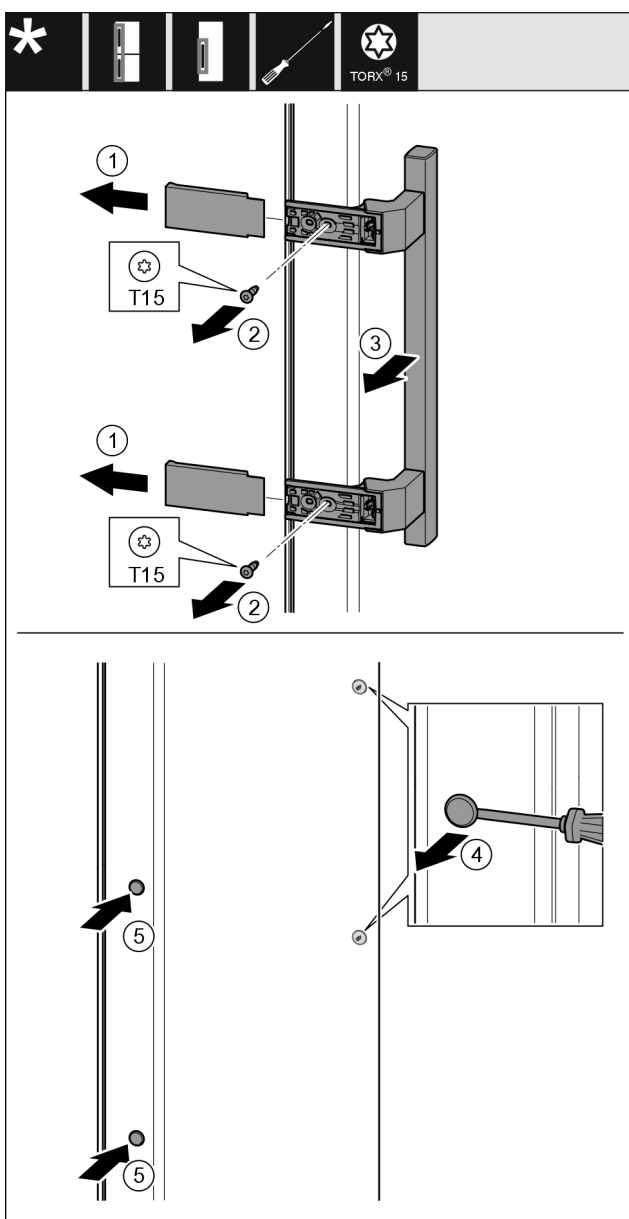


Fig. 21

- Remove the cover Fig. 21 (1).
- Unscrew screws Fig. 21 (2) with screwdriver.
- Remove the handle Fig. 21 (3).
- Use a slotted screwdriver to lift the side plug Fig. 21 (4) carefully and pull it out.

- Re-insert the plug Fig. 21 (5) on the other side.

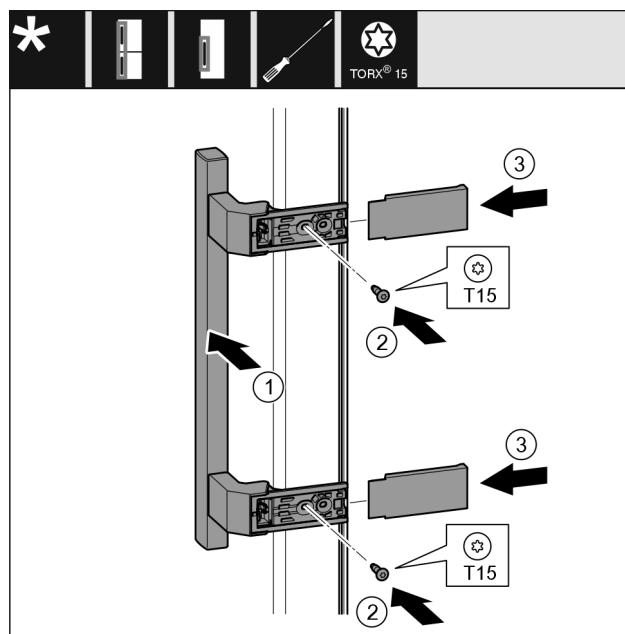


Fig. 22

- Place the handle Fig. 22 (1) on the opposite side.
- The screw holes must be exactly above each other.
- Tighten screws Fig. 22 (2) with screwdriver.
- Place the covers Fig. 22 (3) on the side and push them on.
- Ensure that they latch into place.

17.7 Fitting the door

- Place the door on the lower bearing pins.

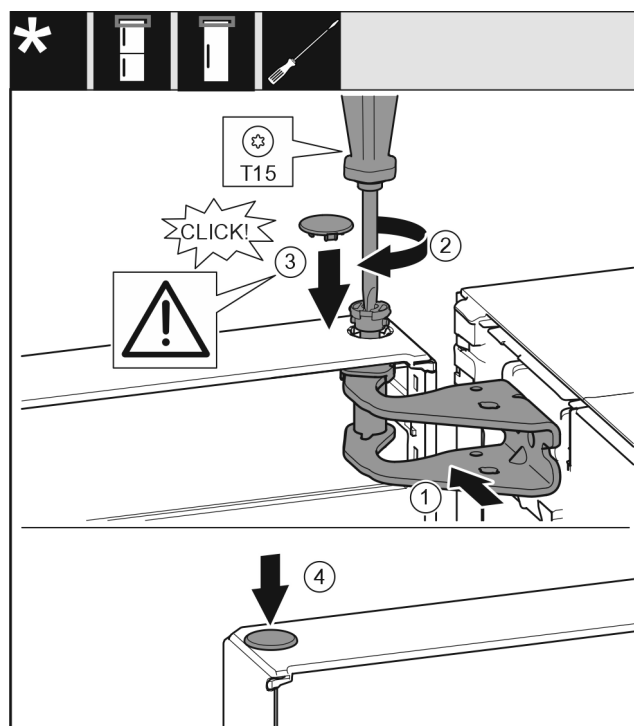


Fig. 23

- Align the top door with the opening in the swap bearing block Fig. 23 (1).
- Insert the bolt Fig. 23 (2) and use screwdriver to tighten it.
- Insert the cover Fig. 23 (3).
- Check that the cover Fig. 23 (3) is resting on the door.
- Insert the cover Fig. 23 (4).

17.8 Aligning the door

For all appliances:



WARNING

Danger of injury due to door falling out!

If the bearing parts are not screwed on tightly enough, the door may fall out. This can result in serious injuries. In addition, the door may not close with the result that the appliance does not cool properly.

- ▶ Screw the bearing brackets on firmly with 4 Nm.
- ▶ Check all screws and retighten them if necessary.

- ▶ Align the doors flush with the appliance housing using the two slots in the bearing bracket if needed. To do this undo the middle screw in the bottom bearing bracket with the T20 tool supplied. Undo the remaining screws a little with the T20 tool or with a T20 screwdriver and align using the slotted holes.
- ▶ Prop up the door: Take off the adjustable foot on the bearing bracket using the open-ended wrench SW10 until it comes into contact with the floor, then turn an additional 90°.

17.9 Appliances with closing damper: Fitting the closing damper

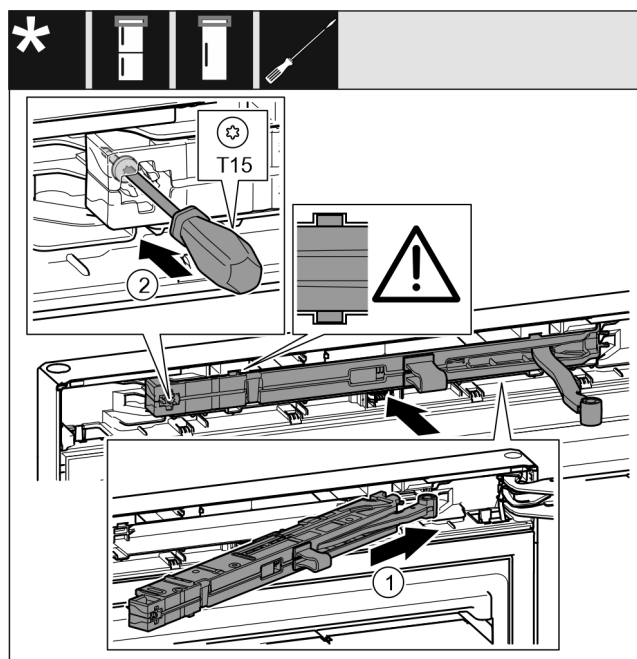


Fig. 24

- ▶ On the swap bearing block side, slide the closing damper unit Fig. 24 (1) into the recess at an angle up to the stop.
- ▶ Push the closing damper unit completely in.
- ▶ The closing damper unit is positioned correctly if the closing damper unit's rib is in the guide in the housing.
- ▶ Use a screwdriver to tighten the screw Fig. 24 (2).

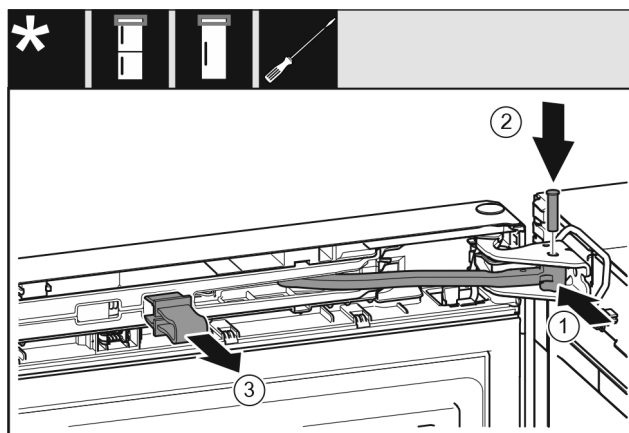


Fig. 25

The door is open 90°.

- ▶ Turn the joint Fig. 25 (1) in the bearing block.
- ▶ Insert thebolt Fig. 25 (2) into the bearing bracket and joint. Ensure that the latching cam is in the groove properly.
- ▶ Remove the safeguard Fig. 25 (3).

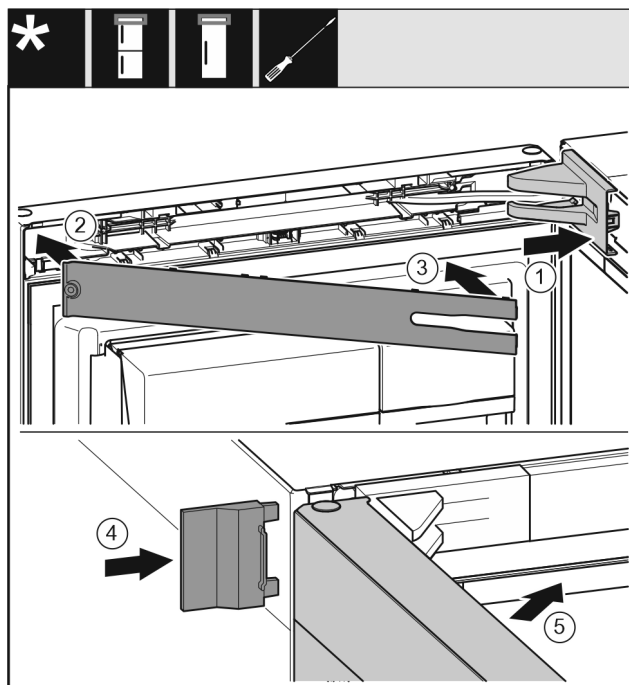


Fig. 26

- ▶ Put the swap bearing block cover Fig. 26 (1) on and engage, push apart carefully if required.
- ▶ Fit the trim Fig. 26 (2).
- ▶ Swivel in the cover Fig. 26 (3) and engage.
- ▶ Push the outer cover Fig. 26 (4) on.
- ▶ Close the upper door Fig. 26 (5).

18 Connecting the appliance to the water supply*

Make sure that the following requirements are fulfilled:

- ☐ The dimensions for the water supply connection are known and complied with.
- ☐ The correct water pressure is maintained.
- ☐ Water is supplied to the appliance via a cold water pipe which can withstand the operating pressure and is connected to the drinking water supply.
- ☐ All equipment and devices used to supply water must comply with the regulations in force in the respective country.

Water tank*

- ❑ The rear of appliance is accessible so that you can connect the appliance to the drinking water supply.
- ❑ The supplied hose is used. Old hoses have been disposed of.
- ❑ The hose connector contains a filter with a seal.
- ❑ There is a tap between the hose line and the domestic water connection so that you can turn off the water supply if necessary.
- ❑ The tap is not directly behind the appliance and is easily accessible. This way, you can push the appliance as close as possible to the wall and can quickly turn off the tap if necessary.



WARNING

Risk of electric shock from water!

- Before connecting to the water pipe: Disconnect the appliance from the mains.
- Before connecting to water supply lines: Shut off the water supply.
- Make sure that only qualified personnel connect the device to the drinking water supply.



WARNING

Risk of poisoning due to contaminated water!

- Only connect to the drinking water supply.

18.1 Connecting the hose

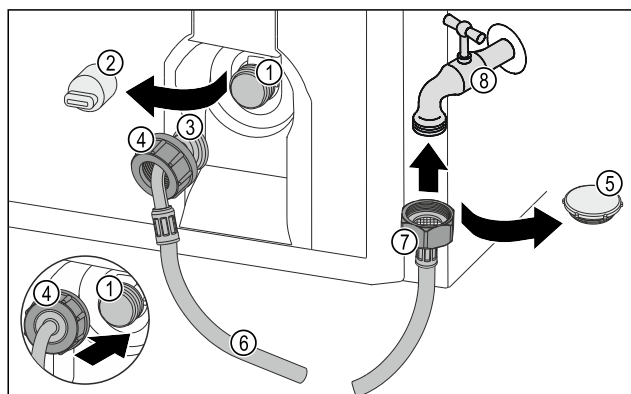


Fig. 27

- | | |
|--|-----------------------|
| (1) Solenoid valve: The solenoid valve is located at the bottom rear of the appliance. It has an R3/4 connection thread. | (5) Closure cap |
| (2) Cover | (6) Hose |
| (3) Angled hose end | (7) Straight hose end |
| (4) Nut | (8) Tap |

NOTICE

Risk of damage from incorrect installation!

- Do not damage or kink the hose.
- Do not damage or kink the hose when setting up the appliance.

Connecting the hose to the appliance:

- Pull off the cover (2).
- Push and hold the nut (4) all the way over the angled hose end (3).

NOTICE

The solenoid valve will not be tight if the thread is damaged! If the solenoid valve is not tight, water may leak out.

- Observe the following instructions for fitting the nut on the solenoid valve.

- Carefully position and hold the nut (4) on the solenoid valve (1).
- Screw the nut (4) by hand straight onto the thread until it is securely and firmly seated.
- The hose is connected to the appliance.

Connecting the hose to the tap:

- Remove the closure cap Fig. 27 (5).
- Place the straight end of the hose Fig. 27 (7) on the tap Fig. 27 (8).
- Tighten the nut at the straight end of the hose Fig. 27 (7) in a clockwise direction.
- The hose is connected to the tap.

18.2 Checking the water system

Before you completely install the appliance, Liebherr recommends checking the water system for leaks.

- Put in the InfinitySpring water tank. (see 19 Water tank*)
- Put in the InfinitySpring water filter. (see 20 Water filter*)
- Slowly turn on the tap.
- Check the hose, water feed and connections for leaks.
- The water system has now been checked for leaks.
- The water system is not leaking: You can install up the appliance completely.

Note

InfinitySpring: Before the first use, you must put the InfinitySpring into operation. To do this you must bleed and clean the water system. (see Quick Start Guide or operating instructions)*

19 Water tank*

The water tank of the InfinitySpring is located behind the bottom drawer in the fridge section or BioFresh compartment, depending on the device.*

19.1 Inserting the water tank

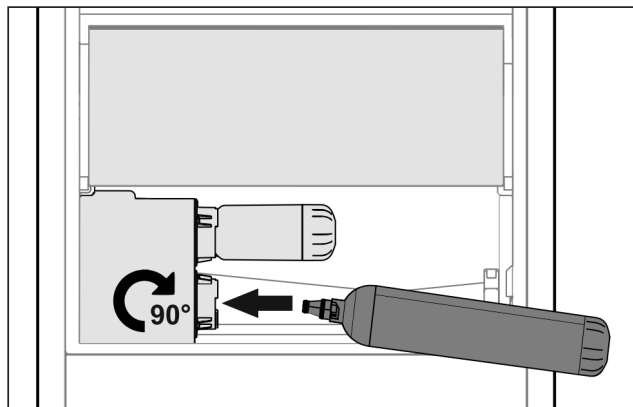


Fig. 28

- Remove the drawer compartment.
- Insert the water tank and rotate approx. 90° clockwise until it clicks in.
- Check that the tank is sealed and no water leaks out.
- Insert the drawer compartment.
- Bleed the water system. (see Quick Start Guide or operating instructions)

Instead of the water filter you can insert an additional water tank.*

Note

You can purchase this water tank as an optional extra.

20 Water filter*

Depending on your model, the water filter is behind the lowest drawer in the fridge or BioFresh compartment.*

It filters out deposits in the water and reduces the taste of chlorine.

- ❑ Replace the water filter at least every 6 months, or if there is a significant reduction in the flow rate.
- ❑ The water filter contains carbon and can be disposed of with the regular household waste.

Note

Water filters are available from the Liebherr-Hausgeräte store at home.liebherr.com/shop/de/deu/zubehor.html.

20.1 Inserting the water filter

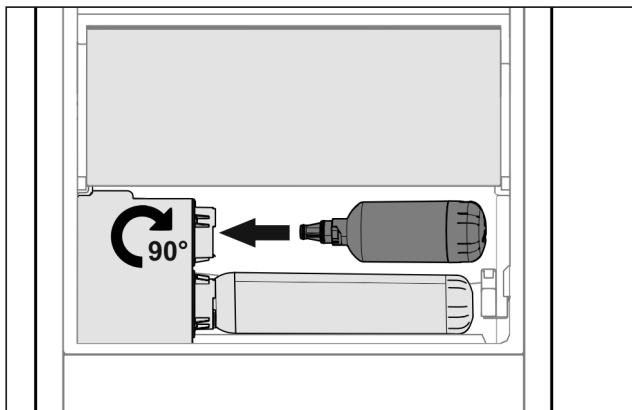


Fig. 29

- Remove the drawer compartment.
- Insert the water filter and rotate approx. 90° clockwise until it clicks in.
- Check that the filter is sealed and no water leaks out.
- Insert the drawer compartment.

Note

New water filters may contain suspended particles.*

- After replacing the filter: Draw and dispose of 3 l water at the InfinitySpring.

- The water filter is now ready for use.

21 Connecting the appliance to the power supply



WARNING

Danger of electric shock and injury due to damaged appliance or damaged mains cable!

Danger of cuts and fatal injuries. If the appliance or the mains cable is damaged during transport, you may be electrocuted. You could also cut yourself on damaged parts of the appliance housing.

- Check the appliance and the mains cable for damage after transport.
- Never put the appliance into operation if the appliance or the mains cable are damaged.
- Contact Customer Service.

You can connect your appliance to the mains using the power cable supplied separately. The mains power cable has an appliance coupler at one end and a mains plug at the other end.

Make sure that the following requirements are fulfilled:

- The appliance and power cable are undamaged.
- The appliance is set up in accordance with the regulations. (see 10 Mounting wall spacers*)
- Requirements for the electrical connection are met.
- Dimensions for connection in accordance with regulations are known and observed. (see 6 Connection dimensions for the power supply)
- Mains voltage and frequency correspond to the specifications on the type plate.
- The socket is earthed according to the regulations and fused.
- The fuse tripping current is between 10 A and 16 A.
- The socket is easily accessible and is not behind the appliance. (see 6 Connection dimensions for the power supply)

NOTICE

Danger of damage to incorrect operation!

Damage to the electrical components of the appliance.

- Only use the supplied mains cable.




WARNING

Danger of fire due to incorrect connection!

Burns.

Damage to the appliance.

- Do not use an extension cable.
- Do not use distributor blocks.

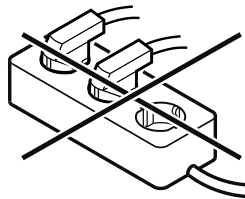

NOTICE

Danger of damage to incorrect connection!

Damage to the appliance.

- Do not connect the appliance to a stand-alone inverter, e.g. solar power systems and petrol generators.

- Connect the mains cable plug to the power supply. Ensure that the plug is tightly in the socket.
- The Liebherr logo appears in the display.
- The display switches to the standby symbol.
- If no action occurs within 60 seconds: The standby symbol fades or disappears.
- The appliance is connected. For information regarding first use, see the following section or the operating instructions.



home.liebherr.com/fridge-manuals

EN fridge

Issue date: 20251117

Part number index: 7086759-00

Liebherr-Hausgeräte Marica EOOD
Bezirk Plovdiv
4202 Radinovo
Bulgarien



Installation Guide

Quality, Design and Innovation



home.liebherr.com/fridge-manuals



LIEBHERR

General safety instructions

Contents

1	General safety instructions.....	2
2	Installation conditions.....	2
2.1	Location.....	2
2.2	Building the appliance into kitchen units.....	2
2.3	Installing multiple appliances.....	3
2.4	Mains connection.....	3
3	Installation dimensions.....	4
4	Ventilation requirements.....	4
5	Transporting the appliance.....	4
6	Unpacking the appliance.....	4
7	Mounting wall spacers.....	4
8	Setting up the appliance.....	4
9	Setting up the appliance so that it is level.....	5
10	After setting up.....	5
11	Disposing of packaging.....	5
12	What the symbols mean.....	5
13	Door hinge change.....	6
13.1	Removing the upper soft stop mechanism.....	7
13.2	Removing the bottom soft stop mechanism.....	8
13.3	Undoing the cable connection.....	9
13.4	Removing the top door.....	10
13.5	Removing the bottom door.....	10
13.6	Moving the upper bearing parts to the other side.....	11
13.7	Moving the central bearing parts to the other side.....	12
13.8	Moving the lower bearing parts to the other side.....	12
13.9	Moving the door bearing parts to the other side.....	13
13.10	Moving the handles to the other side*.....	14
13.11	Fitting the bottom door.....	15
13.12	Fitting the top door.....	15
13.13	Fitting the cable connection.....	16
13.14	Aligning the doors.....	16
13.15	Fitting the bottom soft stop mechanism.....	16
13.16	Fitting the top soft stop mechanism.....	17
14	Connecting the appliance.....	17

The manufacturer works constantly on the further development of all the types and models. Therefore please understand that we have to reserve the right to make design, equipment and technical modifications.

To get to know all the benefits of your new appliance, please read the information contained in these instructions carefully.

The instructions apply to several models. Differences may occur. Text relating only to specific appliances is marked with an asterisk (*).

Instructions are marked with a ►, and results are marked with a ▷.

1 General safety instructions

- The socket must be easily accessible so that the appliance can be quickly disconnected from the supply in an emergency. It must be outside the area of the rear of the appliance.

	DANGER	identifies a situation involving direct danger which, if not obviated, may result in death or severe bodily injury.
---	---------------	---

	WARNING	identifies a dangerous situation which, if not obviated, may result in death or severe bodily injury.
	CAUTION	identifies a dangerous situation which, if not obviated, may result in minor or medium bodily injury.
	NOTICE	identifies a dangerous situation which, if not obviated, may result in damage to property.
	Note	identifies useful information and tips.

2 Installation conditions



WARNING

Fire hazard due to dampness!

If live parts or the mains lead become damp this may cause short circuits.

- The appliance is designed for use in enclosed areas. Do not operate the appliance outdoors or in areas where it is exposed to splash water or damp conditions.

Intended use

- Install and use the appliance in indoor spaces only.

2.1 Location



WARNING

Fire hazard due to refrigerant!

The coolant used is eco-friendly but also flammable. Any leaking coolant may ignite.

- Do not damage the piping of the refrigeration circuit.

- If the appliance is installed in a very humid environment, condensation can build up on the outside of the unit. Always make sure the installation location is well ventilated.
- The more coolant there is in the appliance, the larger the room in which the appliance is installed must be. If the room is too small, any leak may create a flammable mixture of gas and air. For each 8 g of coolant the installation space must be at least 1 m³. Information on the coolant is on the model plate inside the appliance.

2.1.1 Supporting floor

- The floor of the installation site must be horizontal and even.
- The surface supporting the appliance must be at the same level as the surrounding floor.

2.1.2 Positioning

- Do not install the appliance in direct sunlight, next to an oven, radiator or similar.
- Install the appliance with the rear panel up against the wall and always use the supplied wall spacers (see below).

2.2 Building the appliance into kitchen units

The appliance can be built into kitchen units.

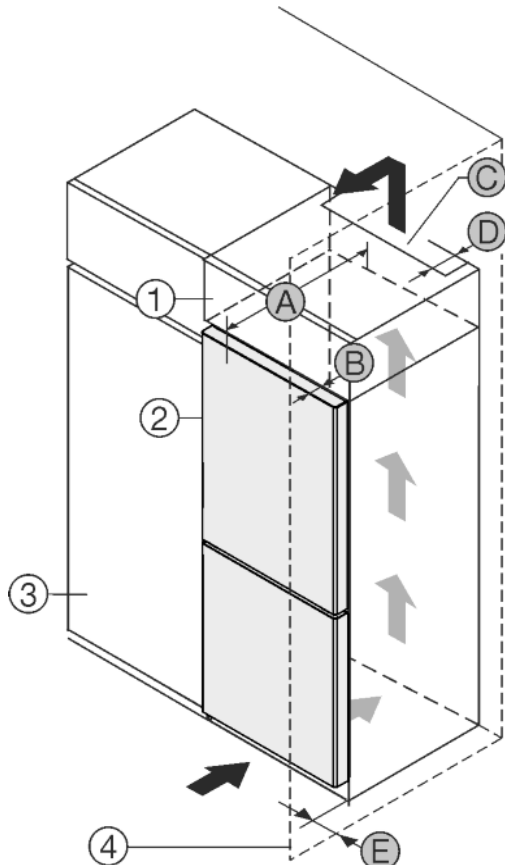


Fig. 1

- (1) Top cupboard*
 (2) Appliance*
 (3) Kitchen cabinet*
 (4) Wall*
 (A) Appliance depth*
 (B) Door depth*
 (C) Ventilation cross section*
 (D) Distance to the back of the appliance*
 (E) Distance to the side of the appliance*

Set up the appliance directly next to the kitchen cabinet Fig. 1 (3).*

Set up the appliance with a distance of 5 cm between the appliance and the kitchen appliance Fig. 1 (3).*

At the back of the top cabinet, there must be an air outlet shaft with the depth Fig. 1 (D), spanning the entire width of the cabinet.*

The ventilation cross-section Fig. 1 (C) must be maintained under the ceiling.*

If the appliance is set up with the hinges next to a wall Fig. 1 (4), the distance between the appliance and the wall must be at least 40 mm. This is how far the handle protrudes when the door is open.*

The appliance must protrude by the depth of the door Fig. 1 (B) from the front of the cabinet so that the doors can be opened fully. The appliance may protrude further depending on the depth of the kitchen cabinets Fig. 1 (3) and whether wall spacers are used.*

A [mm]*	B [mm]*	C [cm²]*	D [mm]*	E [mm]*
675 x	75	min.300	min.50	min.40

The appliance must protrude by the depth of the door (B) from the front of the cabinet so that the doors can be opened fully. The appliance may protrude further depending on the depth of the kitchen cabinets Fig. 1 (3) and whether wall spacers are used.*

Note

Please contact Customer Services to acquire a kit to limit the door opening angle to 90° for appliances with soft close mechanisms.

Ensure that the following conditions are met:

- Recess dimensions are adhered to .
- Ventilation requirements are complied with (see 4 Ventilation requirements) .

2.3 Installing multiple appliances

NOTICE

Risk of damage due to condensate!

- Do not install the appliance directly alongside a further refrigerator/freezer.

These appliances are designed for a variety of installation options. Combine appliances only if the appliance is suitable. The following table shows the installation options by model:

Installation option	Model
Single	All models
Side-by-side (SBS)	Model names starting with S... See the supplied SBS installation guide for the correct positioning.
Side-by-side with a gap of 70 mm between appliances	All models without side wall heating Otherwise condensation will build up between the units.

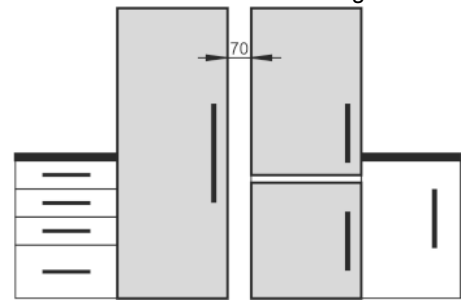


Fig. 2

Assemble the appliances together, following their specific installation instructions.

2.4 Mains connection



WARNING

Risk of fire due to short circuit!

If the mains cable/connector of the appliance or of another appliance touch the rear of the appliance, the mains cable/connector may be damaged by the appliance vibrations, leading to a short circuit.

- Stand the appliance so that it is not touched by connectors or main cables.
- Do not plug the appliance or any others into sockets located near the rear of the appliance.

Installation dimensions

3 Installation dimensions

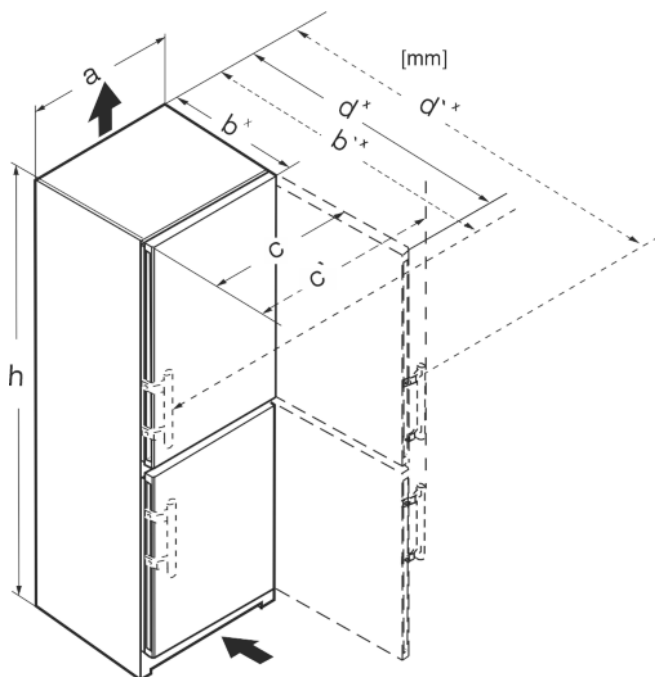


Fig. 3

	h	a	b	b*	c	c*	d	d*
CN(sd)d 5253	1855	597	675 ^x	719 ^x	609	654	1215 ^x	1222 ^x
SCNsdd 5253	1855	597	675 ^x	719 ^x	609	654	1215 ^x	1222 ^x
SBNsdd 5264	1855	597	675 ^x	719 ^x	609	654	1215 ^x	1222 ^x
CN(sd)(b) (d) 5753	2015	597	675 ^x	719 ^x	609	654	1215 ^x	1222 ^x
CBNs(d)(b) (c) 5753	2015	597	675 ^x	719 ^x	609	654	1215 ^x	1222 ^x
CNsdd 5763	2015	597	675 ^x	719 ^x	609	654	1215 ^x	1222 ^x
CBNbsd 576i	2015	597	675 ^x	719 ^x	609	654	1215 ^x	1222 ^x
CBN(st) (bs)d 578i	2015	597	675 ^x	—	609	—	1217 ^x	—
CBNstd 5783	2015	597	675 ^x	—	609	—	1217 ^x	—
CBNstd 579i	2015	597	675 ^x	—	609	—	1217 ^x	—
CBNsgd 5773	2015	597	682 ^x	—	609	—	1217 ^x	—

^x For appliances with supplied wall spacers, the dimensions must be increased by 15 mm.

4 Ventilation requirements

NOTICE

Danger of overheating due to insufficient air ventilation! The compressor may be damaged if there is insufficient air ventilation.

- Take care to ensure adequate air ventilation.
- Observe the ventilation requirements.

If the appliance is integrated into a fitted kitchen, the following ventilation requirements must be adhered to:

- There are spacer fins at the back of the appliance to provide sufficient ventilation. Make sure that these are not positioned in recesses or openings.
- As a rule, the larger the ventilation space the more efficiently the appliance can run.

5 Transporting the appliance

- Transport the appliance only in suitable packaging.
- Transport the appliance upright.
- Do not transport the appliance on your own.

6 Unpacking the appliance


Before you connect the appliance, report any damage immediately to the delivery company.

- Check the appliance and the packaging for damage during transport. Contact the supplier immediately if you suspect any level of damage.
- Remove all materials from the back or the side walls of the appliance that may prevent proper installation or ventilation.
- Remove all protective films from the appliance. Do not use sharp or pointed objects for this.
- Take the power cable from the rear of the appliance. Remove the cable brackets when you do this, otherwise there will be noise caused by vibrations!

7 Mounting wall spacers

The wall spacers must be used to achieve the declared energy consumption value and to prevent condensation in the event of high surrounding humidity. This increases the appliance depth by approx. 15 mm. The appliance will work perfectly well without the spacers but will consume slightly more energy.

- If your appliance is supplied with wall spacers, mount these on the back of the appliance, bottom left and right.

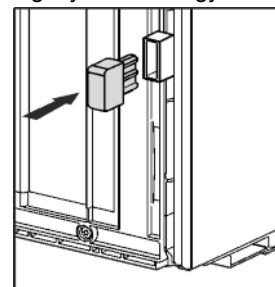

8 Setting up the appliance



CAUTION

Risk of injury!

- The appliance must be transported to its place of installation by two people.



CAUTION

Risk of injury and damage!

The door may strike the wall and be damaged as a result. In the case of glass doors, the damaged glass may cause injuries!

- Protect the glass door from striking against the wall. Fit a door stop, e.g. one made of felt, to the wall.
- A limiter restricting door opening to 90° can be ordered from the aftersales service.

Setting up the appliance so that it is level



WARNING

Risk of tipping

- The appliance must be fixed in accordance with the instructions in order to prevent a hazard caused by the instability of the appliance.



WARNING

Fire hazard and danger of damage!

- Do not place appliances emitting heat e.g. microwaves, toasters etc. on the appliance!

Ensure that the following conditions are met:

- ☐ Only move the device when it is not loaded.
- ☐ Only set up the appliance when someone is available to help.

9 Setting up the appliance so that it is level



CAUTION


Risk of injury or damage from the appliance tipping or the door falling open!

If the additional adjustable foot on the base support is not correctly positioned on the floor, there is a risk of the door falling open or the appliance tipping. This can lead to injury or property damage.

- Unscrew the additional adjustable foot on the support until it reaches the floor.
- Then turn it another 90°.

- Set up the appliance so that it is level using the supplied open-ended wrench to turn the adjustable feet (A) and a spirit level.

- Then prop up the door: Turn the adjustable foot (B) on the bearing bracket until it comes into contact with the floor, then turn an additional 90°.

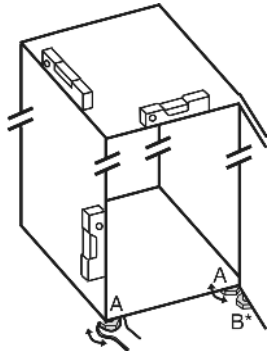

- Then prop up the door: Turn the adjustable foot on the bearing bracket (B) using the open-ended wrench SW10 until it comes into contact with the floor, then turn an additional 90°.

10 After setting up

- Take off the protective film from the exterior of the appliance.
- Take off the protective film from the trim panels.
- Take off the protective film from the trim panels and drawer fronts.
- Take off the protective film from the stainless steel rear panel.
- Remove all transport safety components.
- Clean the appliance.
- Note the type (model, number), appliance designation, appliance/serial number, purchase date and dealer's address in the fields provided for this.

11 Disposing of packaging



WARNING

Danger of suffocation due to packing material and plastic film!

- Do not allow children to play with packing material.

The packaging is made of recyclable materials:

- corrugated board/cardboard
 - expanded polystyrene parts
 - polythene bags and sheets
 - polypropylene straps
 - nailed wooden frame with polyethylene panel*
- Take the packaging material to an official collecting point.




12 What the symbols mean



Risk of injury here! Follow the safety notes!



These instructions apply to a range of models. Follow this step only if it applies to your appliance.



To install, please follow the detailed description in the Guide.




This section applies either to a single-door appliance or a double-door appliance.




Choose one of the options: Appliance with right-hinged door or appliance with left-hinged door.




Installation step required if your model has IceMaker and/or InfinitySpring.



Just loosen the screws or tighten them slightly.





Tighten the screws.



Check to see if the next step applies for your model.



Check the correct assembly/seat of the components used.

	Measure the specified measurement and adjust if necessary.
	Tool for assembly: Metre rule
 	Tool for assembly: Cordless screwdriver and attachments
	Tool for assembly: Spirit level
	Tool for assembly: Size 7 and size 10 spanners
	Two people are required for this step.
	Carry out this step at the marked place on the appliance.
	Aids for assembly: String
	Aids for assembly: Square
	Aids for assembly: Screwdriver
	Aids for assembly: Scissors
	Aids for assembly: Non-permanent marker pen
	Accessory kit: Remove components
	Dispose of components that are no longer needed.

13 Door hinge change

Tools

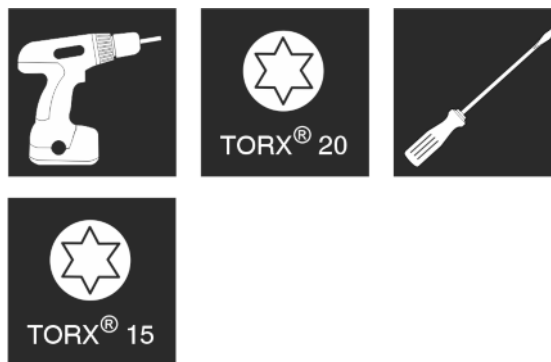


Fig. 4



WARNING

Danger of injury due to door falling out!

If the bearing parts are not screwed on tightly enough, the door may fall out. This can result in serious injuries. In addition, the door may not close with the result that the appliance does not cool properly.

- Screw on the bearing brackets/bearing pins tightly with 4 Nm.
- Check all screws and retighten them if necessary.

NOTICE

Risk of condensation damage for Side-by-Side appliances! Certain appliances can be set up as Side-by-Side combinations (two appliances next to each other).

If your appliance is a **Side-by-Side (SBS) appliance**:

- Set up the SBS combination in accordance with the enclosed document.

If the **positioning of the devices is stipulated**:

- Do not change the door hinges over.

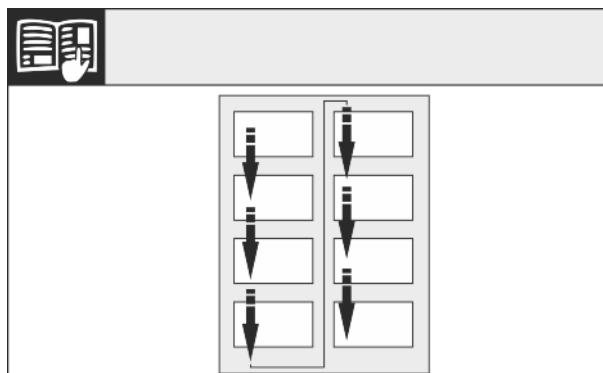


Fig. 5

Remember the reading direction.

13.1 Removing the upper soft stop mechanism

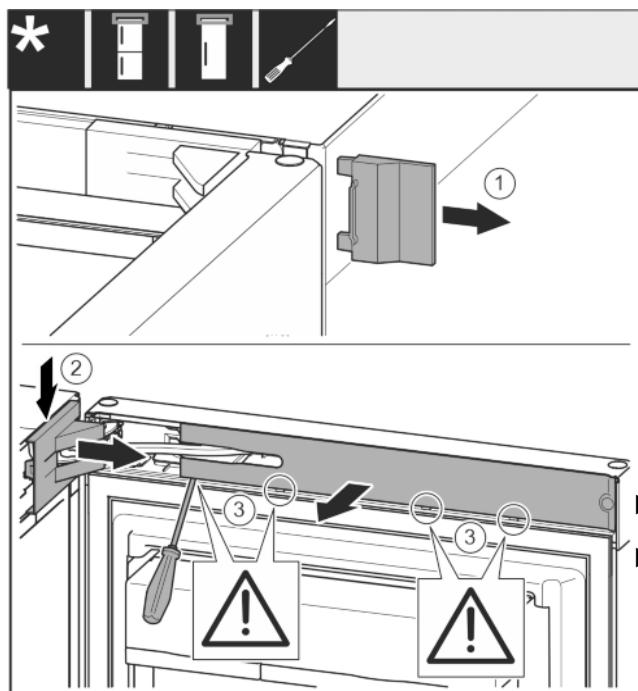


Fig. 6

- Open the top door.

NOTICE

Risk of damage!

If the door seal is damaged, the door may fail to close properly and the cooling will be inadequate.

- Do not damage the door seal with the screwdriver!

- Remove the outer cover. Fig. 6 (1)
- Disengage and release the bearing bracket cover. Remove the bearing bracket cover. Fig. 6 (2)
- Unlatch the panel with a slotted screwdriver and swivel it to one side. Fig. 6 (3)

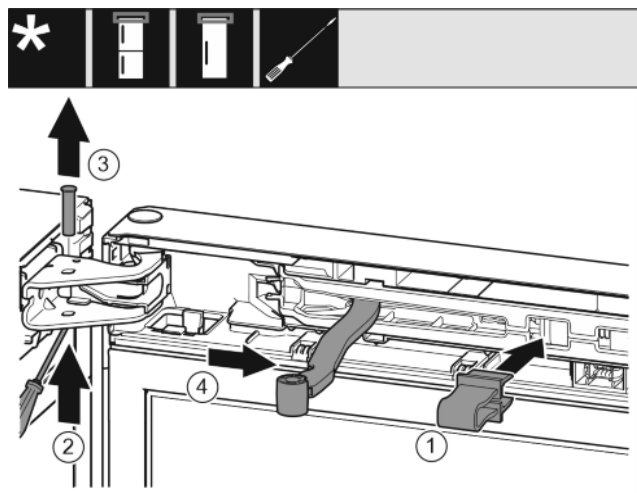


Fig. 7



CAUTION

Crushing hazard by joint folding up!

- Engage safety device.

- Engage the locking device in the opening. Fig. 7 (1)
- Push out the bolt with a screwdriver. Fig. 7 (2)
- Remove the bolt upwards. Fig. 7 (3)

- Turn the hinge in the direction of the door. Fig. 7 (4)

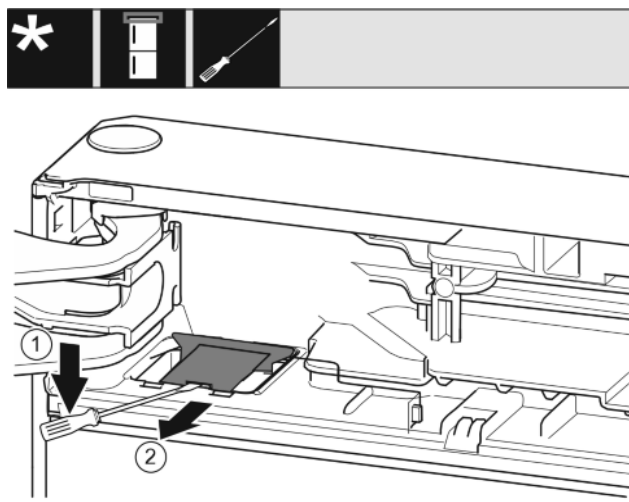


Fig. 8

- Unlatch the cover with a slotted screwdriver and lift it up. Fig. 8 (1)
- Take out the cover. Fig. 8 (2)

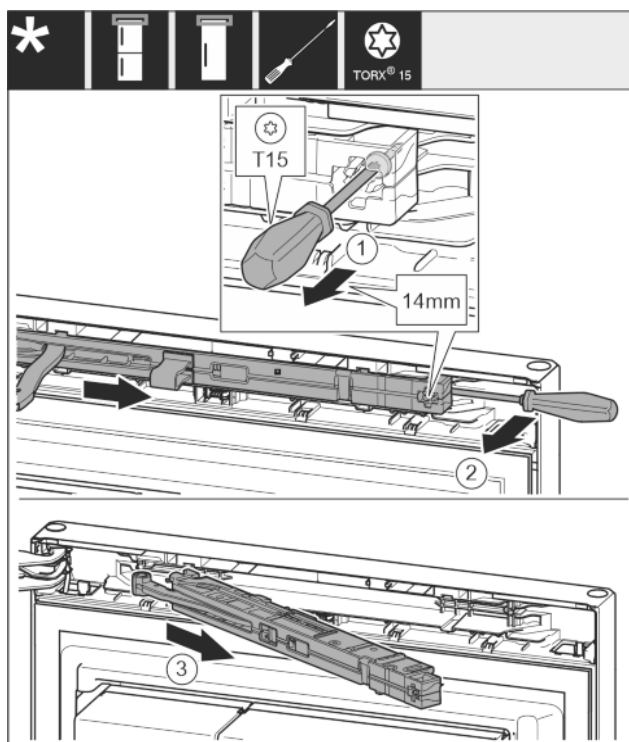


Fig. 9

- Undo the soft stop mechanism screw with a T15 screwdriver approx. 14 mm. Fig. 9 (1)
- Insert a screwdriver behind the soft stop mechanism on the handle side and rotate forwards. Fig. 9 (2)
- Remove the soft stop mechanism. Fig. 9 (3)

Door hinge change

13.2 Removing the bottom soft stop mechanism

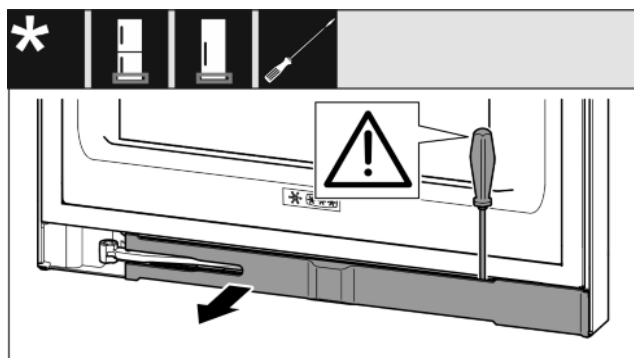


Fig. 10

- Open the bottom door.

NOTICE

Risk of damage!

If the door seal is damaged, the door may fail to close properly and the cooling will be inadequate.

- Do not damage the door seal with the screwdriver!

- Unlatch the panel with a slotted screwdriver and swivel it to one side.

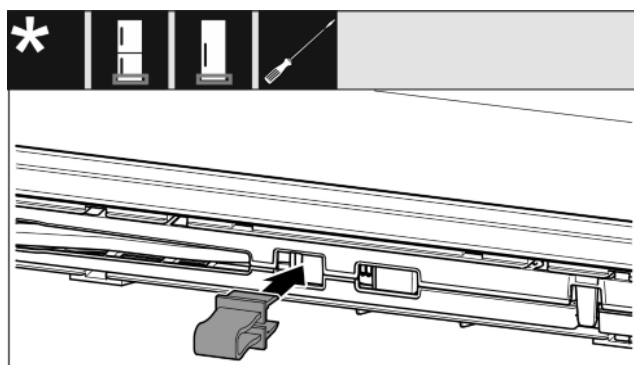


Fig. 11



CAUTION

Crushing hazard by joint folding up!

- Engage safety device.
- Engage the locking device in the opening.

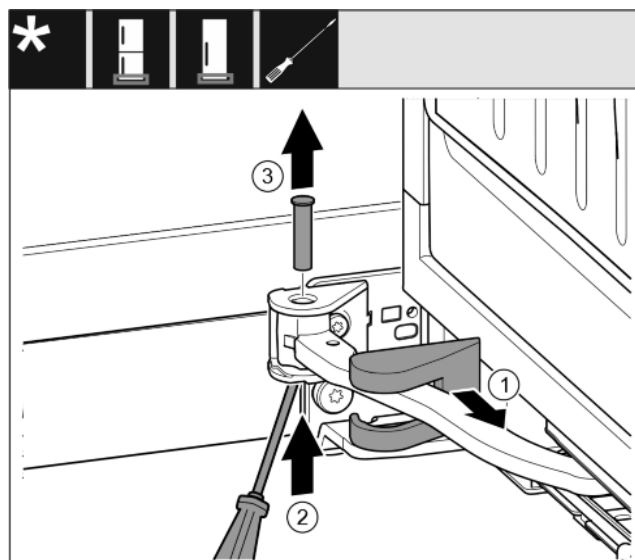


Fig. 12

- Remove the bearing bracket cover and push it along the hinge. Fig. 12 (1)
- Lift the bolt with a finger or screwdriver from below. Fig. 12 (2)
- Insert the screwdriver under the bolt head and pull it out. Fig. 12 (3)

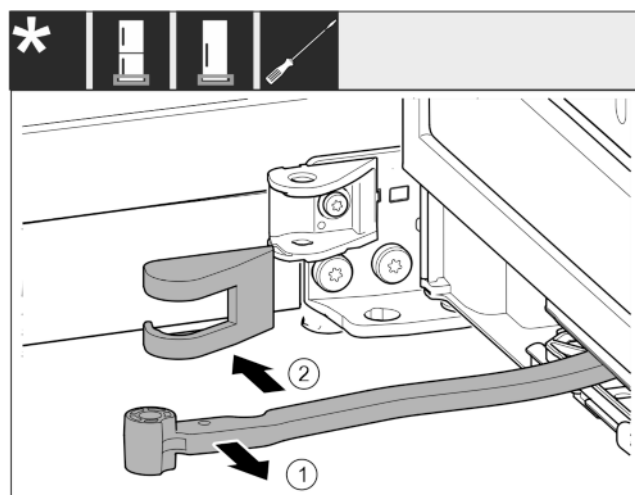


Fig. 13

- Turn the hinge in the direction of the door. Fig. 13 (1)
- Remove the bearing bracket cover. Fig. 13 (2)

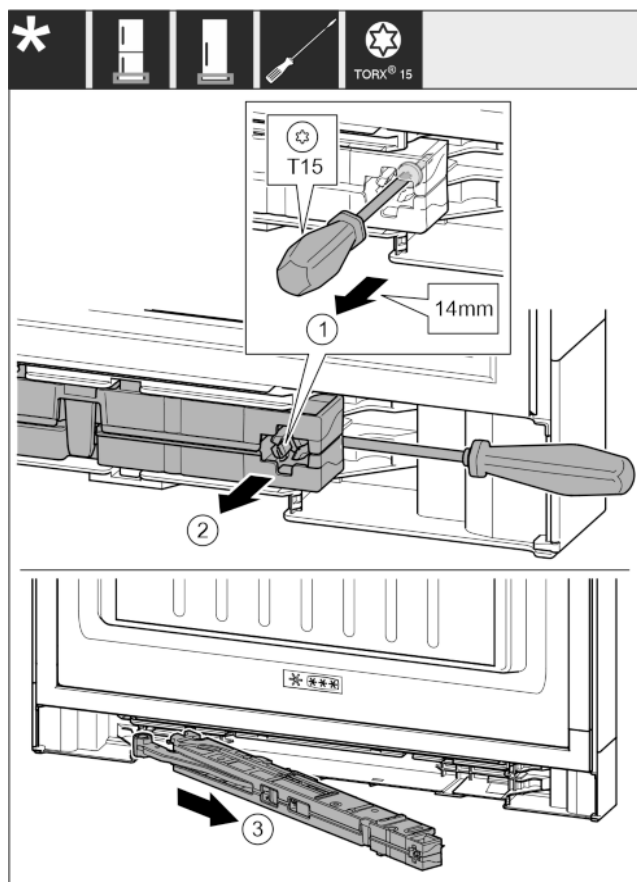


Fig. 14

- Undo the soft stop mechanism screw with a T15 screwdriver approx. 14 mm. Fig. 14 (1)
- Insert the screwdriver on the handle side behind the soft stop mechanism. Turn the unit forwards. Fig. 14 (2)
- Pull out the unit. Fig. 14 (3)
- Put the soft stop unit to one side.

13.3 Undoing the cable connection

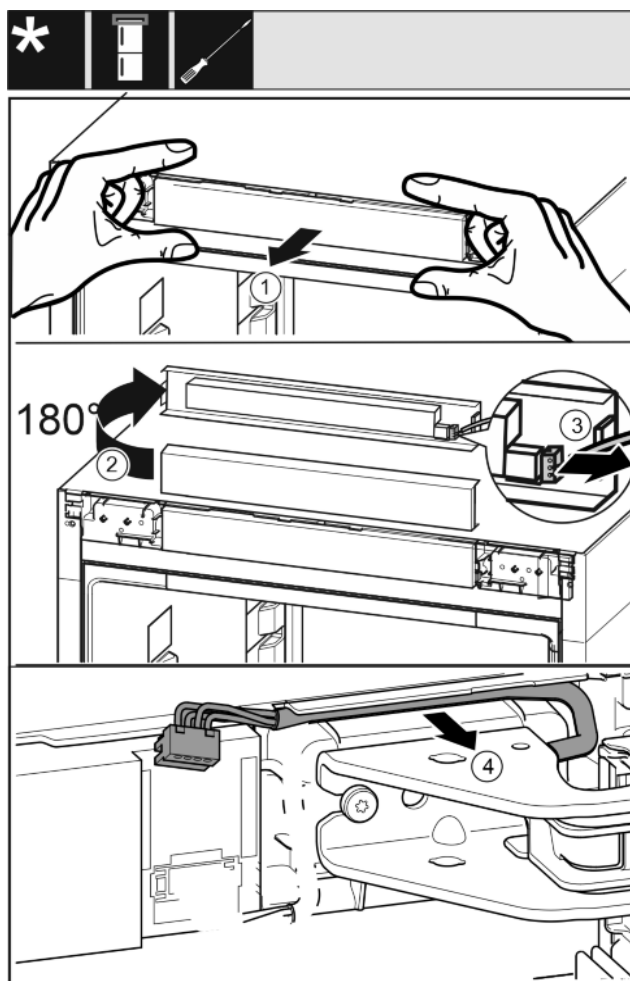


Fig. 15

- Pull out the control panel of the appliance to the front carefully. Fig. 15 (1)
- Turn the control panel upwards by 180°. Fig. 15 (2)
- Push the latching lug back and pull out the plug carefully. Fig. 15 (3)
- Carefully pull out the cable over the bearing bracket out of the guide. Fig. 15 (4)

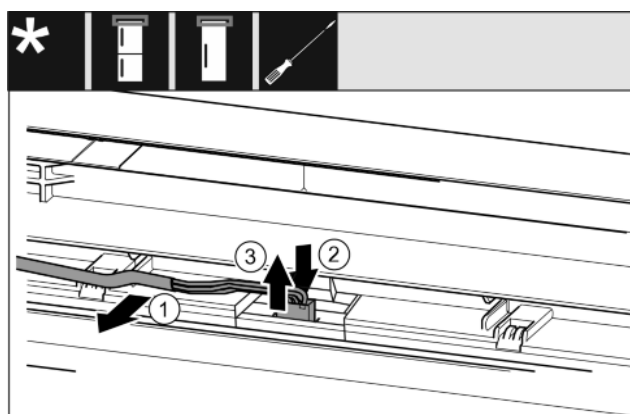


Fig. 16

- Carefully release the grey cable from the guide in the door. Fig. 16 (1)
- Push the lug behind the plug back carefully. Fig. 16 (2)
- Pull out the plug carefully upwards. Fig. 16 (3)

Door hinge change

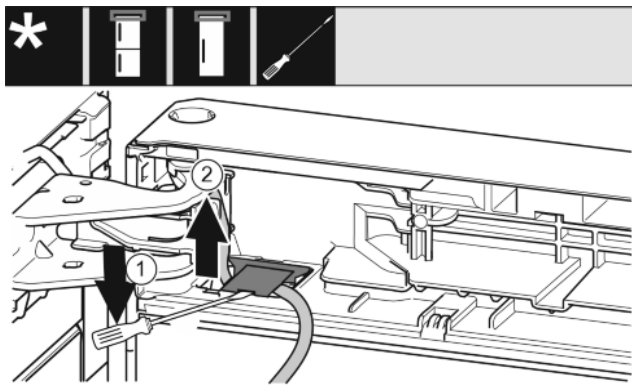


Fig. 17

- Lift up the cover with a screwdriver and pull it out. Fig. 17 (1)
- Pull out the cable. Fig. 17 (2)

13.4 Removing the top door

Note

- Remove any food from the door racks before removing the door, so that no food falls out.

For all appliances:

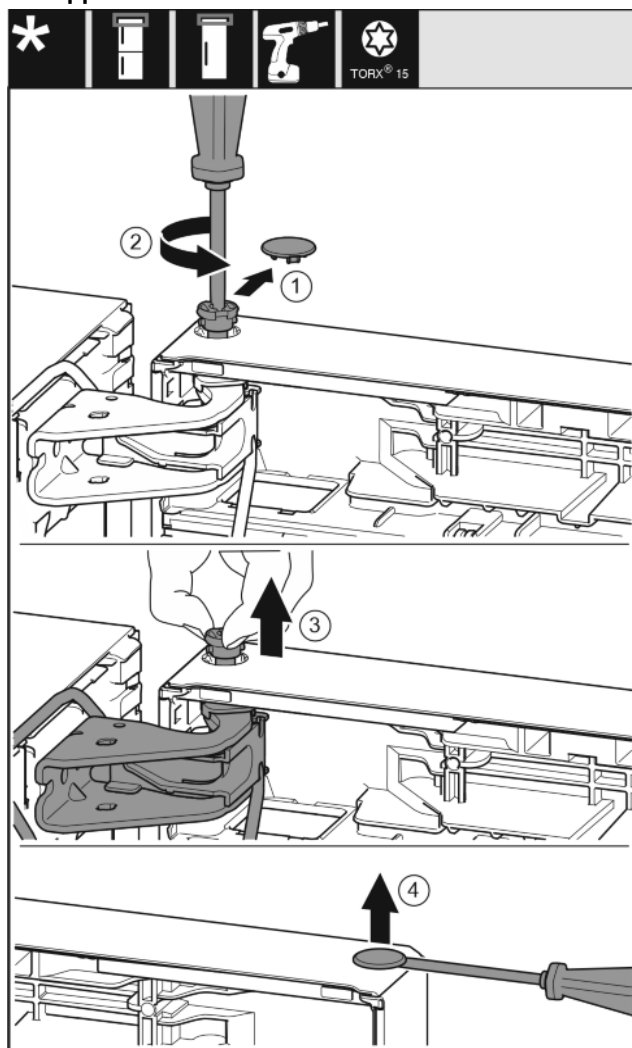


Fig. 18



CAUTION

Risk of injury if the door tips!

- Take good hold of the door.
- Set down the door carefully.

- Carefully remove the protective cover. Fig. 18 (1)
- Undo the bolt a little with a T15 screwdriver. Fig. 18 (2)
- Hold the door and remove the bolts with your fingers. Fig. 18 (3)
- Lift the door and set it aside.
- Carefully lift the plugs out of the door bearing bush with a slotted screwdriver and pull them out. Fig. 18 (4)

13.5 Removing the bottom door

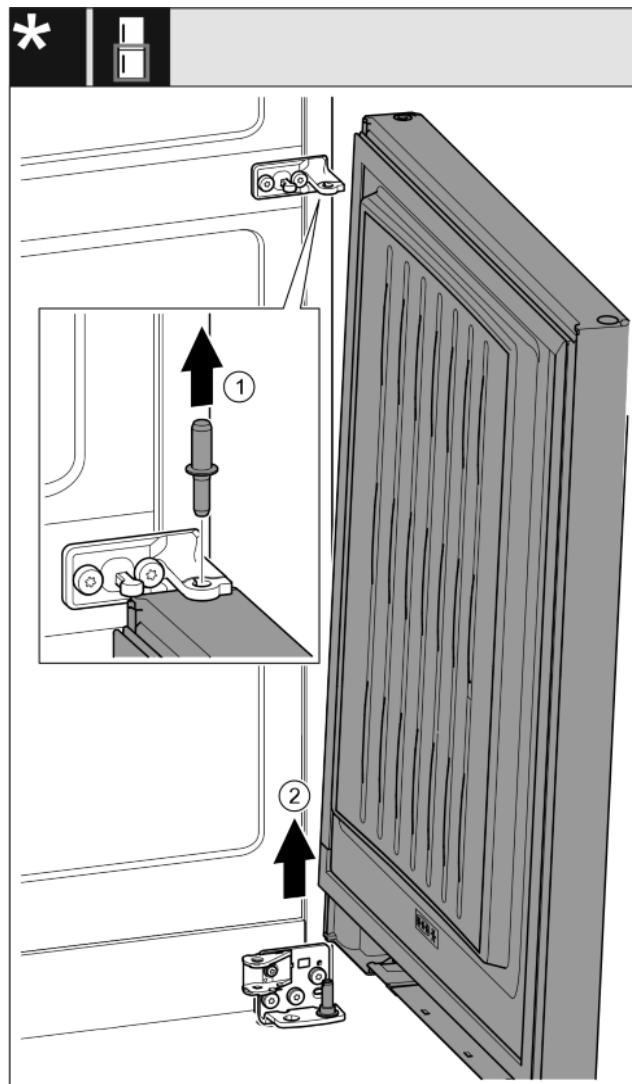


Fig. 19*



CAUTION

Risk of injury if the door tips!

- Take good hold of the door.
- Set down the door carefully.

- Pull out the bolts upwards.* Fig. 19 (1)
- Swing the door out, pull it upwards and set it aside.* Fig. 19 (2)

13.6 Moving the upper bearing parts to the other side

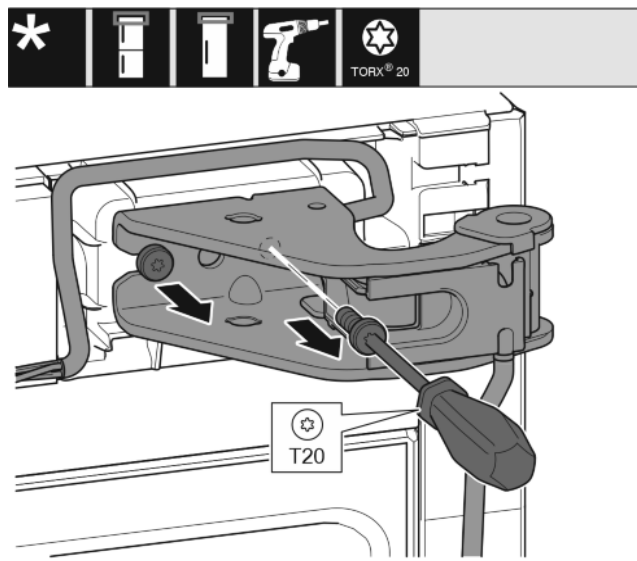


Fig. 20

- Remove both screws with a T20 screwdriver.
- Lift up and remove the bearing bracket and cable.

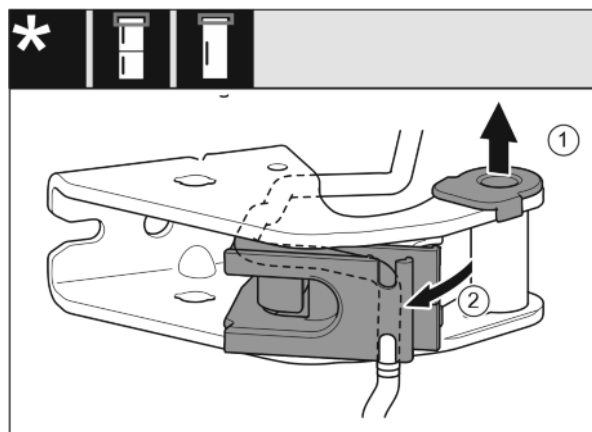


Fig. 21

- Pull the bearing bush out of the guide. Fig. 21 (1)
- Swing the cable holder out. Fig. 21 (2)

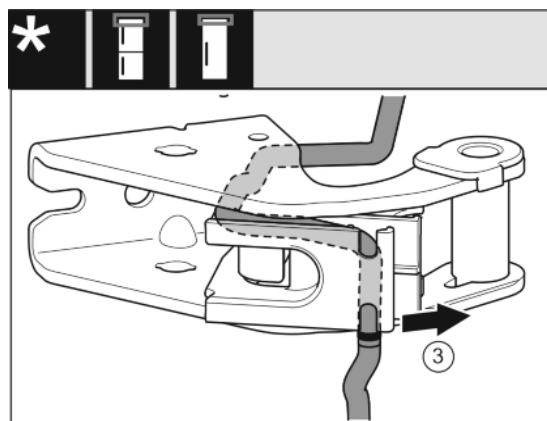


Fig. 22

- Remove the cable from the guide. Fig. 22 (3)

NOTICE

Cable crushing

- Pay attention to the marking when routing the cable. The shorter end of the cable is positioned in the cable holder from the marking onwards.

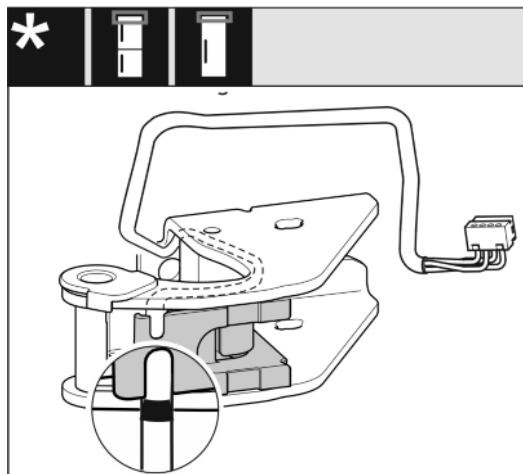


Fig. 23

- Insert the cable mirror-inverted.
- The black marking must be positioned on the edge of the cable holder.
- Swing in the cable holder.

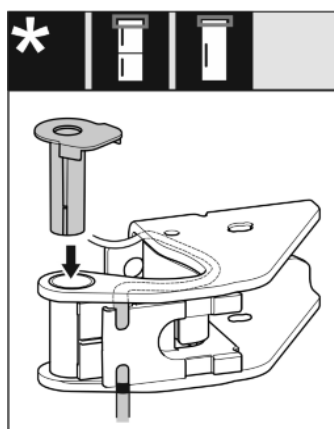


Fig. 24

- Insert the bearing bush from the other side and latch it into place.

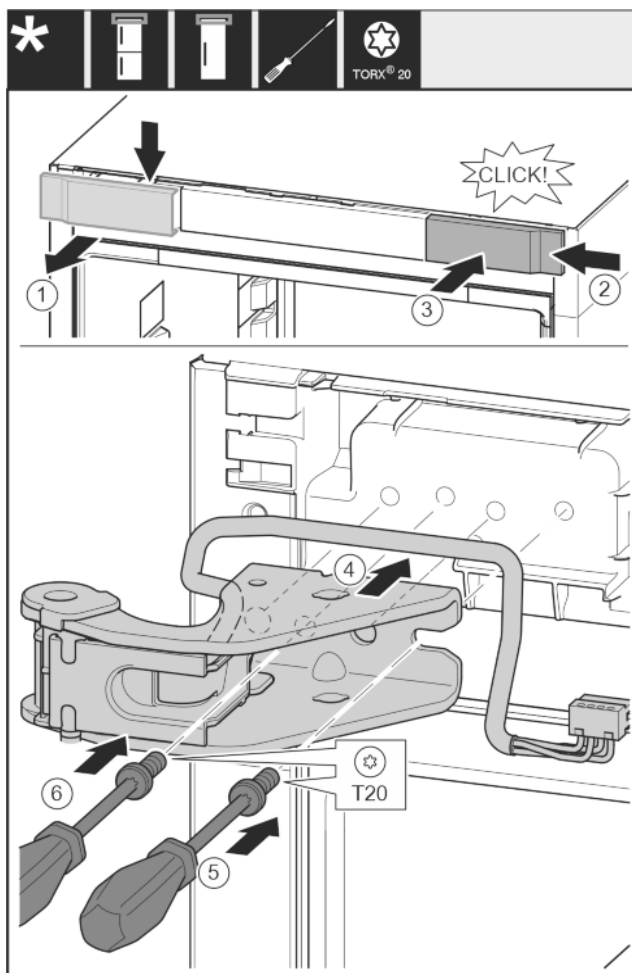


Fig. 25

- Take off the cover from above to the front. Fig. 25 (1)
- Rotate the cover 180° and clip onto the other side from the right. Fig. 25 (2)
- Latch the cover into place. Fig. 25 (3)
- Position the upper bearing bracket. Fig. 25 (4)
- Insert the screw with a T20 screwdriver and tighten it. Fig. 25 (5)
- Insert the screw with a T20 screwdriver and tighten it. Fig. 25 (6)

13.7 Moving the central bearing parts to the other side

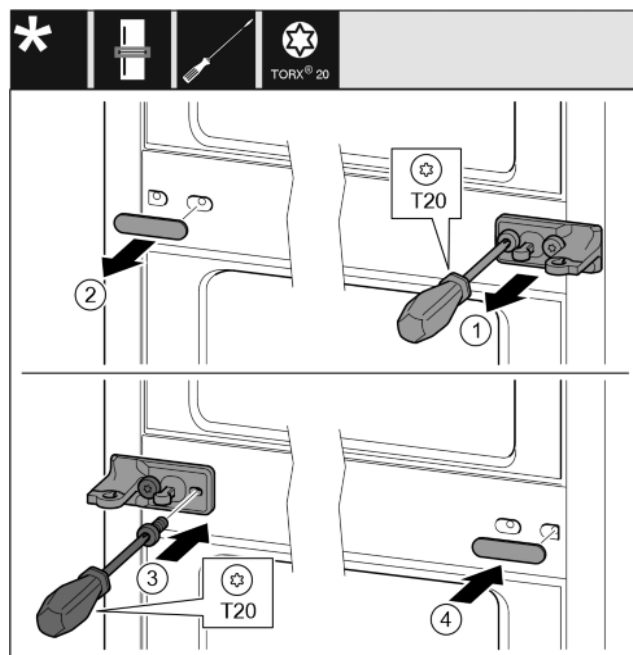


Fig. 26

- Take off the washer. Fig. 26 (1)
- Remove the screws with a T20 screwdriver. Fig. 26 (2)
- Take off the cover carefully. Fig. 26 (3)
- Screw the bearing bracket and the film rotated 180° firmly onto the other side. Fig. 26 (4)
- Attach the cover rotated 180° onto the other side. Fig. 26 (5)
- Push the washer on from the front. Fig. 26 (6)

13.8 Moving the lower bearing parts to the other side

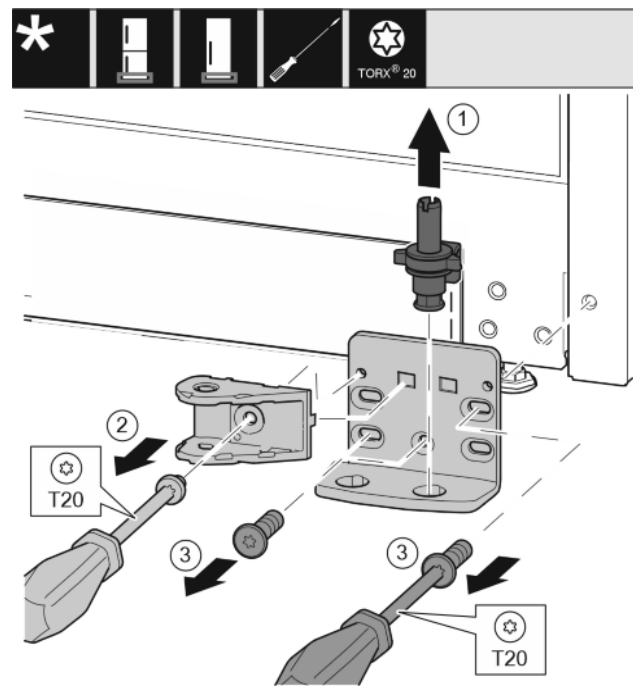


Fig. 27

- Lift the bearing pin completely upward and pull it out. Fig. 27 (1)
- Take out the screw with a T20 screwdriver and take off the soft stop connection. Fig. 27 (2)

- Take out the screws with a T20 screwdriver and take off the bearing bracket. *Fig. 27 (3)*

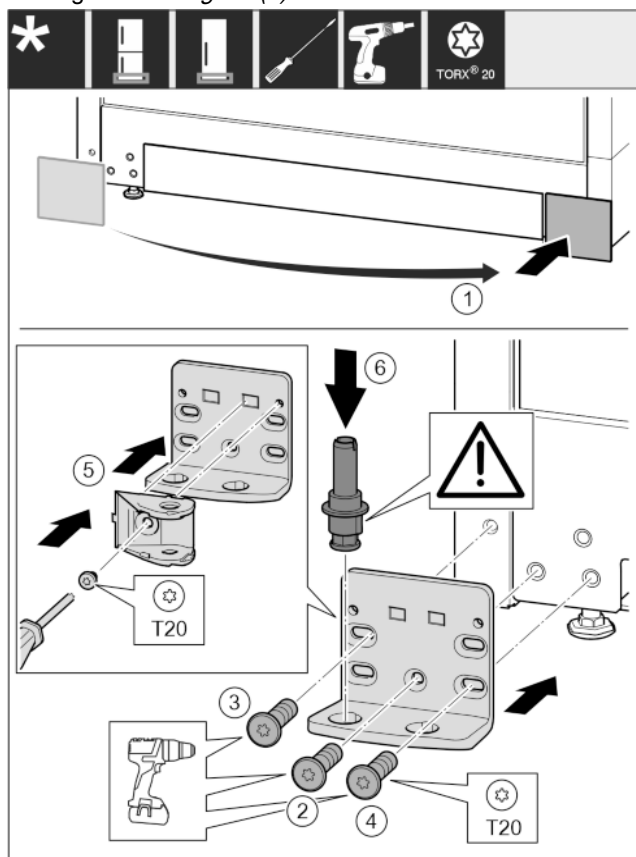


Fig. 28

- Remove the cover and fix it on the other side. *Fig. 28 (1)*
- Place the bearing bracket on the other side and screw it on with a T20 screwdriver. Start with screw 2 at the bottom in the middle. *Fig. 28 (2)*
- Screw in screws 3 and 4 tightly. *Fig. 28 (3,4)*
- Rotate the soft stop connection 180°. Screw it in with a T20 screwdriver on the other side of the bearing bracket. *Fig. 28 (5)*
- Insert the bearing pin completely. Make sure that the latching lug is pointing to the rear. *Fig. 28 (6)*

13.9 Moving the door bearing parts to the other side

Top door

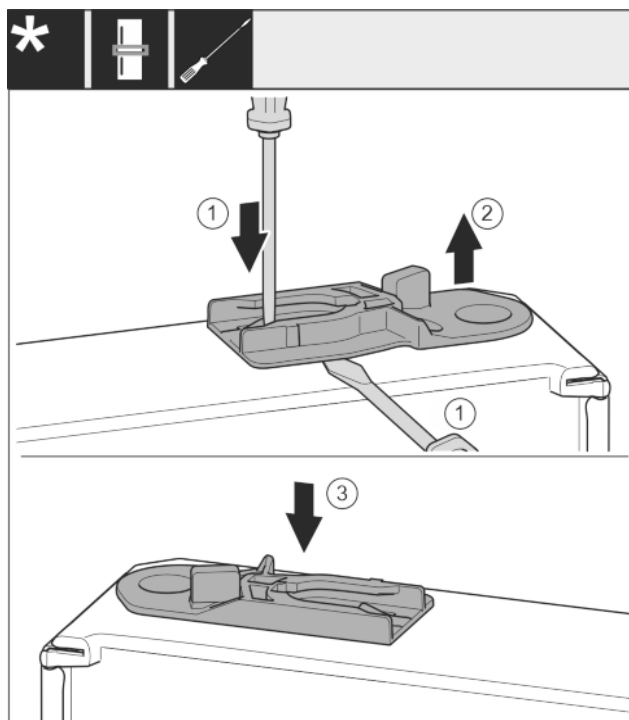


Fig. 29

- The bottom side of door faces upwards: Turn the door.
- Pull out the guide bush: Press the lug with a slotted screwdriver and, at the same time, insert the slotted screwdriver under the guide bush. *Fig. 29 (1, 2)*
- Slide the guide bush included in the scope of supply to the other side of the housing. *Fig. 29 (3)*
- The upper side of door faces upwards: Turn the door.

Door hinge change

13.10 Moving the handles to the other side*

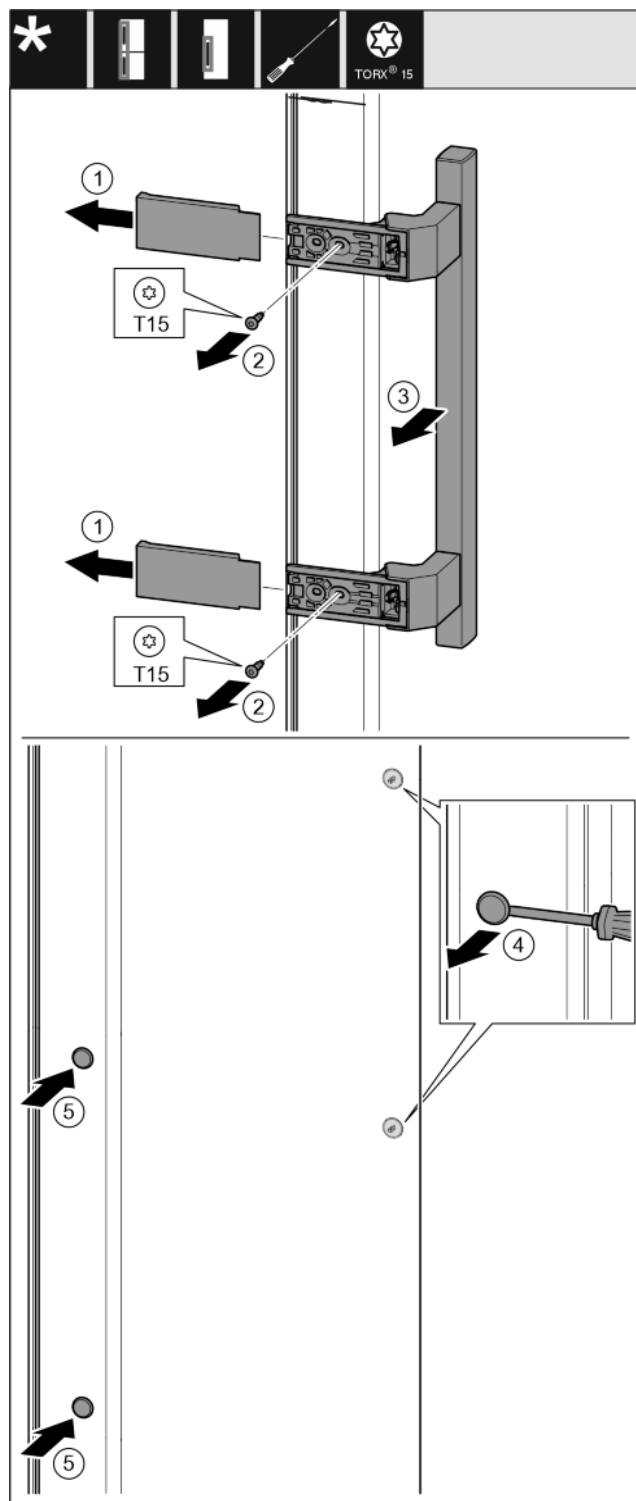


Fig. 30

- Pull off the cover. Fig. 30 (1)
- Remove the screws with a T15 screwdriver. Fig. 30 (2)
- Take off the handle. Fig. 30 (3)
- Carefully lift up the side plugs with a slotted screwdriver and pull them out. Fig. 30 (4)
- Insert the plugs again on the other side. Fig. 30 (5)

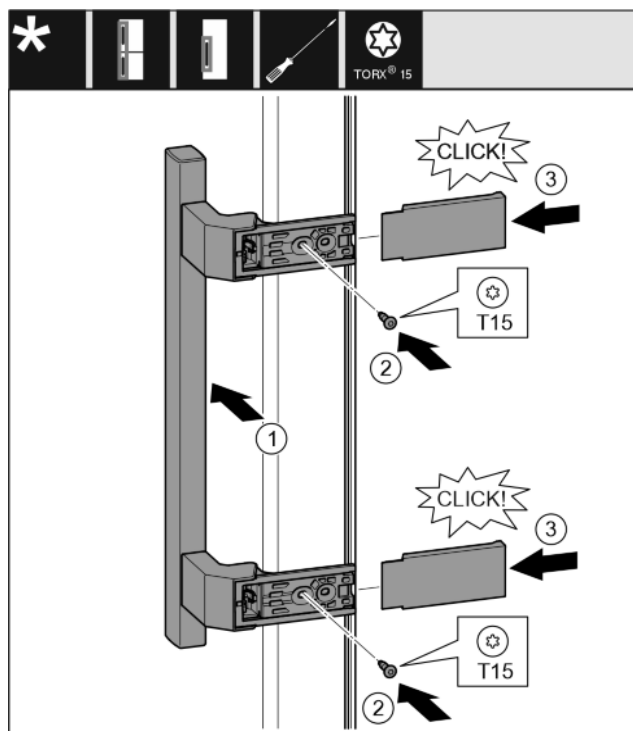


Fig. 31

- Position the handle on the other side. Fig. 31 (1)
- The screw holes must be exactly above each other.
- Tighten the screw with a T15 screwdriver. Fig. 31 (2)
- Position the covers on the side and push them on. Fig. 31 (3)
- Ensure that they latch into place.

13.11 Fitting the bottom door

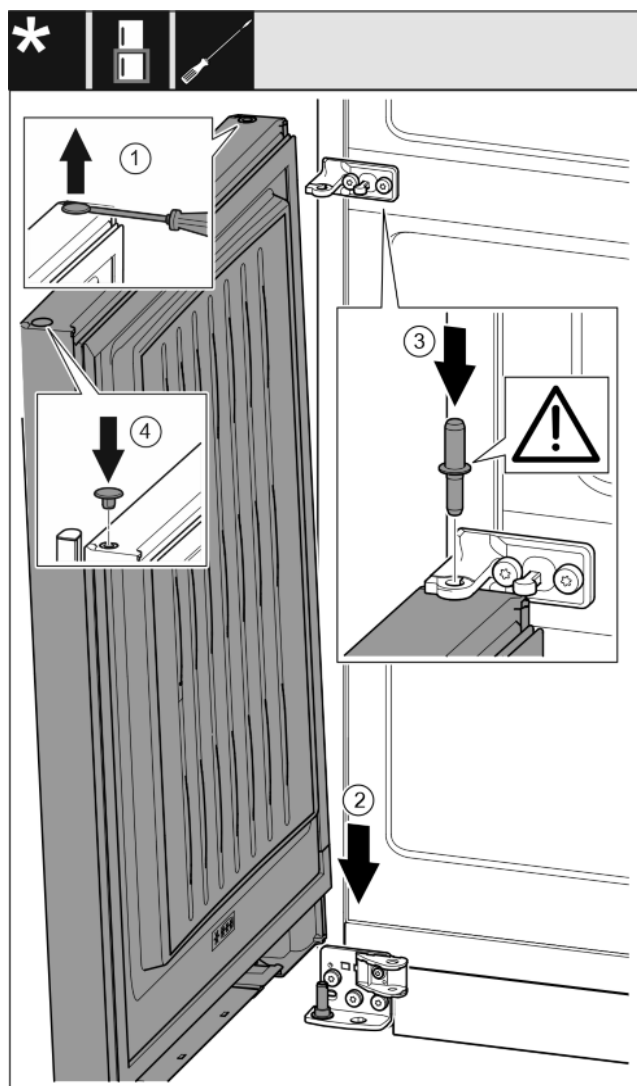


Fig. 32

- Carefully lift up the plugs with a slotted screwdriver and pull them out. Fig. 32 (1)
- Place the door onto the lower bearing pins from above. Fig. 32 (2)
- Insert the centre bearing pin through the centre bearing bracket into the lower door. Make sure that the latching lug is pointing to the rear. Fig. 32 (3)
- Insert the plugs again on the other side of the door. Fig. 32 (4)

13.12 Fitting the top door

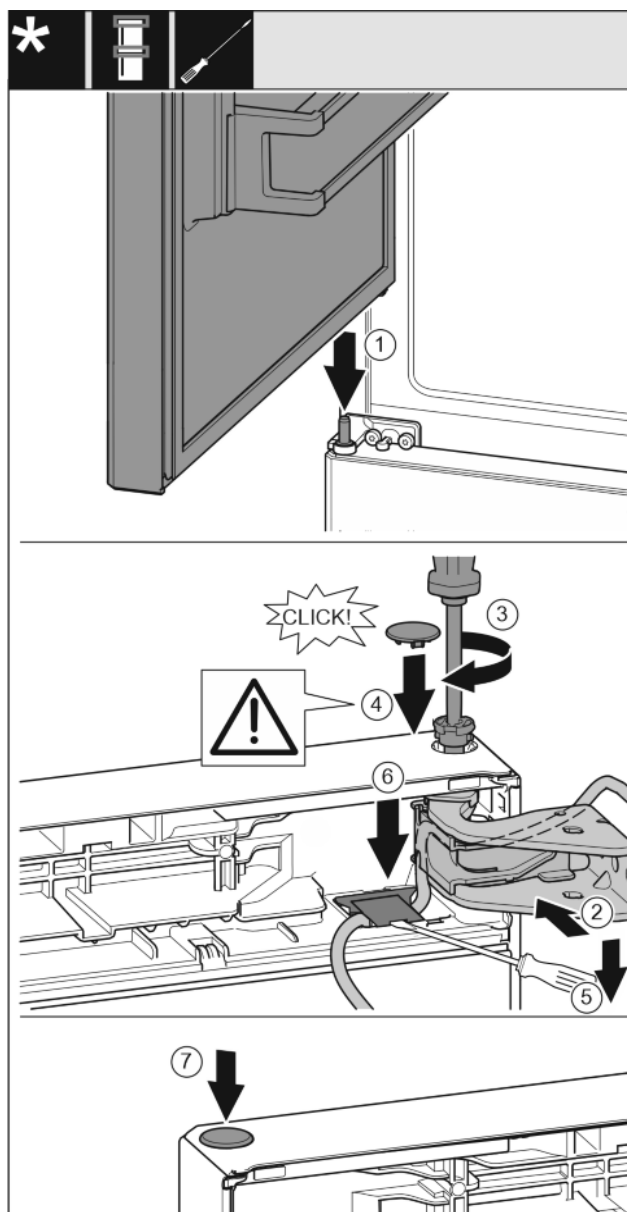


Fig. 33

- Place the upper door on the centre bearing pins Fig. 33 (1)
- Align the top of the door with opening in the bearing bracket. Fig. 33 (2)
- Insert the bolt and tighten with a T15 screwdriver. Fig. 33 (3)
- Fit the protective cover to protect the door: Insert the protective cover and check that it is flush to the door. If not, insert the bolt fully. Fig. 33 (4)

NOTICE

Cable crushing

- The marking on the cable must lie centrally in the holder. The lug with the longer opening must point forwards.
- Lift up the cover with a screwdriver and pull it out. Afterwards, place the cable underneath. Fig. 33 (5)
- Place on the cover again and press it down until it latches into place. Fig. 33 (6)
- Insert the plugs. Fig. 33 (7)

Door hinge change

13.13 Fitting the cable connection

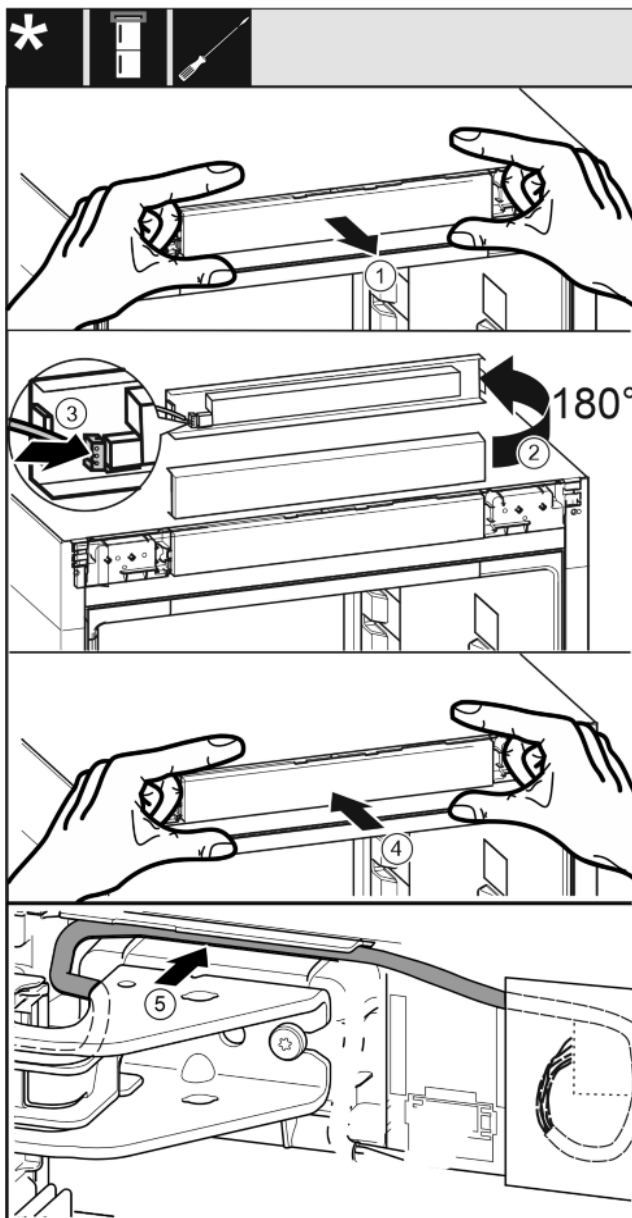


Fig. 34

- ▶ Take off the operating panel carefully. Fig. 34 (1)
- ▶ Turn the panel upwards through 180°. Fig. 34 (2)
- ▶ Engage the plug in the control panel. Fig. 34 (3)
- ▶ Latch the control panel back into the appliance. Fig. 34 (4)
- ▶ Carefully position the grey cable in the guide above the top bearing bracket.. Fig. 34 (5)

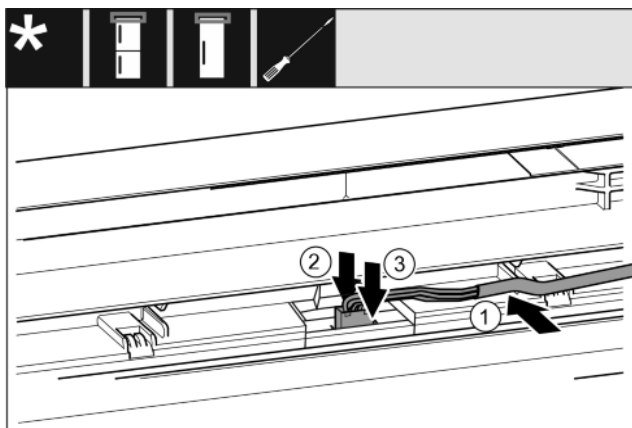


Fig. 35

- ▶ Insert the grey cable into the guide in the top door. Fig. 35 (1)
- ▶ Press back the latching lug Fig. 35 (2)
- ▶ Engage the plug. Fig. 35 (3)
- ▶ Position the remaining cable length as a loop in the guide, if required.

13.14 Aligning the doors



WARNING

Risk of injury due to the door dropping out!

If the bearing parts are not screwed into place firmly enough, the door may drop out. This may lead to severe injuries. What is more, the door may not close and therefore the appliance may fail to cool properly.

- ▶ Screw the turn hinges firmly into place with 4 Nm.
- ▶ Check all of the screws and retighten if necessary.

- ▶ Align the doors flush with the appliance housing using the two slots in the lower bearing bracket and centre bearing bracket if needed. To do this undo the middle screw in the bottom bearing bracket with the T20 tool supplied. Undo the remaining screws a little with the T20 tool or with a T20 screwdriver and align using the slotted holes. Undo the screws in the middle bearing bracket with the T20 tool and align the middle bearing bracket using the slotted holes.
- ▶ Prop up the door: Take off the adjustable foot on the bearing bracket using the open-ended wrench SW10 until it comes into contact with the floor, then turn an additional 90°.

13.15 Fitting the bottom soft stop mechanism

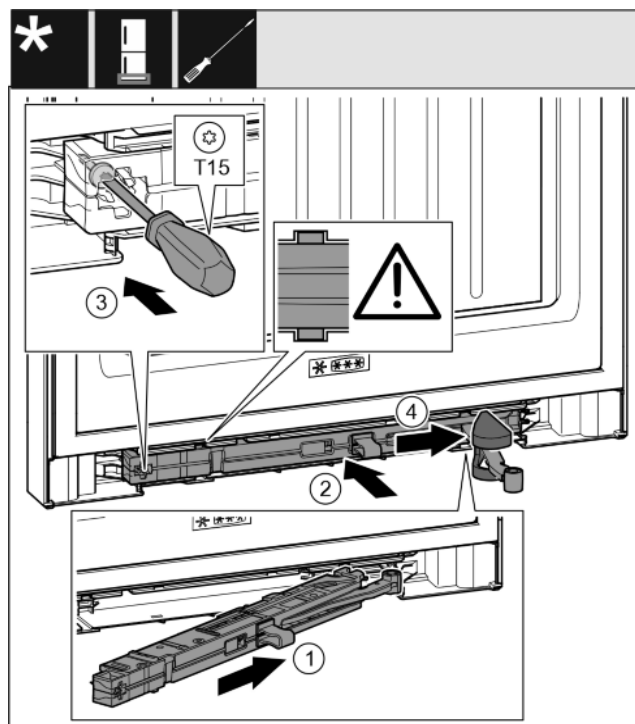


Fig. 36

- ▶ Slide the soft stop unit on the bearing bracket side at an angle into the slot as far as it will go. Fig. 36 (1)
- ▶ Slide the soft stop unit fully into the slot. Fig. 36 (2)
- ▶ The unit is positioned correctly when the rib on the soft stop unit is in the guide.
- ▶ Tighten the screw with a T15 screwdriver. Fig. 36 (3)
- ▶ Push the cover over the hinge. Fig. 36 (4)

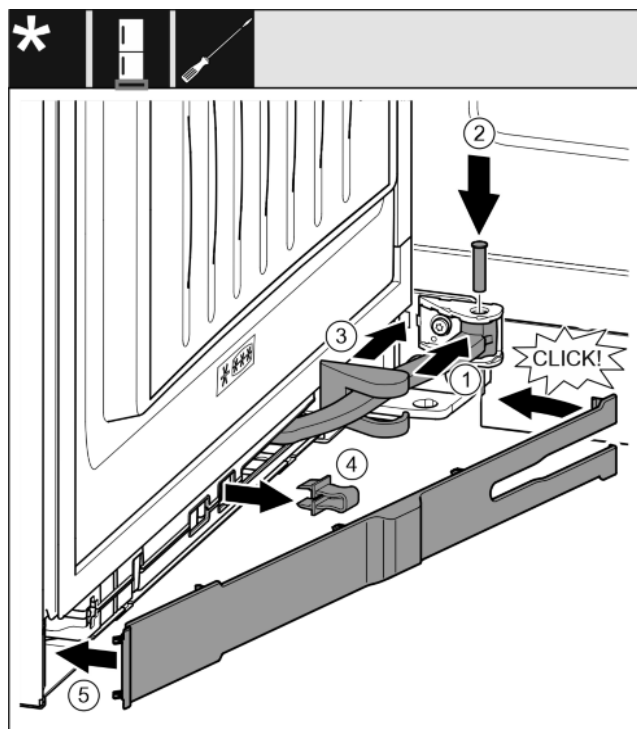


Fig. 37

The door is open 90°.

- ▶ Turn the hinge in the mount. *Fig. 37 (1)*
- ▶ Insert the bolt with a T15 screwdriver in the mount and hinge. Make sure that the latching lug sits correctly in the groove. *Fig. 37 (2)*
- ▶ Push the bearing bracket cover along the hinge and fit it via the mount. *Fig. 37 (3)*
- ▶ Remove the locking device. *Fig. 37 (4)*
- ▶ Position the panel on the handle and swing it in. *Fig. 37 (5)*
- ▷ The panel is latched into place.
- ▶ Close the bottom door.

13.16 Fitting the top soft stop mechanism

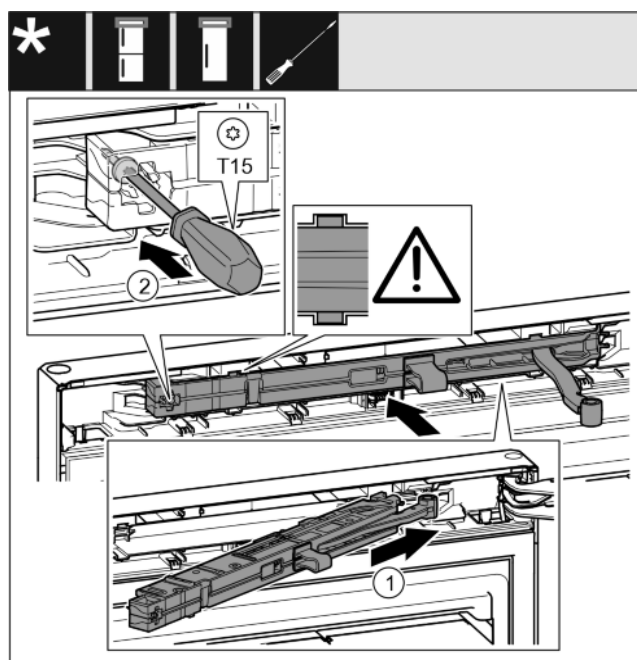


Fig. 38

- ▶ Slide the soft stop unit on the bearing bracket side at an angle into the slot as far as it will go. *Fig. 38 (1)*
- ▶ Slide the unit in completely.

- ▷ The unit is positioned correctly when the rib on the soft stop unit is in the guide in the housing.

- ▶ Tighten the screw with a T15 screwdriver. *Fig. 38 (2)*

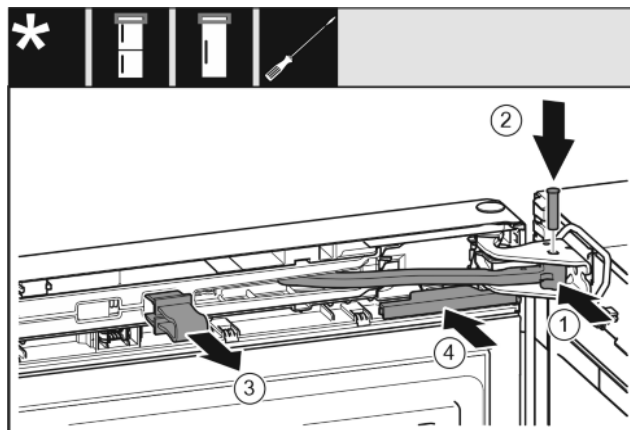


Fig. 39

The door is open 90°.

- ▶ Turn the hinge in the bearing bracket. *Fig. 39 (1)*
- ▶ Insert the bolt in the bearing bracket and hinge. Make sure that the latching lug sits correctly in the groove. *Fig. 39 (2)*
- ▶ Remove the locking device. *Fig. 39 (3)*
- ▶ Slide on the cover. *Fig. 39 (4)*

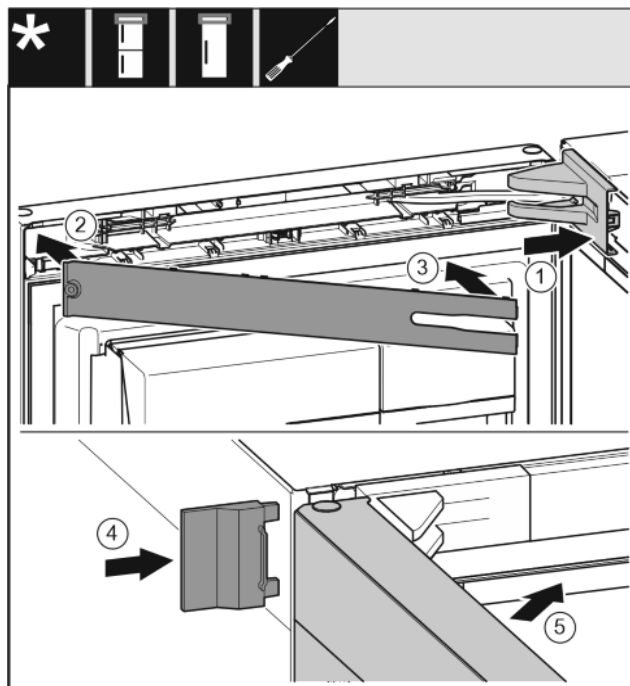


Fig. 40

- ▶ Position the bearing bracket and latch it in place. If necessary push it apart carefully. *Fig. 40 (1)*
- ▶ Position the panel. *Fig. 40 (2)*
- ▶ Swing in the panel and latch it into place. *Fig. 40 (3)*
- ▶ Slide on the outer cover. *Fig. 40 (4)*
- ▶ Close the upper door. *Fig. 40 (5)*

14 Connecting the appliance



WARNING

Failure to connect properly
Fire hazard.

- ▶ Do not use an extension cable.
- ▶ Do not use distributor blocks.

Connecting the appliance

NOTICE

Failure to connect properly

Damage to the electronics.

► Do not use a standalone inverter.

► Do not use an energy saving plug.

Note

Only use the power connection lead supplied.

► A longer power connection lead can be ordered from Customer Service.

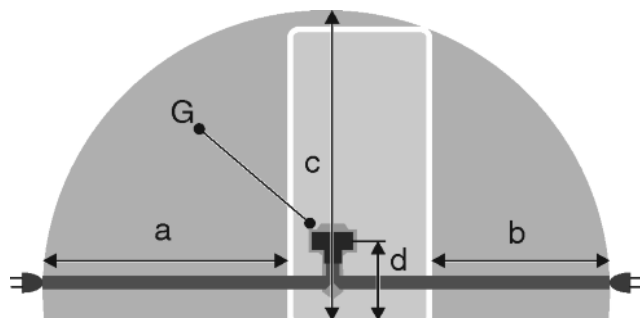


Fig. 41

a	b	c	d	G
~ 1800 mm	~ 1400 mm	~ 2100 mm	~ 200 mm	Appliance plugs

Ensure that the following conditions are met:

- The type of current and voltage at the installation site complies with the information on the type plate .
- The socket is earthed according to the regulations and fused.
- The fuse tripping current is between 10 and 16 A.
- The socket is easily accessible.
- The socket is outside the back of the appliance area in the specified area *Fig. 41 (a, b, c)*.
- Check the electrical connection.
- Insert the appliance plug *Fig. 41 (G)* into the back of the appliance. Ensure that it clicks into place.
- Connect the power plug to the power supply.
- ▷ The Liebherr logo appears on the screen.
- ▷ The display switches to the standby symbol.



home.liebherr.com/fridge-manuals

EN fridge/freezer

Issue date: 20210929
Part number index: 7080544-00