

Quality, Design and Innovation





LIEBHERR

Contents		
1	Appliance at a glance	3
1.1	Scope of supply	3
1.2 1.3	Overview of appliances and equipment	3 4
1.3	Special featuresRetrofitting casters	4
1.4	Range of use of appliance	4
1.5	Appliance noise emissions	5
1.6	Conformity	5
1.7 1.8	SVHC substances according to REACH regulation. EPREL database	5 5
2	General safety instructions	5
3	Functionality of the Touch & Swipe display	7
3.1	Navigation and symbol explanation	7
3.2 3.3	Menus	7 8
4	Putting into operation	8
4 .1	Installation conditions	8
4.2	Appliance dimensions	9
4.3	Transporting appliance	9
4.4 4.5	Unpacking appliance Connect power cable	10 10
4.6	Installing appliance	10
4.7	Setting up the appliance so it is level	10
4.8	Installing multiple appliances	10
4.9 4.10	After installation	10 11
4.11	Reversing the door opening direction	11
4.12	Aligning the door	20
4.13	Connecting the appliance to the power supply	20
4.14 4.15	Switching on appliance (first use)	21 21
4.15	Using equipment Centre grid shelf	22
5	Storage	22
5.1	Information regarding storage	22
5.2	Storage times	22
6	Controls	22
6.1	Control and display elements	22
6.1.1 6.1.2	Status display Display symbols	. 23
6.1.3	Acoustic signals	
6.2	Appliance functions	23
6.2.1	Notes on the appliance functions	. 23
6.2.2 6.2.3	Switching appliance on and off	. 23
6.2.4	Temperature Temperature recording	
6.2.5	Lighting	
6.2.6	Presentation light	. 25
6.2.7 6.2.8	SuperCool	. 25
6.2.9	HumiditySelect Display lock	
6.2.10	Access codes	
6.2.11	Maintenance interval reminder	27
6.2.12	Language	27
6.2.13 6.2.14	Temperature unit	
6.2.15	LAN connection	
6.2.16	Device information	
6.2.17	Operating hours	
6.2.18 6.2.19	Software Defrosting	
6.2.20	Door alarm	
6.2.21	Light alarm	. 31
6.2.22	Demo mode	
6.2.23 6.3	Resetting to factory settings Message	32 32
6.3.1	Warnings	
6.3.2	Reminders	
7	Features	34

12	Additional information	37
11 11.1 11.2	Preparing appliance for disposal Disposing of the appliance in an environmentally friendly manner	37 37 37
10	Shutting down	37
9 9.1 9.2 9.3 9.4	Customer help	35 35 36 36 36 36
8 8.1 8.2	Maintenance Defrosting appliance Cleaning the appliance	34 34 34
7.1	Safety lock	34

The manufacturer is continually working on the further development of all types and models. Please be aware that we reserve the right to make changes to the shape, equipment and technology.

Symbol Explanation Read instructions Please read the inform

Please read the information in these instructions carefully to understand all of the benefits of your new appliance.



Additional information on the Internet

The digital manual with additional information and in other languages can be found via the QR code on the front of the manual or by entering the service number at home.liebherr.com/fridge-manuals.

The service number can be found on the serial tag:

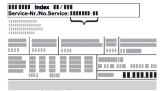


Fig. Example illustration



Check appliance

Check all parts for transport damage. If you have any complaints, please contact your agent or customer service.



Differences

These instructions apply to a range of models, so differences are possible. Sections that apply to certain models only are marked with an asterisk (*).



Instructions and results

Instructions are marked with a \triangleright . Results are marked with a \triangleright .



Videos

Videos about the appliances are available on the YouTube channels of Liebherr-Hausgeräte.

Open source licences:

The appliance contains software components that use open source licences. Information on the open source licences used can be found here: home.liebherr.com/open-source-licences

These operating instructions apply to:

- FRPSvh 1402
- FRPSvh 1412
- FRPSvh 6501
- FRPSvh 6511

1 Appliance at a glance

1.1 Scope of supply

Check all parts for transport damage. If you have any complaints, please contact your dealer or Customer Service. (see 9.3 Customer Service)

The delivery comprises the following parts:

- Free-standing appliance
- Equipment *
- Installation materials *
- Operating instructions
- Service brochure
- Quality certificate *
- Mains cable

1.2 Overview of appliances and equipment

FRPSvh 6501

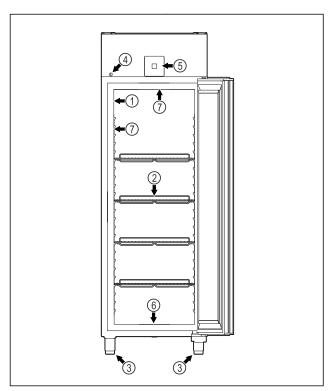


Fig. 1 Example illustration

- (1) Type plate
- (2) Grid shelves
- (3) Adjusting feet
- (4) Lock

- (5) Control elements and temperature display
- (6) Drain hole for water from cleaning
- (7) Interior lighting *

FRPSvh 6511

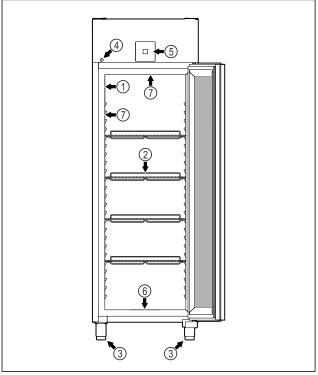


Fig. 2 Example illustration

- (1) Type plate
- (2) Grid shelves
- (3) Adjusting feet
- (4) Lock

- (5) Control elements and temperature display
- 6) Drain hole for water from cleaning
- (7) Interior lighting *

FRPSvh 1402

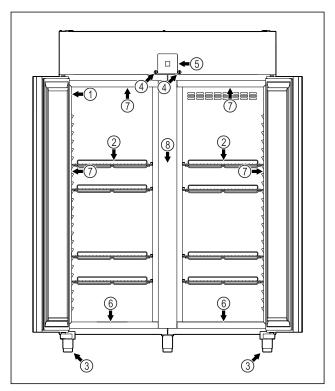


Fig. 3 Example illustration

- (1) Type plate
- (2) Grid shelves
- (3) Adjusting feet
- (4) Lock

- (5) Control elements and temperature display
- (6) Drain hole for water from cleaning
- (7) Interior lighting *
- (8) Centre grid shelf

FRPSvh 1412

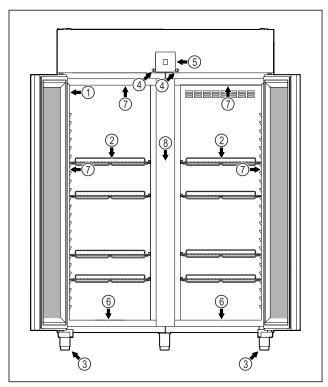


Fig. 4 Example illustration

- (1) Type plate
- (2) Grid shelves
- (3) Adjusting feet
- (4) Lock

- (5) Control elements and temperature display
- (6) Drain hole for water from cleaning
- (7) Interior lighting *
- (8) Centre grid shelf

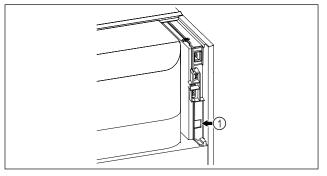


Fig. 5 Example illustration

(1) LAN interface *

1.3 Special features

Note

available from Accessories are Customer (see 9.3 Customer Service) and the Liebherr-Hausgeräte store at home.liebherr.com/shop/de/deu/zubehor.html.

SmartModule

The appliance is fitted with a SmartModule.

This is a WiFi and LAN interface for the connection between the appliance and an external documentation and alarm system such as Liebherr SmartMonitoring.

Liebherr SmartMonitoring Dashboard is not available in all countries. Check availability via the QR code (see 6.2.14 WiFi connection) by entering your model.

1.3 Retrofitting casters



DANGER

Conversion from adjustable feet to casters! Risk of death and damage due to tipping. Some appliances may only be operated with adjustable feet.

- ▶ Do **not** convert the appliance to casters.
- ► Please note the following list.

Appliances for which you may not replace adjustable feet with casters: FRPSvg 1412

FRPSvh 1412

FRPSrh 1412



DANGER

Conversion from adjustable feet to casters!

Risk of death and damage due to tipping. If you convert to casters, you must pay attention to the fitting position of the

- ► Fit casters to the front of the appliance.
- ▶ Fit the fixed caster on the rear of the appliance.
- ► Please note the following list.

Appliances where you need to pay attention to the fitting position of the casters:

FRPSvg 6511

FRPSvh 6511

FRPSrh 6511

1.4 Range of use of appliance

Intended use

This refrigerator is appropriate for the professional storage of chilled foodstuffs. This appliance is not intended for the presentation or removal of foodstuffs by customers.

The appliance is only designed for use in closed rooms.

All other types of use are not permitted.

Foreseeable incorrect use

The following uses are expressly forbidden:

- Storage and refrigeration of:
 - Chemically unstable flammable or corrosive substances
 - Medicines. blood plasma, laboratory preparations or similar substances and products based on the Medical Device Directive 2007/47/EC
- Use in potentially explosive atmospheres
- Use outdoors or in areas exposed to dampness and splashing water
- Use in residential areas because adequate protection of radio reception cannot be ensured in such environments.*

Improper use of the appliance will result in goods stored being damaged or spoiled.

Climate classes

The applicable climate class for your appliance is printed on the type plate.

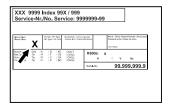


Fig. 6 Type plate

(X) The climate class states the ambient conditions in which the appliance can be operated safely.

Climate class (X)	Max. room temperature	Max. rel. humidity
3	+25 °C	60 %
4	+30 °C	55 %
5	+40 °C	40 %
7	+35 °C	75 %

Note

The minimum permitted room temperature at the setup location is +10 °C.

At limit conditions, slight condensation may form on the glass door (depending on the equipment) and on the side walls.

Recommended temperature setting:		
Temperature class (Z)	Temperature setting	
L1	-18 °C	
Ml	+5 °C	

1.5 Appliance noise emissions

The A-weighted emission sound pressure level during operation of the appliance is under 70 dB(A) (sound power rel. 1 pW).

1.6 Conformity

The coolant circuit has been tested for leak-tightness. The appliance complies with the relevant safety regulations.

EU Declaration of Conformity		
Manufacturer/Exhibitor:	LIEBHERR-HAUSGERÄTE LIENZ GMBH	

Address: A-9900 Lienz, Dr. Hans Liebherr Straße 1

The designated product complies with the provisions of the following European directives and regulations:

(EU) 2019/2020, (EU) 2015/1095, (EU) 2015/1094, (EU) 2017/1369, 2006/42/EC, 2014/30/EU, 2009/125/EC, 2011/65/EU

EU Declaration of Conformity

The built-in radio module complies with Directive 2014/53/EU. Information on the radio module (see 9.1 Technical specifications).

The full text of the EU Declaration of Conformity is available at the following web address: www.liebherr.de

1.7 SVHC substances according to REACH regulation

You can check whether your appliance contains SVHC substances according to REACH regulation at the following link: home.liebherr.com/de/deu/de/liebherr-erleben/nach-haltigkeit/umwelt/scip/scip.html

1.8 EPREL database

Details about the labelling of energy consumption and ecodesign requirements will be available on the European Product Database (EPREL) from 1 March 2021. You can access the product database at the following link: https://eprel.ec.europa.eu/. You will be asked to enter the model identification. The model identification can be found on the type plate.

2 General safety instructions

Please keep these operating instructions in a safe place so you can refer back to them at any time.

If you pass the appliance on, please hand these operating instructions to the next user. Read these operating instructions carefully before use to ensure safe and correct use of the appliance. Follow the instructions, safety instructions and warning messages included at all times. They are important for ensuring you can operate and install the appliance safely and without any problems.

Danger for the user:

- This device can be used by children aged 8 and above and people with impaired physical, sensory or mental abilities or with a lack of experience and knowledge provided that they are supervised or have received instruction in the safe use of this appliance, and about the resulting hazards. Children must not play with this appliance. Cleaning and user maintenance work must not be carried out by children without adult supervision.
- The socket must be easily accessible so that the appliance can be disconnected quickly from the electricity supply in an emergency. It must not be located in the area behind the appliance.

General safety instructions

- When disconnecting the appliance from the supply, always take hold of the plug. Do not pull the cable.
- In the event of a fault pull out the mains plug or deactivate the fuse.
- WARNING: Do not damage the mains power cable. Do not operate the appliance with a defective mains power cable.
- WARNING: Multiple sockets/distributors and other electronic equipment (such as halogen transformers) must not be placed or operated at the rear of the appliance.
- WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Only customer service or other specially trained staff may repair or perform other operations on the appliance.
- Only assemble, connect and dispose of the appliance according to the instructions.

Fire hazard

- The coolant used (information on the model plate) is ecofriendly but also flammable Any leaking coolant may ignite.
 - WARNING: Do not damage refrigeration circuit.
 - Do not handle ignition sources inside the appliance.
 - WARNING: Do not use electrical appliances in the fridge compartment which do not comply with the design recommended by the manufacturer.
 - If the refrigerant leaks: remove any naked flames or ignition sources from the vicinity of the leakage point. Properly air the room. Inform customer services.
- Do not operate the appliance close to explosive gases.
- Do not store or use petrol or other flammable gases and liquids close to the appliance.
- Do not store any explosive substances, such as aerosol containers with flammable propellant gas, in the appliance. To identify these spray cans, look for the list of contents printed on the can, or a flame symbol. Gases possibly escaping may ignite due to electrical components.
- Keep burning candles, lamps and other items with naked flames away from the appliance so that they do not set the appliance on fire.
- Please be sure to store alcoholic drinks or other packaging containing alcohol in tightly closed containers. Any alcohol that

leaks out may be ignited by electrical components.

Danger of tipping and falling:

- Do not misuse the plinth, drawers, doors etc. as a step or for support.

Danger of frostbite, numbness and pain:

 Avoid prolonged skin contact with cold surfaces or refrigerated/frozen goods or take protective measures, e.g. wear gloves.

Danger of injury and damage:

- WARNING: Do not use mechanical equipment or other methods to speed up the defrosting process other than those recommended by the manufacturer.
- WARNING: Risk of injury due to electric shock! There are live electrical parts under the cover.
 - Only have the LED interior lighting replaced or repaired by customer service or other suitably trained professionals.
- NOTICE: Appliance must only be used using original manufacturer accessories or using accessories from other providers approved by the manufacturer. The user bears the risk of using accessories which are not approved.

Risk of crushing

 Do not hold the hinge when opening and closing the door. Fingers may get caught.

Specialist personnel qualifications:

Specialist personnel are persons who, on account of their specialist training, knowledge and experience as well as their knowledge of the relevant standards, are able to assess and perform the work assigned to them and identify potential hazards. They must have training, instruction, and authorisation to work on the appliance.

Symbols on the appliance:



This symbol may be located on the compressor. It relates to the oil in the compressor and makes reference to the risk that: **Swallowing or inhaling** can be fatal. This advice is only relevant to recycling. There is no danger in normal operation.



WARNING: Danger of fire / flammable materials. This symbol is located on the compressor and indicates the danger of flammable materials. Do not remove the sticker.



This or a similar sticker may be located on the rear of the appliance. This sticker indicates that there are vacuum insulation panels (VIP) or perlite panels in the door and/or housing. This advice is only relevant to recycling. Do not remove the sticker.

Please note the warning messages and other specific advice in the other chapters:

<u>^</u>	DANGER	Indicates an immediately hazardous situation which will lead to death or serious injuries if it is not avoided.
<u>^</u>	WARNING	Indicates a hazardous situation which will lead to death or serious injuries if it is not avoided.
<u>^</u>	CAUTION	Indicates a hazardous situation which will lead to minor or moderate injuries if it is not avoided.
	NOTICE	Indicates a hazardous situation which may lead to damage to property if it is not avoided.
	Note	Indicates useful instructions and tips.

3 Functionality of the Touch & Swipe display

You operate your appliance using the Touch & Swipe display. You select appliance functions in the Touch & Swipe display (hereafter referred to as display) by tapping them. If you do not perform any action on the display for 10 seconds, the display either jumps back to the higher-level menu or directly to the status display.

3.1 Navigation and symbol explanation

In the illustrations, different symbols are used to navigate the display. The following table describes these symbols.

Symbol	Description
	Briefly touch the display: Activates/deactivates function. Confirms selection. Opens submenu.
(38)	Touch the display for a specified time (e.g. 3 seconds): Activates/deactivates function or value.
	Swipe left or right: Navigate in the menu.
Back	Briefly touch the Back symbol: Jumps back one menu level.

Symbol	Description
$\langle \gamma \rangle$	Press and hold the Back symbol for 3 seconds:
Back (3S)	Jumps back to the status display.
	Briefly touch the Back symbol at the top left:
	Jumps back one menu level.
→	Arrow with clock:
(Ý)	It takes more than 10 seconds for the following message to appear in the display.
\rightarrow \rightarrow	Arrow with a time indication:
2s 5s 10s	It takes the specified amount of time until the following message appears in the display.
	"Open Settings menu" symbol:
={\$}	Navigates to the Settings menu and opens the settings menu.
	If necessary: Navigate to the desired function in the Settings menu.
	(see 3.2.1 Opening the Settings menu)
	"Open Advanced menu" symbol:
	Navigates to the Advanced menu and opens the advanced menu.
	If necessary: Navigate to the desired function in the Advanced menu.
	(see 3.2.2 Opening the expanded menu)
No action for	
10 seconds	the display for 10 seconds, the display either jumps back to the higher-level menu or directly to the status display.
Open door and close it again.	If you open the door and immediately close it again, the display jumps directly back to the status display.


Note: Illustrations of the display are shown in the English version.

3.2 Menus

The appliance functions are distributed over various menus:

Menu	Description
Main menu	When you switch the appliance on, you are automatically in the main menu.
	From here you can navigate to the most important appliance functions, to the Settings menu and to the Advanced menu.
Settings	The Settings menu contains additional appliance functions for setting up your appliance.
Settings menu	

Putting into operation

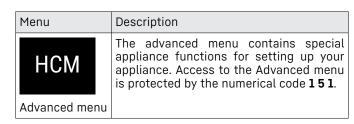

3.2.1 Opening the Settings menu

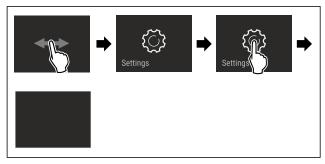


Fig. 7 Example illustration

- Carry out action steps according to the illustration.
- > Settings menu is open.
- ▶ If necessary: Navigate to the desired function.

3.2.2 Opening the expanded menu

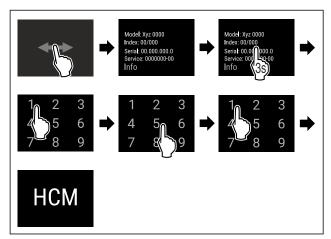


Fig. 8 Access with numerical code 151

- ► Carry out action steps according to the illustration.
- $\, \triangleright \,$ The expanded menu is open.
- ▶ If necessary: Navigate to the desired function.

3.3 Sleep mode

If you do not touch the display for 1 minute, the display switches to sleep mode. In sleep mode, the display brightness is dimmed.

3.3.1 Ending sleep mode

- ► Touch the display briefly with your finger.
- Sleep mode is ended.

4 Putting into operation

4.1 Installation conditions



WARNING

Fire hazard due to dampness!

If live parts or the mains lead become damp this may cause short circuits.

► The appliance is designed for use in enclosed areas. Do not operate the appliance outdoors or in areas where it is exposed to splash water or damp conditions.

4.1.1 Installation location



WARNING

Leaking coolant and oil!

Fire. The coolant contained in the appliance is eco-friendly, but also flammable. The oil contained in the appliance is flammable. Escaping coolant and oil can ignite if the concentration is high enough and in contact with an external heat source.

- ▶ Do not damage the pipelines of the coolant circuit and the compressor.
- Do not install appliance in direct sunlight, next to an oven, radiator or similar.
- The best place for installation is a dry and well ventilated room.
- If the appliance is installed in a very humid environment, condensation can form on the outside of the appliance.
 Always ensure good airflow and ventilation in the installation location.
- The more refrigerant there is in the appliance, the larger the space it is installed in must be. If the space is too small, any leak may create a flammable mixture of gas and air. For every 8 g of refrigerant, the installation space must be at least 1 m³. Information regarding the refrigerant can be found on the type plate inside the appliance.
- The floor of the location must be horizontal and even.
- The installation location must be able to withstand the weight of the appliance plus weight when stocked to maximum level. (see 9.1 Technical specifications)
- Use in hazardous areas is not permitted.

4.1.2 Electrical connection



WARNING

Danger of fire due to incorrect positioning!

If the mains cable or plug touches the back of the appliance, the vibration can damage the mains cable or the plug resulting in a short circuit.

- ▶ Make sure the mains cable is not trapped under the appliance when you position the appliance.
- ► Stand the appliance so that it is not touched by connectors or main cables.
- ▶ Do not connect any appliances to sockets in the area of the back of the appliance.
- Do not place and operate multi-sockets/power distributors and other electronic devices (such as halogen transformers) at the back of the appliances.

4.2 Appliance dimensions

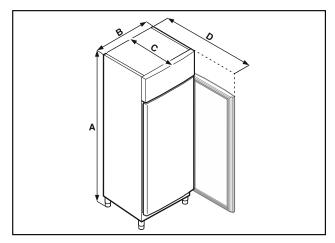


Fig. 9 Example illustration

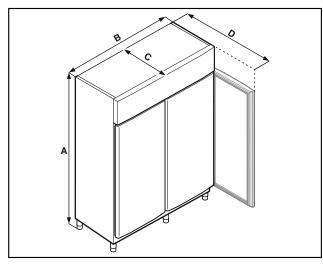


Fig. 10 Example illustration

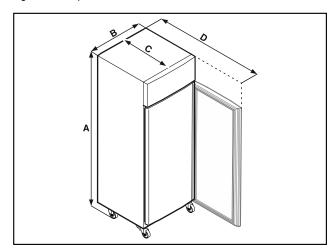


Fig. 11 Example illustration

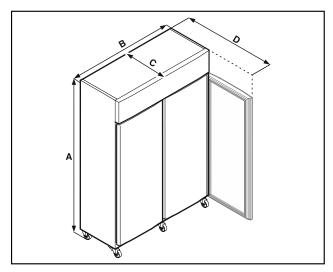


Fig. 12 Example illustration

	FRPSvh 1402 FRPSvh 1412	FRPSvh 6501 FRPSvh 6511
A	Feet: 2115 mm	Feet: 2115 mm
	Castors: 2150 mm	Castors: 2150 mm
В	1427 mm	697 mm
С	867 mm	867 mm
D	1500 mm	1500 mm

A = appliance height including feet (minimum) / castors

B = appliance width without handle

C = appliance depth without handle

D = appliance depth with door open

4.3 Transporting appliance



WARNING

Risk of injury due to broken glass!*

When transporting at an altitude of more than 1500 m, the glass panes of the door may break. This can result in sharpedged fragments, which can cause serious injuries.

► Take appropriate protective action.



DANGER

Risk of injury and damage due to heavy appliance!

► Always transport the appliance with at least two people.



DANGER

Risk of injury and damage due to the appliance tipping over!

▶ Pay attention to uneven floors and ramps when transporting appliances.

Note when transporting the appliance:

- ► Transport the appliance upright.
- ▶ If necessary: Dismantle two-door appliances for transport.

During first use:

► Transport the appliance packaged.

When transporting appliances after initial commissioning (e. g. moving or cleaning):

- ► Empty the appliance.
- Secure the door against unintentional opening.

Putting into operation

4.4 Unpacking appliance

- ► Check the appliance and the packaging for damage during transport. Contact the supplier immediately if you suspect any damage. Do not connect appliance to the power supply.
- ▶ Remove all packaging materials from the rear or the side walls of the fridge that may prevent proper installation or prevent air flow and ventilation.

4.5 Connect power cable

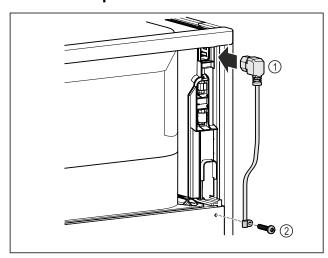


Fig. 13

- ▶ IEC socket of the power cable Fig. 13 (1) on the rear side of the appliance.
- ► Install mains tension relief. Fig. 13 (2)

4.6 Installing appliance



CAUTION

Risk of injury and damage.

► Use 2 people to install appliance.



CAUTION

Risk of injury and damage.

The door can knock against the wall and become damaged as a result. In the case of glass doors, the damaged glass can cause injuries.

- ▶ Protect the door from knocking against the wall. Attach door stopper, e.g. felt stopper, to the wall.
- ► Connect all necessary components (e.g. mains cable) to the back of the appliance and route to the side.

Note

Cables can be damaged.

- Do not jam the cable when pushing the appliance back.
- ► The spacing between the top edge of the device and the room ceiling must be at least 300 mm.

4.7 Setting up the appliance so it is level

NOTICE

Appliance body is deformed and door does not close.

- ► Align appliance horizontally and vertically.
- ► Compensate for uneven floors using adjustable feet.



WARNING

Incorrect height adjustment of the adjustable foot!
Can cause severe or even fatal injury. Incorrect height adjustment can cause the bottom part of the adjustable foot to come loose and the appliance to tip over.

▶ Do not unscrew the adjustable foot too far.

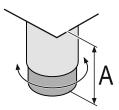


Fig. 14 The adjustable foot can be adjusted from A = 115 mm (4 1/2 in) to 175 mm (6 7/8 in).*

Raising appliance:

► Turn adjustable foot clockwise.

Lowering appliance:

► Turn adjustable foot anticlockwise.

4.8 Installing multiple appliances

NOTICE

Risk of damage due to condensation between the side walls

- ► Do not install the appliance directly next to another fridge.
- ▶ Install appliances with a space 3 cm between appliances.
- ▶ Only install multiple appliances up to temperatures of 35 °C and 65% humidity next to one another.
- ► At higher levels of humidity, increase space between appliances.

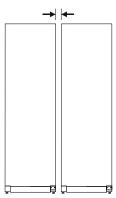


Fig. 15 Side-by-side installation

Note

A side-by-side kit is available as an accessory via Liebherr Customer Service. (see 9.3 Customer Service)

4.9 After installation

- ► Peel off the protective films. *
- ► Clean appliance. (see 8.2 Cleaning the appliance)
- ► If necessary: Disinfect the appliance.
- Keep the invoice so you have the appliance and dealer information available if needed.

4.10 Disposing of packaging



WARNING

Danger of suffocation due to packing material and plastic film!

▶ Do not allow children to play with packing material.

The packaging is made of recyclable materials:

- corrugated board/cardboard
- expanded polystyrene parts
- polythene bags and sheets
- polypropylene straps
- nailed wooden frame with polyethylene panel*
- ► Take the packaging material to an official collecting point.

4.11 Reversing the door opening direction

4.11.1 Safety notes



WARNING

Risk of injury if the door is not reversed correctly!

Replace the door hinge with specialist personnel.



WARNING

Risk of injury and material damage due to heavy door!

- Only perform the conversion if you can carry a weight of 45 kg.
- Always have someone help you carry out the conversion.


NOTICE

Live parts!

Damage to electrical components.

▶ Remove the mains plug before you reverse the door.

4.11.2 Tools

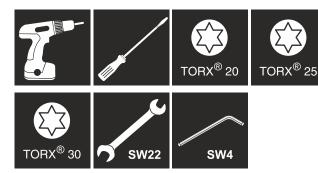

4.11.3 Opening the aggregate cover

▶ Open the door.

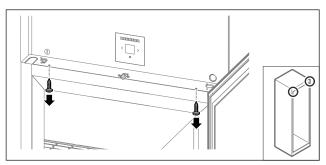


Fig. 16

► Remove the screws.

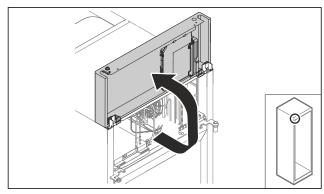


Fig. 17

- ► Lift the aggregate cover.
- ► Hold on to the cover.

-or-

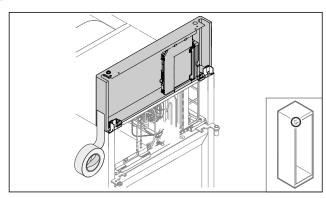


Fig. 18

Fix the cover.

4.11.4 Removing the door

4.11.4 Removing the door (glass door)*

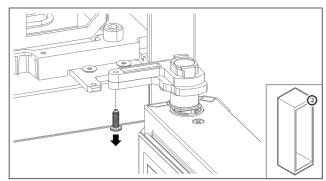


Fig. 19

► Remove the screw.

Putting into operation

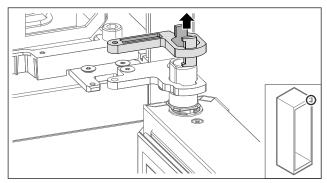


Fig. 20

► Remove the swap bearing block lock.

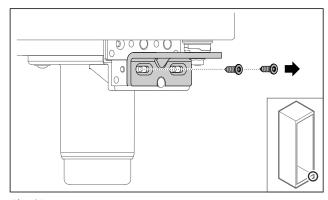


Fig. 21

► Remove the screws.

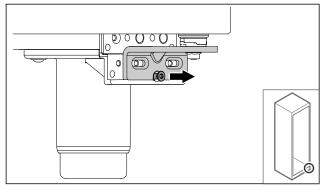


Fig. 22

► Loosen screw.

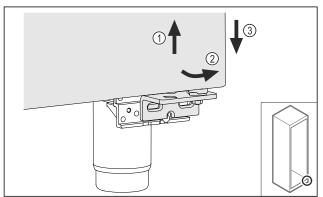


Fig. 23

- ▶ Lift the door slightly Fig. 23 (1), tilt it forwards at the bottom Fig. 23 (2) and lower it Fig. 23 (3).
 ▶ Place the door on a soft surface.
- \triangleright Glass door is removed.

4.11.4 Removing the door (foamed door)*

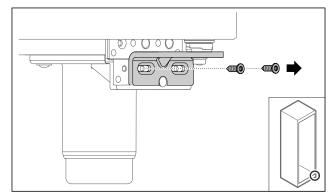


Fig. 24

► Remove the screws.

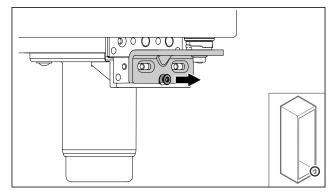


Fig. 25

Loosen screw.

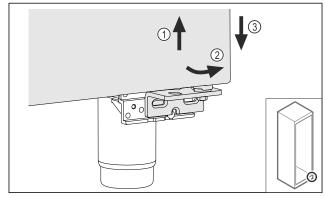


Fig. 26

- Lift the door slightly Fig. 26 (1), tilt it forwards at the bottom Fig. 26 (2) and lower it Fig. 26 (3).
- ▶ Place the door on a soft surface.
- > Foamed door is removed.

4.11.5 Converting the lower locking system

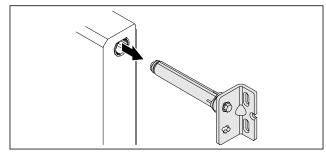


Fig. 27

▶ Pull the lower hinge bracket out of the door.

NOTICE

Danger of injury due to tensioned spring!

▶ Do not disassemble the door locking system Fig. 28 (1).

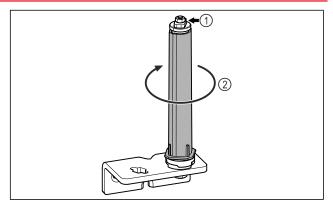


Fig. 28

- ► Turn the locking system *Fig. 28 (2)* until it clicks.
- ▶ Preload of the locking system is released.

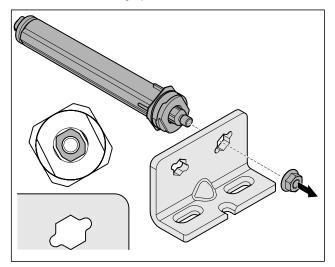


Fig. 29 Right-hinged

Loosen nut.

Note

Incorrect alignment of the height adjustment washers. Nuts no longer have sufficient hold.

► The washer must lock into the underside of the closing system.

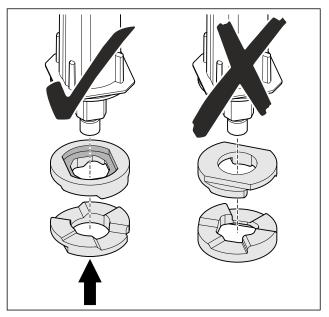


Fig. 30

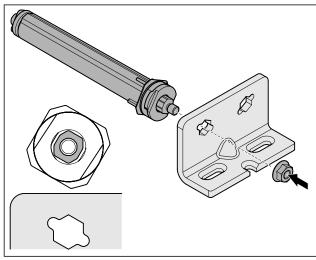


Fig. 31 Left-hinged

- ► Change over the closing system and tighten; observe the alignment of the closing system.

4.11.6 Converting the upper locking system

4.11.6 Converting the upper locking system (glass door)*

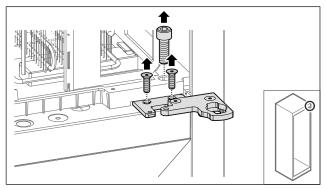


Fig. 32

► Remove the screws.

Putting into operation

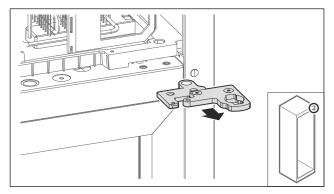


Fig. 33 ► Remove the two-part hinge bracket.

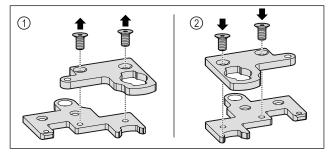


Fig. 34

- ▶ Disassemble the two-part hinge bracket. Fig. 34 (1)
- ► Reassemble the two-part hinge bracket rotated by 180°. Fig. 34 (2)

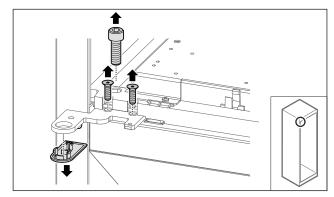


Fig. 35

► Remove the screws and cover.

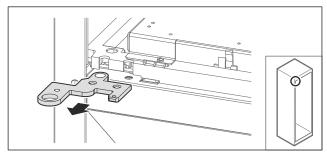


Fig. 36

► Remove the hinge bracket.

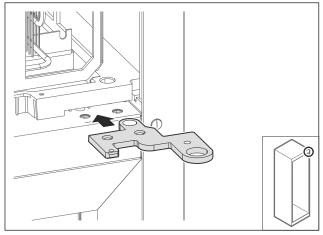


Fig. 37

► Re-locate the hinge angle by turning 180° to the opposite side.

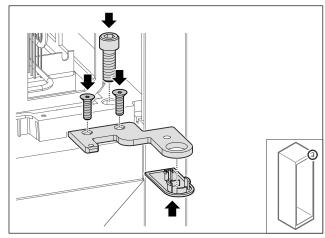


Fig. 38

- ► Tighten the hinge bracket.
- Put on the cover.

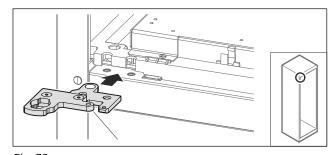


Fig. 39

► Re-locate the two-part hinge bracket to the opposite side.

Note

Do not pinch the cable.


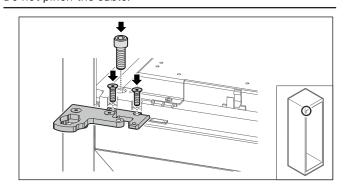


Fig. 40

- Tighten the two-part hinge bracket. Upper locking system has been converted.

4.11.6 Converting the upper locking system (foamed door)*

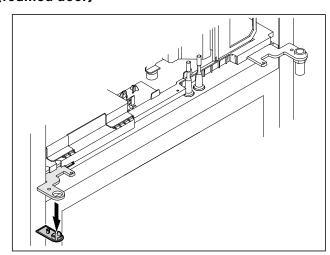

Remove cover.

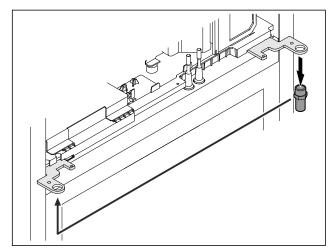


Fig. 42

- Re-locate the bolt in the hinge bracket. Tighten the bolt to a **torque of 12 Nm**.

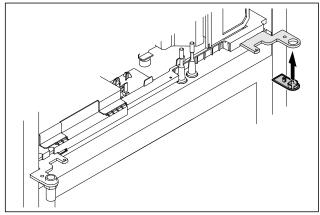


Fig. 43

- Put on the cover.
- □ Upper locking system has been converted.

4.11.7 Changing over the lock

4.11.7 Re-locating the lock (mechanical lock)



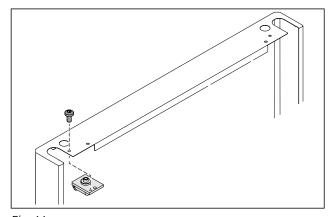


Fig. 44 ▶ Remove the screw and remove the lock.

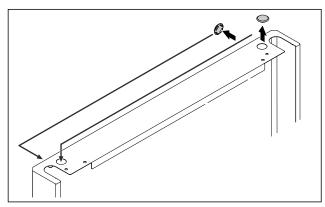

► Swap the covers to the opposite side.

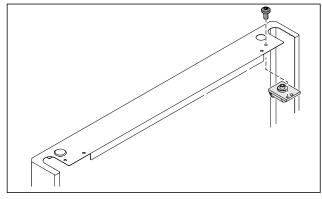

- ► Insert the lock and screw in place.
- ▶ Mechanical lock has been implemented.

Putting into operation

4.11.8 Re-locating the swap bearing block

4.11.8 Re-locating the swap bearing block (adjustable feet)*

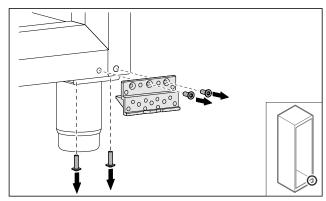


Fig. 47

▶ Remove the screws.

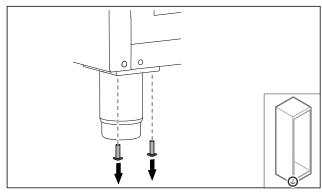


Fig. 48

► Remove the screws.

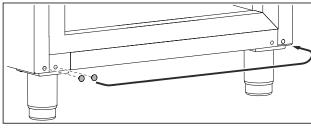


Fig. 49

► Remove the covers and swap them.

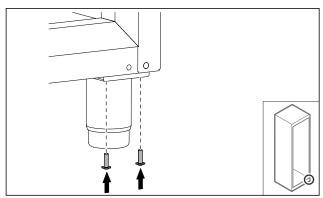


Fig. 50

► Tighten screws.

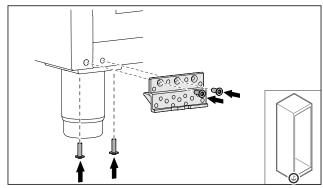


Fig. 51

- ► Screw on bearing bracket.
- > Swap bearing block is relocated.

4.11.8 Re-locating the swap bearing block (casters)*



WARNING

Danger of injury and damage due to appliance tipping over! Danger to life and material damage to appliance. If you remove the casters from the appliance, the appliance can tip over.

▶ Before performing a conversion on the appliance: Secure appliance against tipping over.

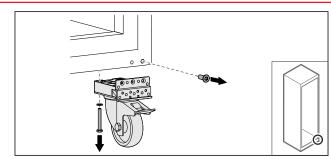


Fig. 52

Unscrew and remove casters.

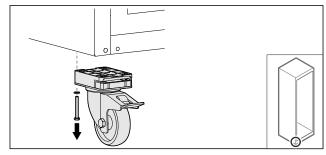


Fig. 53

▶ Unscrew and remove casters with bearing bracket.

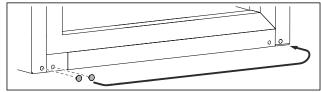


Fig. 54

► Swap over covers.

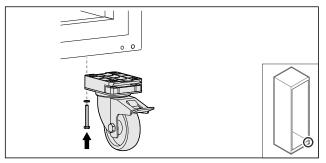


Fig. 55

► Screw on casters.


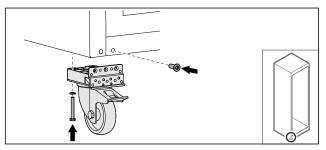


Fig. 56

- ▶ Screw on casters with bearing bracket.▷ Swap bearing block is relocated.

4.11.9 Converting the door


4.11.9 Converting the door (glass door)*

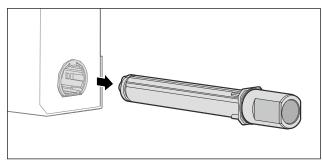

Pull the upper locking system out of the door.

Danger of injury due to tensioned spring!

▶ Do not disassemble the door locking system Fig. 58 (1).

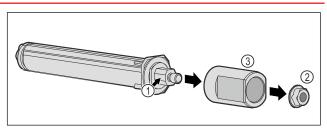

- Remove the Fig. 58 (2) nuts. Take off the Fig. 58 (3) sleeve.

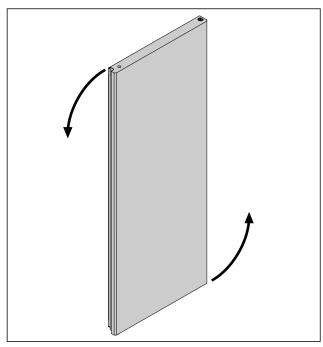


Fig. 59 Example illustration

► Turn the door 180°.

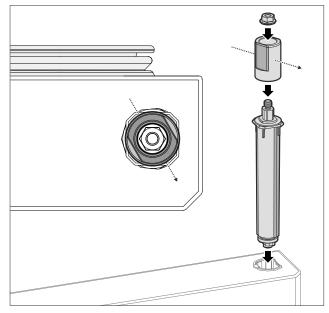


Fig. 60 Right stop

Putting into operation


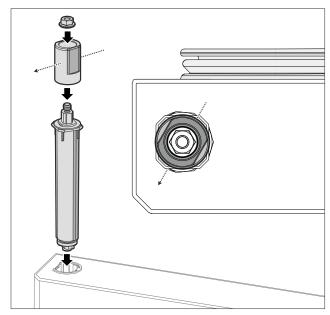


Fig. 61 Left stop

- ▶ Fit the upper locking system and insert on the hinge side, paying attention to the alignment of the sleeve.

4.11.9 Converting the door (foamed door)*

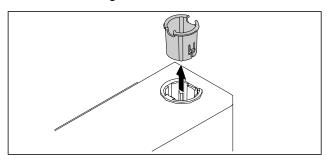

▶ Pull out the hinge bushing on the opposite side.

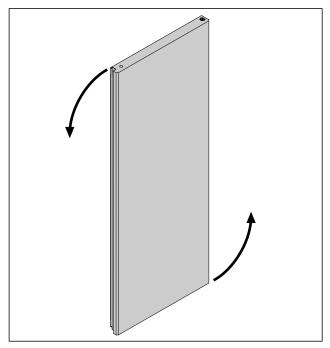


Fig. 63 Turn the door 180°.

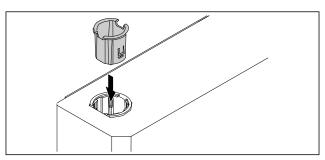


Fig. 64

- Insert the hinge bushing at the top of the hinge side (the flattened side faces outwards).

4.11.10 Fitting the lower locking system

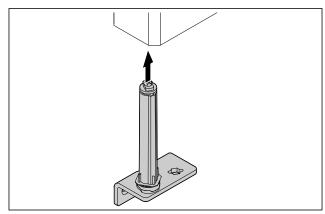


Fig. 65

► Slide the closing system into the door.


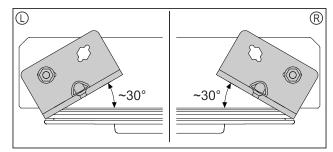


Fig. 66 Door from below


▷ Alignment of closing system installation for left-hinged (L) or right- hinged (R).

4.11.11 Fitting the door

4.11.11 Fitting the door (glass door)*

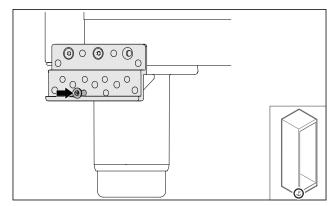

► Slightly tighten the screw.

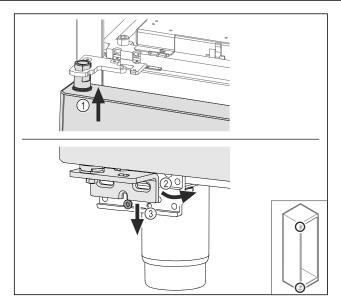

Insert the door slightly tilted at the top Fig.~68 (1), align the door straight Fig.~68 (2) and place it on the bottom of the swap bearing block screw Fig. 68 (3).

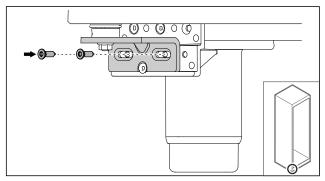


Fig. 69

Screw on the door.


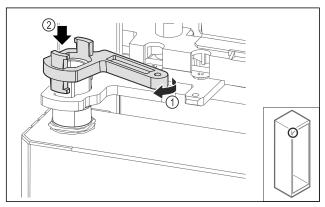


Fig. 70

Turn the swap bearing block lock slightly and Fig. 70 (1) place it on the sleeve Fig. 70 (2).

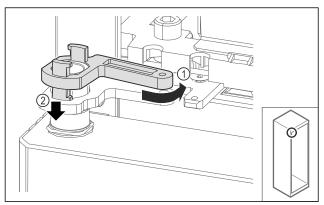

► Turn the swap bearing block lock back slightly Fig. 71 (1), press it down Fig. 71 (2) and lock it at the hinge bracket.


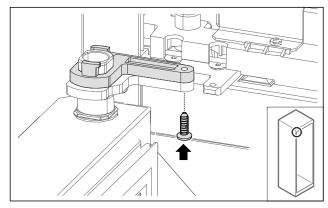


Fig. 72

- ► Open the door.
- ► Screw on the swap bearing block lock.

 □ Glass door is fitted.

4.11.11 Fitting the door (foamed door)*

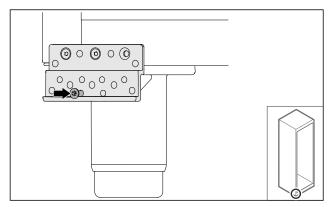

► Slightly tighten the screw.

Putting into operation

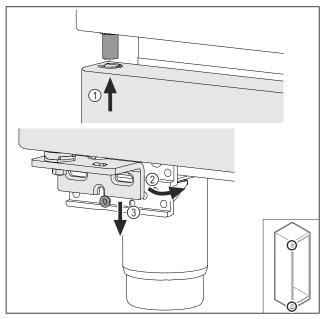


Fig. 74

▶ Insert the door slightly tilted at the top Fig. 74 (1), align the door straight Fig. 74 (2) and place it on the bottom of the swap bearing block screw Fig. 74 (3).

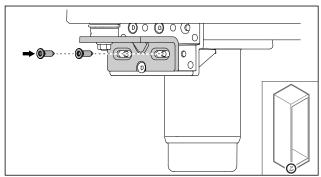


Fig. 75

- Screw on the door.
- ▶ Foamed door is fitted.

4.11.12 Closing the aggregate cover

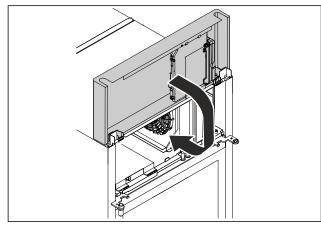


Fig. 76

► Close the aggregate cover.

Note

Do not pinch the cable.

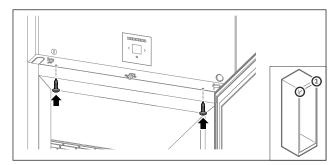


Fig. 77

- ► Screw on the aggregate cover.
- Close the door.
- > The door hinge has been changed.

4.12 Aligning the door

4.12.1 Aligning the door horizontally

If the door is not straight, you can adjust it on the lower hinge.

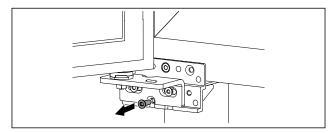


Fig. 78

► Remove the middle screw on the lower hinge.

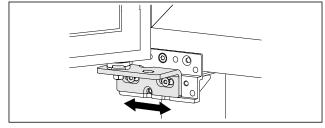


Fig. 79

- Slightly undo both screws and move the door with the hinge to the left or right.
- ► Fully tighten the screws (the middle screw is no longer needed).
- > The door is now straight.

4.13 Connecting the appliance to the power supply



WARNING

Danger of electric shock and injury due to damaged appliance or damaged mains cable!

Danger of cuts and fatal injuries. If the appliance or the mains cable is damaged during transport, you may be electrocuted. You could also cut yourself on damaged parts of the appliance housing.

- ► Check the appliance and the mains cable for damage after transport.
- Never put the appliance into operation if the appliance or the mains cable are damaged.
- ► Contact Customer Service.

You can connect your appliance to the mains using the power cable supplied separately. The mains power cable has an appliance coupler at one end and a mains plug at the other end.

Make sure that the following requirements are fulfilled:

- The appliance and power cable are undamaged.
- The appliance is set up in accordance with the regulations. (see 4.5 Connect power cable)
- Requirements for the electrical connection are met. (see 4.1 Installation conditions)
- Dimensions for connection in accordance with regulations are known and observed.
- Mains voltage and frequency correspond to the specifications on the type plate.
- The socket is earthed according to the regulations and fused.
- The fuse tripping current is between 10 A and 16 A.
- The socket is easily accessible and is not behind the appliance.

NOTICE

Danger of damage to incorrect operation!

Damage to the electrical components of the appliance.

Only use the supplied mains cable.




WARNING

Danger of fire due to incorrect connection! Burns.

Damage to the appliance.

- ▶ Do not use an extension cable.
- ▶ Do not use distributor blocks.

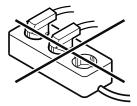

NOTICE

Danger of damage to incorrect connection! Damage to the appliance.

- ▶ Do not connect the appliance to a stand-alone inverter, e.g. solar power systems and petrol generators.
- ► Connect the mains cable plug to the power supply. Ensure that the plug is tightly in the socket.
- > The standby symbol appears in the display.
- > If no action occurs within 60 seconds: The standby symbol fades or disappears.
- The appliance is connected. For information regarding first use, see the following section or the operating instructions.

4.14 Switching on appliance (first use)

Ensure that the following requirements are met:

- Appliance is installed and connected.
- All adhesive strips, adhesive and protective films and transport locks are removed from inside and outside the appliance.



Fig. 80 Example illustration

- ► The standby symbol is flashing: Wait until the start process is complete.
- The display shows the standby symbol.

If the appliance has been supplied with factory settings, the screen language and the date/time first need to be set when using the appliance for the first time.

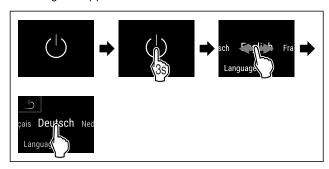


Fig. 81

- ► Carry out action steps according to the illustration.



Fig. 82 Status display

- ▶ The appliance is ready for operation once the temperature appears in the display.
- > The temperature display flashes until the set temperature is reached.

4.15 Using equipment

4.15.1 Inserting the snap strips

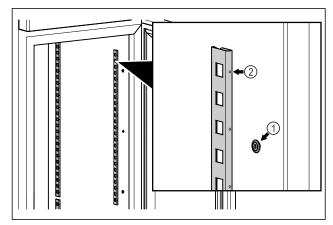


Fig. 83 Example illustration

► Hook the snap strips into the suspension *Fig. 83 (1)*. Mark *Fig. 83 (2)* must point forwards.

4.15.2 Inserting support rail

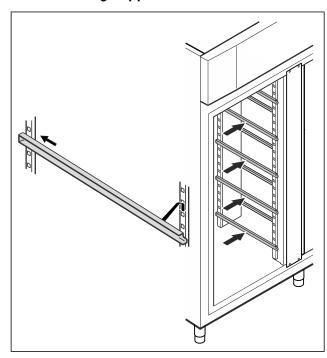


Fig. 84 Example illustration

► Insert support rail into rear snap-in bar and attach at front

4.16 Centre grid shelf

4.16.1 Inserting centre grid shelf

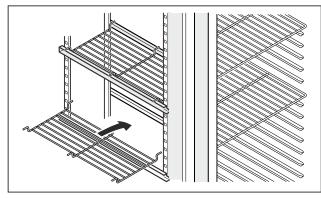


Fig. 85 Example illustration

▶ Place centre grid shelf on to support rails.

5 Storage

5.1 Information regarding storage

Note

Failure to follow these guidelines can lead to food becoming spoiled.

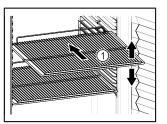


Fig. 86 Example illustration

When stocking observe the following:

- ☐ If there are adjustable shelves Fig. 86 (1), position them as required.
- Observe maximum load weight. (see 9.1 Technical specifications)
- ☐ Do not load appliance until storage temperature has been reached (maintain cold chain).
- ☐ Refrigerated goods must not touch the rear wall.
- ☐ Refrigerated items do not protrude beyond the shelves.
- ☐ Keep liquids in closed containers.
- □ Package raw meat or fish in clean, closed containers. This will prevent meat or fish from touching or dripping onto other food.
- ☐ Leave space when storing items for refrigeration to ensure good air circulation.
- Do not stack refrigerated products above the indicated

This is important for free air circulation and even temperature distribution in the interior.

5.2 Storage times

The best-before date specified on the packaging should be used as the reference point for the storage time.

6 Controls

6.1 Control and display elements

The display provides a quick overview of the current appliance status, the temperature setting, the status of functions and settings as well as alarm and error messages.

Operation takes place directly on the Touch & Swipe display by swiping and touching.

Functions can be activated or deactivated and setting values can be changed.



Fig. 87 Touch & Swipe display
(1) Status display

6.1.1 Status display





Fig. 88 Status display

- (1) Temperature
- (3) SuperCool status
- (2) Defrosting status

The status display is the output display.


It displays the temperature in the middle and three symbols in the lower area. The status display can show other display symbols.

Navigation to the functions takes place from the status display.

6.1.2 Display symbols

Display symbols provide information about the status of the appliance.

Appliance status
Standby symbol
Appliance is switched off.
Standby symbol (flashing)
Appliance is starting up.
Temperature (flashing)
Target temperature not yet reached. Appliance cooling to temperature set.
D in the display
The appliance is in demo mode.
Maintenance display (yellow)
The time interval set has expired.
Full data memory (yellow)
The data memory (999 hours) is full. From now, the oldest data will be overwritten.
Error symbol (red)
Appliance is in error state.
Background (blue)
Active setting or active function
Bar (increasing)
Press for 3 seconds to activate setting.

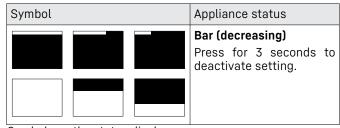

Symbols on the status display

6.1.3 Acoustic signals

A signal sounds in the following cases:

- If a function or a value is confirmed.
- If a function or a value can either not be activated or not deactivated.
- As soon as an error occurs.
- If there is an alarm message.

The alarms can be switched on and off in the customer menu.

6.2 Appliance functions

6.2.1 Notes on the appliance functions

The appliance functions are set at the factory so that your appliance is fully functional.

Before you alter, activate or deactivate the device functions, make sure that the following requirements are met:

- ☐ You have read and understood the descriptions of how the display works. (see 3 Functionality of the Touch & Swipe display)
- ☐ You have familiarised yourself with the operating and display elements of your appliance. (see 6.1 Control and display elements)

6.2.2 Switching appliance on and off



This function makes it possible to switch the entire appliance on and off.

Switching on appliance

If demo mode is not activated:



Fig. 89

► Carry out action steps according to the illustration.

If demo mode is activated:

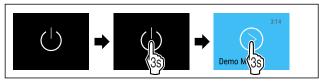


Fig. 90

► Carry out action steps according to the illustration.

Note

Deactivate demo mode before the countdown has finished.

Controls



Fig. 91 Status display

> The temperature appears in the display.

Switching off appliance



Fig. 92

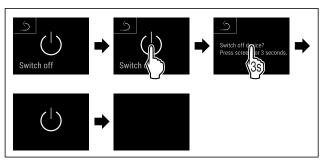


Fig. 93

- ► Carry out action steps according to the illustration.
- > Standby symbol is shown in the display.
- > The display switches off automatically after around 10 minutes.

6.2.3 Temperature

The temperature depends on the following factors:

- How often the door is opened
- How long the door is open for
- The room temperature of the installation site
- The type, temperature and amount of refrigerated food

Note

The temperature may differ from the temperature displayed in some areas of the interior.

At the correct temperature, cooled produce will keep for longer. This avoids disposing of food unnecessarily.

Setting temperature

The following steps describe how to increase the temperature, e.g. from 5 $^{\circ}\text{C}$ to 6 $^{\circ}\text{C}.$



Fig. 94

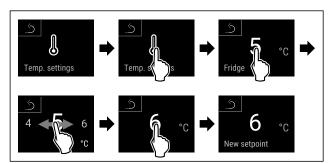


Fig. 95

► Carry out action steps according to the illustration.

▷ Temperature is set.

6.2.4 Temperature recording



The appliance displays the minimum and maximum temperatures of the interior via this function. The recording of these temperatures starts automatically after the appliance is switched on; they are recorded at one minute intervals. A note indicating that the data memory is full is displayed after 999 hours (approx. 40 days). The temperature recording should then be reset.

Note

The temperature recording should be reset once **after reaching the set temperature** when the appliance is commissioned. (see Resetting temperature recording) This ensures that the value for the maximum temperature is a meaningful value.

Displaying temperature recording

The temperature recording displays the length of the recording and the minimum and maximum temperatures measured during this period of time.



Fig. 96



Fig. 97

Status screen with the temperature recordings is displayed.

Resetting temperature recording

The displayed minimum and maximum temperatures can be reset at any time. This deletes the displayed values and the recording interval starts again.



Fig. 98

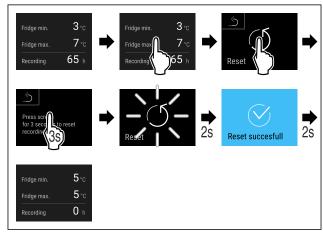


Fig. 99

- ► Carry out action steps according to the illustration.
- ▷ Temperature recording is reset.



The appliance is fitted with interior lighting.

You can keep the interior lighting on continuously. (see Switching on lighting*) *

When you open the appliance door, the interior lighting switches on.

You can deactivate this function. (see Switching off the lighting when opening the door*) *

Switching on lighting*



Fig. 100

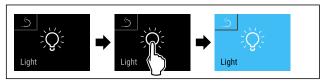



Fig. 101

► Carry out action steps according to the illustration.
□ Lighting is switched on.

Switching off lighting*



Fig. 102

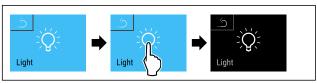

Fia. 103

- ► Carry out action steps according to the illustration.

 □ Lighting is switched off.
- Switching off the lighting when opening the door*



Fig. 104

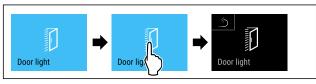


Fig. 105

- ► Carry out action steps according to the illustration.

 ☐ The lighting is switched off when the door is opened.
- Switching on the lighting when opening the door*



Fig. 106

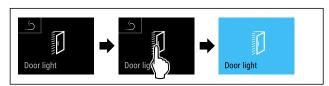


Fig. 107

- ► Carry out action steps according to the illustration.
- > The lighting is switched on when the door is opened.

Light

6.2.6 Presentation light

This setting allows the presentation light to be adjusted incrementally.

The following brightness values can be set:

- Off
- 20%
- 40%
- 60%
- 80%
- 100% (default)

Adjusting the presentation light

The following steps describe how to reduce the brightness of the presentation light, e.g. from 100 % to 40 %.



Fig. 108

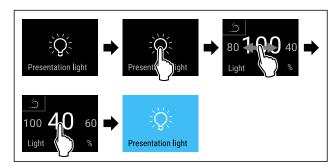


Fig. 109

- ► Carry out action steps according to the illustration.
- > The brightness of the presentation light changes accordingly.

6.2.7 SuperCool **

You can use this function to activate or deactivate Super-Cool. If SuperCool is activated, then the appliance increases the cooling capacity. It allows you to achieve lower cooling temperatures. You can activate SuperCool when you would like to cool a large quantity of food quickly.

The temperature in the VarioTempZone remains as preset. The active SuperCool function has no effect on the VarioTempZone.

If the function is active, the appliance operates at higher power. As a result, the appliance's operating noise may be temporarily louder and energy consumption will increase.

Controls

Activating SuperCool



Fig. 110

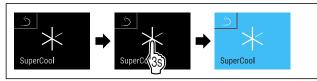


Fig. 111

- ► Carry out action steps according to the illustration.
- SuperCool is activated.
- > Status display shows SuperCool symbol.

Deactivating SuperCool

SuperCool is automatically deactivated after 6 to 12 hours depending on the quantity of the food inserted. However, you can also deactivate SuperCool manually at any time:



Fig. 112

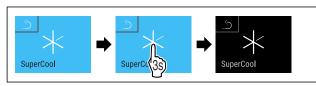


Fig. 113

- ► Carry out action steps according to the illustration.
- SuperCool is deactivated.
- > The appliance cools to the temperature set previously.



6.2.8 HumiditySelect

The humidity in the appliance can be adjusted depending on which food is being stored.

Application:

- High humidity is suitable for storing loose salad, vegetables, fruit with a high moisture content.
- Low humidity is suitable for storing dry or packaged food (e.g. dairy produce, meat, sausages, fish). A relatively dry storage climate is set here.

The following levels can be set:

- Standard (Low)
- Medium
- High

Increasing the humidity in the appliance



Fig. 114

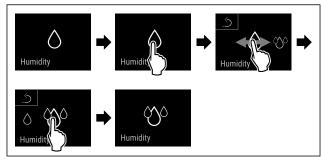


Fig. 115

- ► Carry out action steps according to the illustration.
- > Humidity in the appliance increases.

Setting the humidity in the appliance to standard



Fig. 116

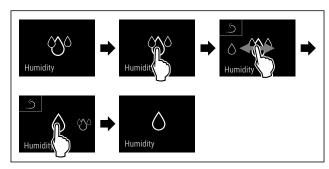


Fig. 117

- ► Carry out action steps according to the illustration.

6.2.9 Display lock Osolay lock

This setting avoids accidental operation of the appliance.

Application:

- Prevent settings and functions being changed unintentionally.
- Prevent the appliance being switched off unintentionally.
- Prevent temperature being set unintentionally.

Activating display lock



Fig. 118

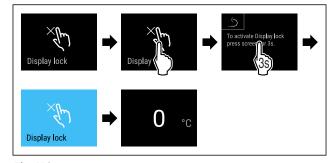


Fig. 119

- ► Carry out action steps according to the illustration.
- ➤ The display lock is activated.

▷ The status display appears.

Deactivating display lock

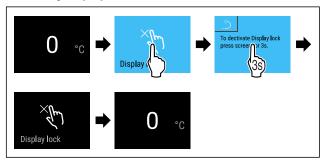


Fig. 120

- ► Carry out action steps according to the illustration.
- > The display lock is deactivated.
- ▷ The status display appears.

6.2.10 Access codes

Various settings are possible.

Application:

- Changing the display lock code. *
- Resetting the display lock code. *



6.2.11 Maintenance interval reminder

Setting for the time interval after which a maintenance reminder is issued.

The following values can be set:


- 7 days
- 14 days
- 30 days
- 60 days
- 90 days
- 180 days
- 360 days
- 720 days
- 1080 days
- Off

Setting maintenance interval reminder

The following steps describe how the maintenance interval is set.



Fig. 121

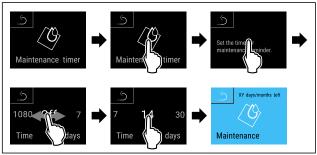

Fia 122

Carry out action steps according to the illustration.

- > The time interval, after which the maintenance reminder is issued, is set.
- ▷ The remaining time is displayed.

Language Language

6.2.12 Language

This setting allows the display language to be set.

Setting language



Fig. 123

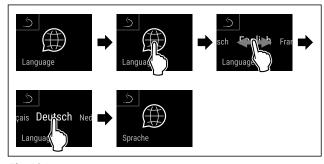


Fig. 124

- ► Carry out action steps according to the illustration.
- ➤ The selected language is set.

6.2.13 Temperature unit

Use this function to set the temperature unit. You can set degrees Celsius or degrees Fahrenheit as the temperature unit.

Setting the temperature unit



Fig. 125

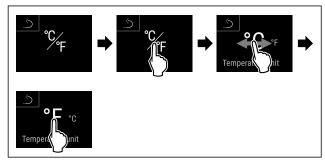


Fig. 126 Example illustration: Switch from degrees Celsius to degrees Fahrenheit.

- ► Carry out action steps according to the illustration.
- The temperature unit is set.

ection WIFE

6.2.14 WiFi connection

Note

Liebherr SmartMonitoring Dashboard is not available in all countries. Check availability via the QR code by entering your model.

Controls

Note

Use of the Liebherr SmartMonitoring Dashboard at https://smartmonitoring.liebherr.com requires installation of a SmartModule and a commercial MyLiebherr account. When commissioning online you can register using the login data you have, or register again and create a company account.

This setting establishes a wireless connection between the appliance and the internet. The connection is controlled via the SmartModule. The appliance can be integrated via the browser-based Liebherr SmartMonitoring Dashboard and advanced options as well as customised methods relating to control, administration and monitoring can be used.

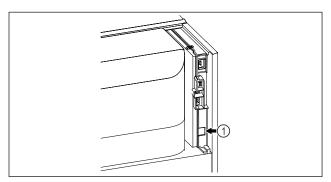


Fig. 127

Make sure that the following requirements are fulfilled:

☐ SmartModule Fig. 127 (1) is in use.

Establishing connection

You commission and set up your SmartModule online via the Liebherr SmartMonitoring Dashboard on your web-enabled device.



Fig. 128

► Open Liebherr SmartMonitoring Dashboard. (see Fig. 128) On the refrigerator or freezer:



Fig. 129



Fig. 130

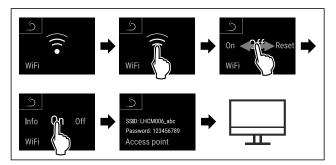


Fig. 131

- ► Carry out action steps according to the illustration.
- ► Continue the set-up procedure on your web-enabled device: Liebherr SmartMonitoring Dashboard

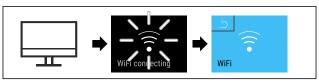


Fig. 132

- ► Carry out action steps according to the illustration.
- Connection is established: WiFi connecting appears. The symbol flashes.
- ► Follow the Liebherr SmartMonitoring Dashboard instructions.
- Connection is established.

Disconnecting



Fig. 133



Fig. 134

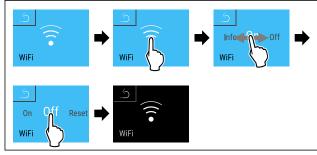


Fig. 135

- ► Carry out action steps according to the illustration.
- There is no connection.

Resetting connection



Fig. 136



Fig. 137

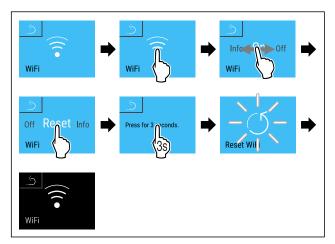


Fig. 138

- ► Carry out action steps according to the illustration.
- The WiFi settings are restored to the factory settings.



Note

Liebherr SmartMonitoring Dashboard is not available in all countries. Check availability via the QR code by entering your model.

Note

Use of the Liebherr SmartMonitoring Dashboard at https://smartmonitoring.liebherr.com requires installation of a SmartModule and a commercial MyLiebherr account. When commissioning online you can register using the login data you have, or register again and create a company account.

This setting establishes a wired connection between the appliance and the internet. The connection is controlled via the SmartModule. The appliance can be integrated via the browser-based Liebherr SmartMonitoring Dashboard and advanced options as well as customised methods relating to control, administration and monitoring can be used.

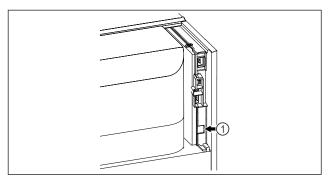


Fig. 139

Make sure that the following requirements are fulfilled:

- ☐ SmartModule Fig. 139 (1) is in use.
- ☐ A network cable is connected.
- ☐ The network is connected to the internet.

Establishing connection

You commission and set up your SmartModule online via the Liebherr SmartMonitoring Dashboard on your web-enabled device.



Fig. 140

► Open Liebherr SmartMonitoring Dashboard. (see Fig. 140) On the refrigerator or freezer:



Fig. 141

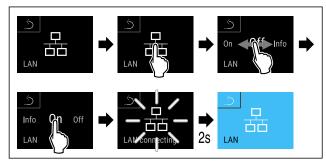


Fig. 142

- ► Carry out action steps according to the illustration.
- Connection is established: LAN connecting appears. The symbol flashes.
- ► Follow the Liebherr SmartMonitoring Dashboard instructions.
- Connection is established.

Disconnecting



Fig. 143

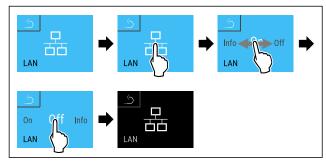


Fig. 144

- ► Carry out action steps according to the illustration.
- There is no connection.



6.2.16 Device information

Use this function to indicate the model name, index, serial number and service number of your device. You will need the device information when you contact customer service. (see 9.3 Customer Service)

This function also opens the Advanced menu. (see 3 Functionality of the Touch & Swipe display)

Indicating the device information



Fig. 145



Fig. 146

- ► Carry out action steps according to the illustration.
- Display indicates device information.

6.2.17 Operating hours

The display shows the appliance operating hours.

Displaying operating hours



Fig. 147

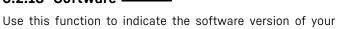


Fig. 148

device.

> The operating hours appear.

6.2.18 Software



Indicating the software version



Fig. 149



Fig. 150

- ► Carry out action steps according to the illustration.
- Display indicates software version.

6.2.19 Defrosting



The appliance defrosts automatically in normal mode.

Application:

- If there is excessive ice in the interior, the defrosting function can be started manually.

Manually starting automatic defrosting



Fig. 151

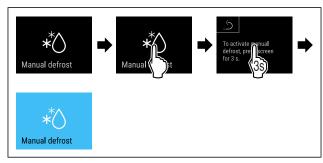


Fig. 152

- ► Carry out action steps according to the illustration.
- Automatic defrosting has been started. The appliance automatically switches back to normal mode once defrosting has finished.

Note

If there is still ice in the interior after starting automatic defrosting several times, defrost the appliance manually. (see 8.1 Defrosting appliance)

Cancelling manually started defrosting

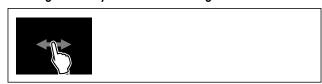


Fig. 153

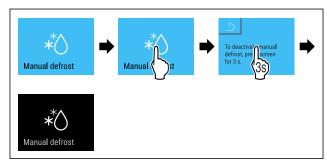


Fig. 154

- ► Carry out action steps according to the illustration.
- Manually started defrosting is cancelled. The appliance automatically switches back to normal mode.

6.2.20 Door alarm



Use this function to activate or deactivate the door alarm. The door alarm sounds if the door is open for too long. The door alarm is activated on delivery. You can set how long the door may be open before the door alarm sounds.

The following values can be set:

- 15 seconds
- 30 seconds
- 60 seconds
- 90 seconds
- 120 seconds

- 150 seconds
- 180 seconds
- Off

Setting the door alarm



Fig. 155

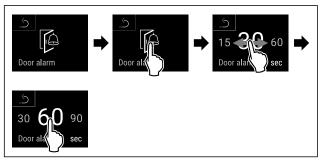


Fig. 157 Example illustration: Switch door alarm from 30 seconds to 60 seconds.

- ► Carry out action steps according to the illustration.
- > The door alarm is set.

Deactivating the door alarm



Fig. 158


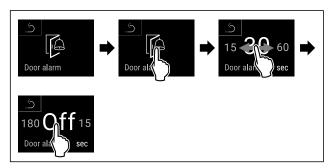


Fig. 159

- ► Carry out action steps according to the illustration.
- > The door alarm is deactivated.

6.2.21 Light alarm

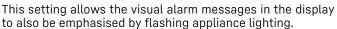

(Q))

Activating light alarm



Fig. 160



Fig. 161

- ► Carry out action steps according to the illustration.
- The light alarm is activated.

Deactivating light alarm



Fig. 162

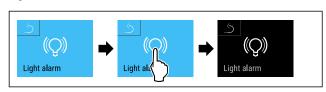


Fig. 163

- ► Carry out action steps according to the illustration.
- > The light alarm is activated.

© Demo Mode

6.2.22 Demo mode

Demo mode is a special feature for dealers who want to demonstrate appliance features. If you activate demo mode, all refrigeration functions are deactivated.

If you switch on your appliance and a "D" appears on the status display, demo mode is already activated.

If you activate and then deactivate demo mode, the appliance will be reset to factory defaults. (see 6.2.23 Resetting to factory settings)

Activating demo mode



Fig. 164

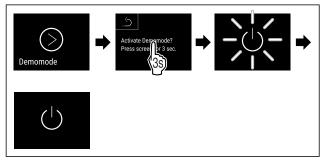


Fig. 165

- ► Carry out action steps according to the illustration.
- Demo mode is activated.
- \triangleright Appliance is switched off.
- Switch on the appliance. (see 4.14 Switching on appliance (first use))
- hildraph "D" appears in the status display.

Deactivating demo mode



Fig. 166

Controls

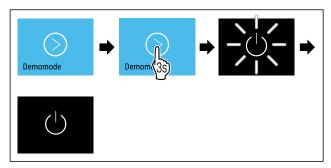


Fig. 167

- ► Carry out action steps according to the illustration.
- Demo mode is deactivated.
- ▷ Appliance is switched off.
- Switch on the appliance. (see 4.14 Switching on appliance (first use))
- ▶ Appliance is reset to factory settings.



6.2.23 Resetting to factory settings

Use this function to reset all settings to factory defaults. All settings you have made so far are reset to their original settings.

Performing a reset



Fig. 168

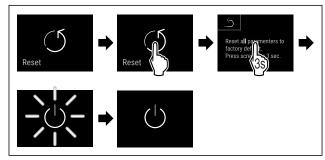


Fig. 169

- ► Carry out action steps according to the illustration.
- Device is reset.
- Device is switched off.
- ► Restart the device. (see 4.14 Switching on appliance (first use))

6.3 Message

6.3.1 Warnings

Warnings are issued by means of an acoustic signal and visually via a symbol on the display. The signal gets louder until the warning is acknowledged.

Message (red)	Cause	Remedy
	This message appears if the door is open	Close the door.
	for too long.	Tap briefly.
Close the door		Alarm is stopped.
_		Note
Door open		The time until the message appears can be set. (see 6.2.20 Door alarm)
	This message appears if the temperature	Tap briefly.
<u>A</u>	does not match the set temperature. Reasons for differences in temperature can be:	
Temperature alarm		Tap briefly.
Temperature alarm	inside.	Warmest/coldest temperature, date and time are displayed.
	Too much warm air has got in while you were sorting out the freezer or removing	
	items.	The status screen is displayed.
	The power was cut off for a prolonged period.	The current temperature and the alarm symbol flash red until the set temperature is reached.
		Check the quality of the refrigerated goods.

Message (red)	Cause	Remedy
Device failure Error	The appliance is faulty, there is an appliance error or a component of the appliance has a fault.	Store the cooled produce elsewhere. Tap briefly. The error code (e.g. BT021) is displayed. Tap briefly. A further error code is displayed if there is one
		Status screen is displayed with flashing error symbol. Swiping or tapping the display will show the error code(s) again. Make a note of error code(s) and contact Customer Service. (see 9.3 Customer Service)
Power failure	The message appears following an interruption to the electricity supply.	Tap briefly. Battery's state of charge, information about errors and appliance status are displayed Tap briefly.
Power cut		The warmest temperature and the period of power interruptions are displayed. Tap briefly. The status screen is displayed. The current temperature and the alarm symbol flash red until the set temperature is reached. Check the quality of the refrigerated goods.
WiFi error WiFi error	Wi-Fi connection is interrupted.	Check connection. Press briefly. Alarm is stopped.
WWW error WWW error, WiFi	This message appears if there is no internet connection via WiFi.	Check connection. Press briefly. Alarm is stopped.
LAN error	LAN connection is interrupted.	Check connection and network cable. Press briefly. Alarm is stopped.
www error WWW error, LAN	This message appears if there is no internet connection via LAN.	Check connection. Press briefly. Alarm is stopped.

6.3.2 Reminders

Reminders appear when you are being asked to do something. The are issued by means of an acoustic signal and visually via a symbol on the display. Acknowledge the message by pressing the confirmation button.

Features

Message (yellow)	Cause	Remedy		
	The message appears when the timer for the set maintenance interval has expired.	Press briefly.		
\(\sigma\)		Reminder is closed.		
Maintenance		Note		
Maintenance reminder		The maintenance interval can be set (see 6.2.11 Maintenance interval reminder).		
Omov	The message appears when the tempera-	Press briefly.		
∭ max min	ture recording memory (999 hours) is full.	Reminder is closed.		
Min./max. memory Recording reminder		The oldest data is overwritten.		
		Note		
		The temperature recording can be reset. (see 6.2.4 Temperature recording)		

7 Features

7.1 Safety lock

The lock in the appliance door is equipped with a safety mechanism.

7.1.1 Locking appliance



Fig. 170 Example illustration

- Insert key.
- ► Turn key anticlockwise by 90°.
- > The appliance is locked.

7.1.2 Unlocking appliance



Fig. 171 Example illustration

- ► Insert key *Fig. 171 (1)*.
- ► Turn key clockwise by 90° Fig. 171 (2).
- \triangleright The appliance is unlocked.

8 Maintenance

8.1 Defrosting appliance



WARNING

Improper defrosting of the appliance! Injuries and damage.

- ▶ Do not use mechanical equipment or other methods to speed up the defrosting process other than those recommended by the manufacturer.
- ▶ Do not use electrical heating or steam-cleaning appliances, naked flames or defroster sprays to defrost.
- ▶ Do not use sharp objects to remove ice.

Defrosting is performed automatically. The defrost water drains through the opening and evaporates.

To maintain the functionality of the appliance, we recommend defrosting it when there is a high buildup of ice. Icing in the interior is determined by the location (e.g. high humidity), settings on the appliance and incorrect user behaviour.

If the automatic defrosting cycle is insufficient:

► Start automatic defrosting manually. (see 6.2.19 Defrosting)

If the problem persists, defrost the appliance manually:

- Switch off appliance. (see 6.2.2 Switching appliance on and off)
- Pull out mains plug.
- ► Store refrigerated items elsewhere.
- ► Leave appliance door open during defrosting process.
- ► Soak up remaining defrost water with a cloth, clean drain opening and the appliance.

8.2 Cleaning the appliance

8.2.1 Preparing



WARNING

Short-circuit hazard due to live parts! Electric shock or damage to the electronics.

- ► Switch off the appliance.
- ▶ Pull out mains plug or switch off fuse.



WARNING

Risk of fire

- Do not damage the refrigeration circuit.
- ► Empty the appliance.
- Pull out the mains plug.
- ► Observe the notes on transporting the appliance. (see 4.3 Transporting appliance)

8.2.2 Cleaning housing

NOTICE

Improper cleaning!

Damage to the appliance.

- Only use soft cleaning cloths and ph-neutral all-purpose cleaners.
- Do not uses abrasive sponges or steel wool which may cause scratches.
- Do not use any sharp or abrasive cleaning agents, nor any that contain sand, chloride or acid.



WARNING

Risk of injury and damage as a result of hot steam! Hot steam can lead to burns and can damage the surfaces.

► Do not use any steam cleaners!

NOTICE

Risk of damage due to short circuit.

- ▶ When cleaning the appliance, make sure no water gets into the electrical components.
- ► Wipe the housing down with soft, clean cloth. If very dirty, use lukewarm water with a neutral cleaner. Glass surfaces can also be cleaned with glass cleaner.
- ► Clean condenser coil each year. If the condenser coil is not cleaned, this significantly reduces the efficiency of the appliance.

8.2.3 Cleaning the dust filter

The dust filter is located on the top of the appliance. Clean the dust filter at least twice a year.

Remove mains plug.

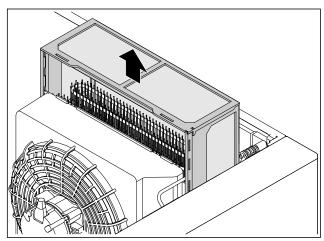


Fig. 172

- ▶ Pull the dust filter out upwards.
- ► Clean the dust filter with water and rinsing liquid.
- ► Insert the dust filter.

8.2.4 Cleaning interior



WARNING

Short-circuit hazard due to live parts! Electric shock or damage to the electronics.

- ► Switch off the appliance.
- ▶ Pull out mains plug or switch off fuse.



WARNING

Risk of injury and damage as a result of hot steam! Hot steam can lead to burns and can damage the surfaces.

► Do not use any steam cleaners!

NOTICE

Improper cleaning!

Damage to the appliance.

- Only use soft cleaning cloths and ph-neutral all-purpose cleaners.
- Do not uses abrasive sponges or steel wool which may cause scratches.
- Do not use any sharp or abrasive cleaning agents, nor any that contain sand, chloride or acid.

Note

▶ Defrost water drain (see 1.2 Overview of appliances and equipment): Remove deposits using a thin material (for example a cotton bud).

Note

Do not damage or remove the type plate on the inside of the appliance. The type plate is important for Customer Service. (see 9.3 Customer Service)

- ▶ Open the door.
- ► Empty the appliance.
- ► Clean interior and equipment parts with lukewarm water and a little detergent. Do not use any gritty or acidic cleaning agent or any chemical solvent.

8.2.5 After cleaning

- ► Wipe appliance and equipment parts dry.
- ► Connect and switch on appliance.

Once the temperature is sufficiently cold:

- ▶ put in items for refrigeration goods.
- ► Repeat cleaning regularly.
- ▶ Clean and remove dust from the refrigeration unit with heat exchanger once a year.

9 Customer help

9.1 Technical specifications

Temperature range			
Cooling	Foamed door:*		
	-2 °C to +15 °C		
	Glass door:*		
	+1 °C to +15 °C		
	-5 °C to +14 °C		
	-9 °C to -26 °C		
	-9 °C to -35 °C		

Maximum shelves ^{A)}	load	of	grid	Maximum grid shelf equipment	A) (see	
60 kg				10 kg		

A) Heavier loads may result in a slight bending of the shelves.

Net capacity

See net capacity on the type plate. (see 1.2 Overview of appliances and equipment)

Lighting	
Energy efficiency class ^{A)}	Light source
This product contains one or more energy efficiency class G light sources	LED

A) The appliance may contain light sources with different energy efficiency classes. The lowest energy efficiency class is indicated.

WLAN frequency specification		
Frequency band	2.4 GHz	
Maximum radiated power	<100 mW	

Customer help

WLAN frequency specification				
Purpose of the w equipment		Integration in the local WiFi network for data communication		

9.2 Technical fault

Your appliance is designed and built to ensure it works reliably and has a long service life. In the unlikely event that

a fault occurs during operation, please check whether the fault is due to an operating error. If this is the case, you will be charged for the cost incurred even if this falls within the warranty period.

You can fix the following faults yourself.

9.2.1 Appliance function

Defect	Cause	Remedy
The appliance is	→ The appliance is not switched on.	► Switch on the appliance.
not working.	→ The mains plug is not properly plugged into the socket.	► Check the mains plug.
	→ There is something wrong with the fuse in the socket.	► Check fuse.
	→ Power cut	 Keep the appliance closed. Protect food: Lay cold storage accumulator on top of the food or use another freezer if the power is off for a prolonged period.
	→ The IEC socket is not plugged into the appliance correctly.	► Check the IEC socket.
Temperature is not cold enough.	→ The appliance door is not closed properly.	Close appliance door.
	→ Ventilation is not sufficient.	► Clear ventilation grille and clean it.
	→ The ambient temperature is too high.	► Ensure the correct ambient conditions: (see 1.4 Range of use of appliance)
	→ The appliance was opened too many times or for too long.	► Wait to see if the appliance goes back to the required temperature by itself. If not, contact Customer Service. (see 9.3 Customer Service)
	→ The temperature is set incorrectly.	▶ Set a colder temperature and check after 24 hours.
	→ The appliance is too close to a heat source (oven, radiator, etc).	► Change where the appliance or the heat source are located.

9.3 Customer Service

First check whether you can remedy the fault yourself. If this is not the case, please contact Customer Service.

You can find the address in the enclosed brochure "Liebherr-Service" or at home.liebherr.com/service.



WARNING

Unprofessional repair! Injuries.

- ► Have any repairs and action not expressly specified on the appliance and mains cable carried out by service personnel only. (see 8 Maintenance)
- ► A damaged mains cable may only be replaced by the manufacturer, the manufacturer's Customer Service or a similarly qualified person.
- ► In the case of appliances with an IEC connector, the change may be made by the customer.

9.3.1 Contacting Customer Service

Make sure you have the following appliance data at the ready:

■ Appliance name (model and index)

- ☐ Service no. (Service)
- Serial no. (S no.)
- ► Access the appliance information via the display (see 6.2.16 Device information).

-or-

- ► Refer to the type plate for appliance information. (see 9.4 Type plate)
- ► Note down appliance information.
- ▶ Inform Customer Service: Report faults and the appliance information.
- > This will help us to provide a fast and focussed service.
- ► Follow any further instructions provided by Customer Service.

9.4 Type plate

The type plate is inside the appliance. See appliance overview.

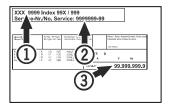


Fig. 173

(1) Appliance designation

(2) Service No.

For Germany:

You can dispose of the appliance free of charge via the class 1 collection containers at the local recycling and recyclable material collection centres. When purchasing a new fridge/freezer, if the sales area > 400 m², retailers will also take back the old appliance free of charge.

10 Shutting down

- ► Empty the appliance.
- ► Switch off the appliance.
- ▶ Pull the mains plug out of the socket.
- ▶ Remove the IEC socket if required: Pull the IEC socket out of the appliance plug and move it to the left and right at the same time.

(3) Serial No.

- ► Clean appliance (see 8.2 Cleaning the appliance).
- ▶ If present: Remove the covers and insulation from the sensor feed-through to prevent mould forming.
- ▶ Leave the door open so that no bad odours form.

Note

Damage to the appliance and malfunctions!

► After shutting down, only store the appliance at the permitted room temperature of between -10 °C and +50 °C.

11 Disposal

11.1 Preparing appliance for disposal



Li-ion

Liebherr uses batteries in some of its appliances. In the EU, for environmental reasons, legislation obliges the end user to remove these batteries before disposing of old appliances. If your appliance contains batteries, a corresponding notice is attached.

Lamps If you can remove the lamps yourself without destroying them, also remove these before disposal.

- ► Take the appliance out of operation.
- ► If possible: remove lamps without destroying them.

11.2 Disposing of the appliance in an environmentally friendly manner



The appliance still contains valuable materials and must be disposed of separately from unsorted municipal waste.





Dispose of batteries separately from the old appliance. To do this, you can return the batteries free of charge to retailers as well as recycling centres and collection centres for recyclable materials.

Lamps

Dispose of removed lamps via the respective collection systems.

<u>^!\</u>

WARNING

Leaking coolant and oil!

Fire. The coolant contained in the appliance is eco-friendly, but also flammable. The oil contained in the appliance is flammable. Escaping coolant and oil can ignite if the concentration is high enough and in contact with an external heat source.

- Do not damage the pipelines of the coolant circuit and the compressor.
- ▶ Observe the notes on transporting the appliance. (see 4.3 Transporting appliance)
- ▶ Transport the appliance without damaging it.
- Dispose of batteries, lamps and the appliance according to the above specifications.

12 Additional information

Further information on warranty conditions can be found in the enclosed service brochure or on the Internet at https:// home.liebherr.com.



home.liebherr.com/fridge-manuals

